

# **Atlas Copco** Portable Air Compressor

XAS 96 JD

## **Parts list**

1310 3011 09 Ed. 1 1999-02

**“Copyright 1999, Atlas Copco Compressors, Inc. Holyoke, Massachusetts  
Any unauthorized use or copying of the contents or any part of this book is prohibited.  
This applies in particular to trademarks, model denominations, part numbers and  
drawings.”**

No. 1310 3011 09 Ed. 1  
1999-02

**Atlas Copco**

## OWNERSHIP DATA

Unit model: \_\_\_\_\_ Owner's machine no.: \_\_\_\_\_  
Engine type: \_\_\_\_\_ Unit service no.: \_\_\_\_\_  
Delivery date: \_\_\_\_\_ Engine serial no.: \_\_\_\_\_  
Service plan: \_\_\_\_\_ First start-up date: \_\_\_\_\_

### Selected Lubricants

Compressor: \_\_\_\_\_ Capacity: \_\_\_\_\_  
Bearing grease type: \_\_\_\_\_

### Printed Matter Nos.

Atlas Copco instruction book: \_\_\_\_\_ Atlas Copco logbook: \_\_\_\_\_  
Atlas Copco parts list: \_\_\_\_\_ Engine parts list: \_\_\_\_\_

### Local Atlas Copco Representative

Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
Telephone: \_\_\_\_\_ Contact persons: \_\_\_\_\_ Service: \_\_\_\_\_  
Telefax: \_\_\_\_\_ Parts: \_\_\_\_\_

### Example parts list

<u>Ref.</u>	<u>Part number</u>	<u>Qty</u>	<u>Name</u>	<u>Remarks</u>
1	1310 0326 91	2	Hinge	
2	1310 0326 79	2	Fender Asy	
•3	1310 0332 64	158	Screw - Round Head	

### Explanation of columns:

**Ref.** - Reference number. Relates a part in list and drawing. "x" means that the part is not shown on the drawing. "-" indicates the beginning of a new list item. A "•" before the reference number indicates that the subject item is one of a group of parts. In the example above, the screw would be part of the fender assembly.

**Part number.** "---" directs to consult another list of which the heading mostly has the same designation. "\*\*\*\*" means that the part is not available as spare part. Parts followed by one dot are comprised in the assembly(ies) listed above the first dot.

**Qty** - A number indicating the quantity of parts. The quantity is only related to its corresponding reference number ("Ref") and may differ from the total quantity of this part for the entire unit. For parts of an assembly the quantity mentioned is for one assembly. "AR" means "as required" : bulk material or quantity to be determined.

**Name** - Mostly part names. When machine types, Classification Societies, dimensions, etc. are mentioned under the same "Designation", look carefully for the part number for your specific equipment. When a selection is to be made, the various selections are indented and preceded by a dash.

**Remarks** - A number followed by a bracket, e.g. 1), refers to a footnote.


A number in bold, e.g. 1, refers to a "Service Kit". For the "Service Kit" number, see below list. Parts of one "Service Kit" may be spread over several pages.

### ORDERING PARTS


Always quote the part number, "Designation" and quantity of the desired parts as well as type designation and serial number of the unit.

# Table of Contents

1.	Compressor Drive Group.....	5
2.	Engine Mounts.....	7
3.	Air Intake And Exhaust Group.....	9
4.	Body.....	11
5.	Drawbar, Lifting Yoke, Axle Assy.....	13
6.	Control Panel.....	15
7.	Fuel System.....	17
8.	Unloader Valve.....	19
9.	Actuating Valve Assembly.....	21
10.	Air Receiver.....	23
11.	Air Outlet.....	24
12.	Oil System & Coolers.....	25
13.	Body Mounts.....	26
14.	Electrical System.....	27
15.	Regulating System.....	29
16.	Decal Location.....	30
17.	Element Mounting Service Kit.....	31
18.	Air Receiver Service Kit.....	32
19.	Speed Regulator Service Kit.....	33
20.	Unloader Valve Service Kit.....	35
21.	Oil Pressure Gauge.....	36
22.	Separator Service Indicator Kit.....	37
23.	Ammeter.....	38
24.	Voit Meter.....	39
25.	Hose Reel Assembly.....	41
26.	Hose Reel Assembly W/Line Oilers.....	43
27.	Bumper.....	44
28.	Spark Arrestor.....	45
29.	Cold Start - Ether.....	46
30.	Mechanical Park Brake.....	47
31.	Road Lights.....	48
32.	Threaded Discharge.....	49
33.	250/750 Hour Filter Kit.....	50
34.	500 Hour Filter Kit.....	51
35.	1000 Hour Filter Kit.....	52

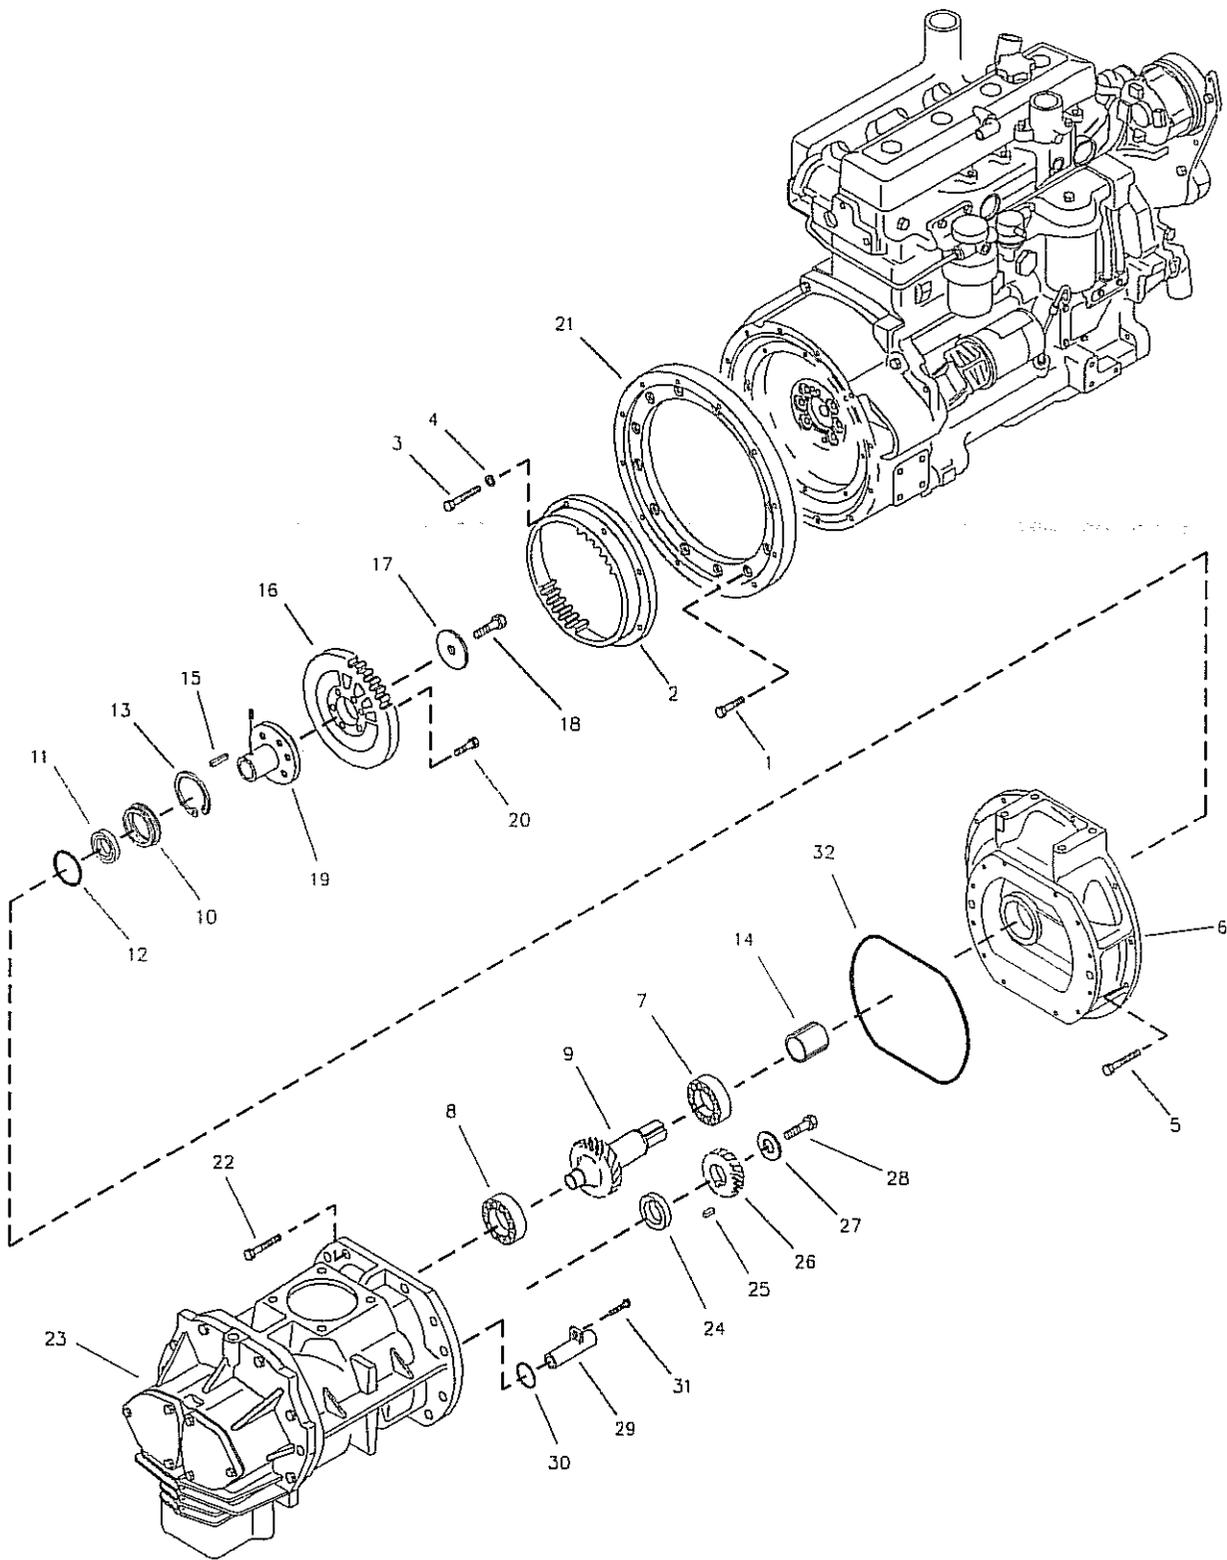




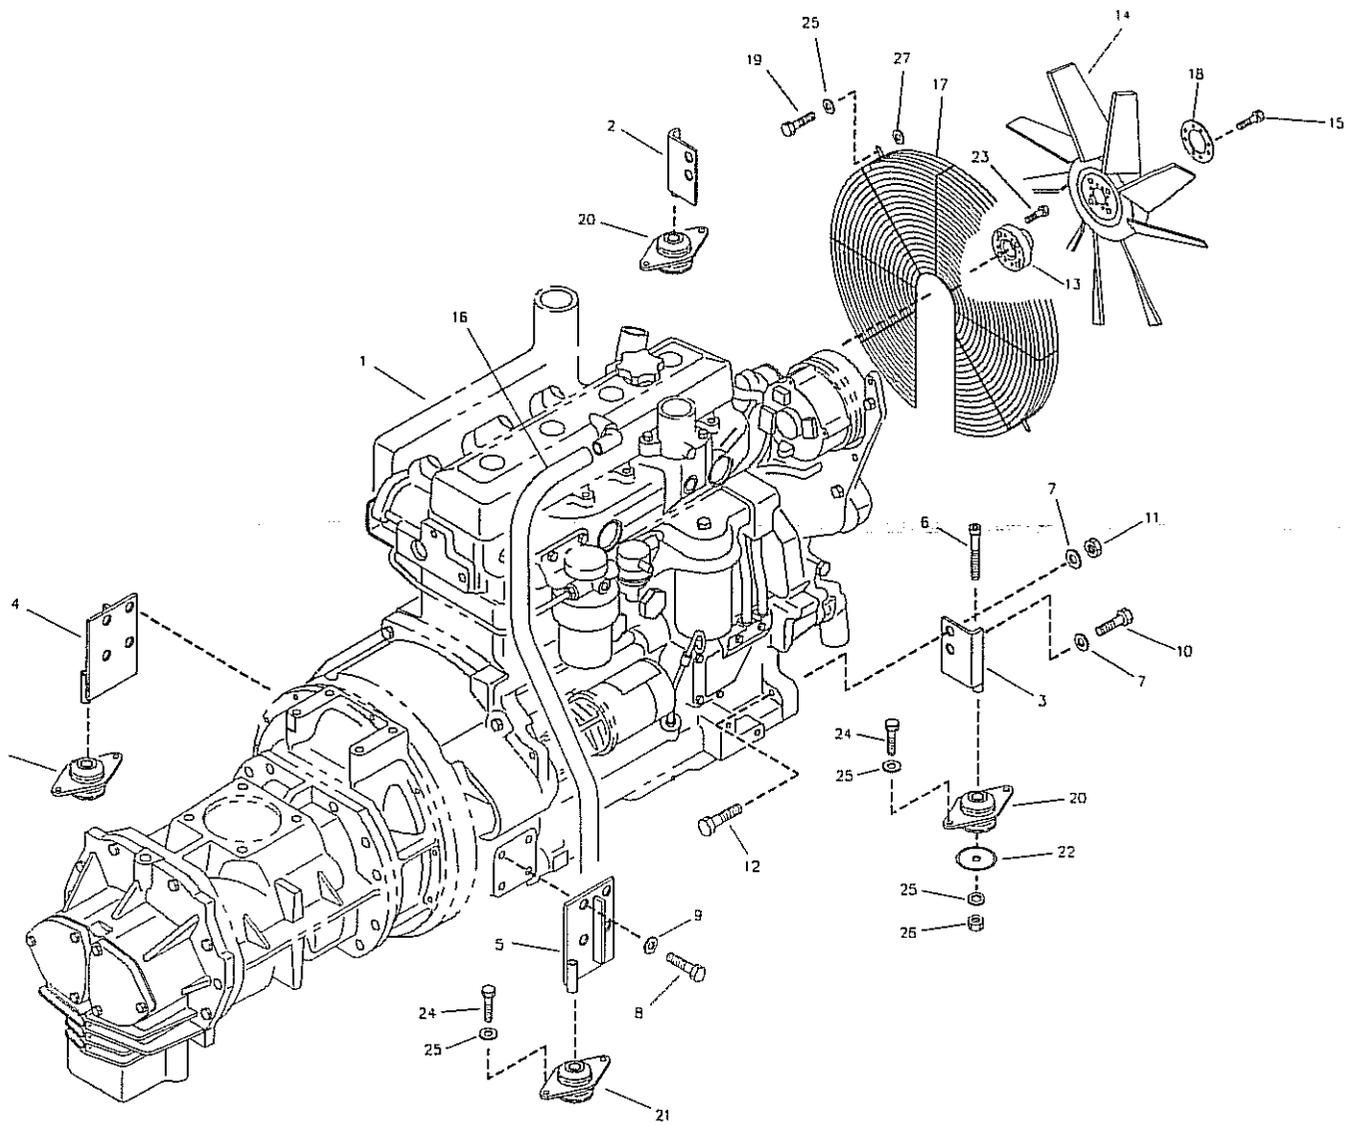

## 2. Engine Mounts

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0339 06	1	Engine-diesel	1	18	1615 7690 00	1	Clamping Ring	
2	1310 0339 36	1	Mount-engine		19	1310 0314 83	4	Screw	
3	1310 0339 37	1	Mount-engine		20	1202 9006 02	2	Vibration mount	
4	1310 0339 38	1	Mount-engine		21	1202 9006 03	2	Vibration mount	
5	1310 0339 39	1	Mount-engine		22	1202 8719 00	8	Disk	
6	1310 0346 57	4	Screw - 7/16 -14 X 5 IN. LG		23	0211 1325 03	4	Screw	
7	0333 2243 00	4	Washer-spring		24	0144 3287 03	8	Screw 3/8"	
8	0147 1400 03	8	Screw 5/8"		25	0301 2344 00	12	Washer-flat	
9	0333 2238 00	8	Washer-spring		26	1310 0346 58	4	Nut - Lock 7/16 -14	
10	0147 1476 03	2	Screw M16 x 35"		27	0302 1274 02	4	Flat Washer	
11	0268 3210 00	2	Nut 5/8"						
12	0144 3450 03	2	Screw 5/8 x 2.25"		1	1310 0339 31		Engine Oil Filter	
13	1310 0342 82	1	Spacer-fan			1310 0331 39		Engine Fuel Filter Element	
14	1310 0342 81	1	Fan-engine						
15	0147 1249 03	8	Screw						
16	1310 0338 88	1	Tube						
17	1310 0342 83	1	Guard-fan						

1310 9042 39 Rev. 03

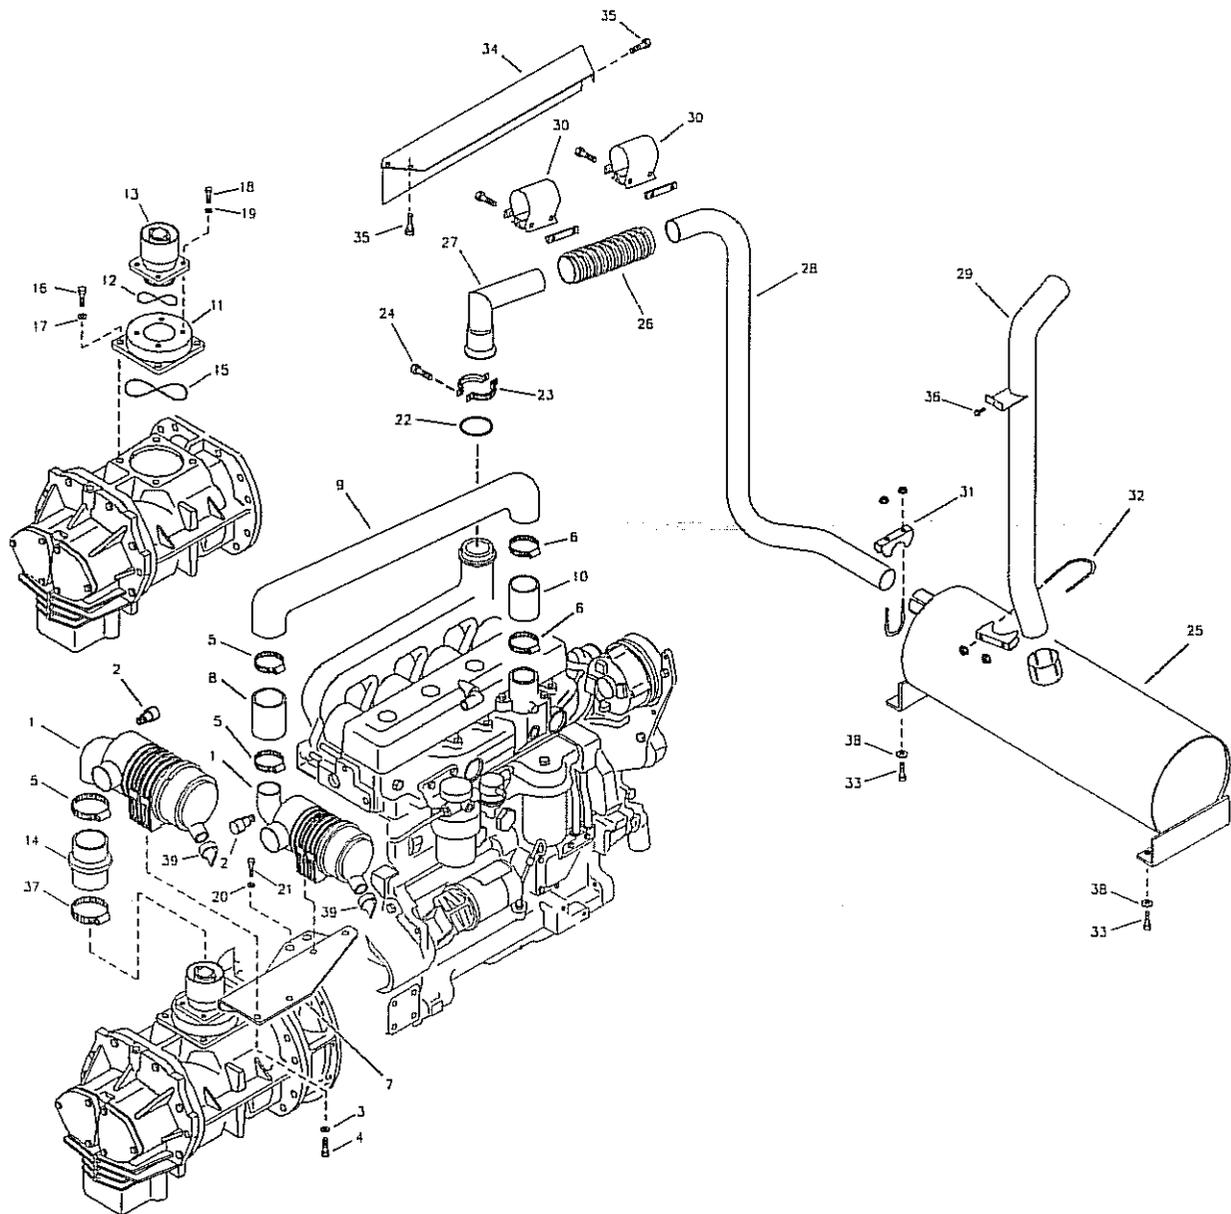


### 3. Air Intake And Exhaust Group

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0345 28	2	Filter-air	1,2	24	0144 3251 03	2	Screw	
2	1310 0348 91	2	Gauge		25	1310 0342 63	1	Muffler	
3	0301 2335 00	4	Washer-flat		26	1310 0339 54	1	Hose	
4	0147 1322 03	4	Screw		27	1310 0339 55	1	Pipe	
5	0347 6131 00	3	Clamp-hose		28	1310 0339 56	1	Pipe	
6	1310 0323 83	2	Clamp-hose		29	1310 0342 87	1	Pipe-exhaust	
7	1310 0345 27	1	Support		30	1310 0345 55	2	Clamp-exhaust	
8	1310 0345 23	1	Hose		31	1310 1477 00	1	Clamp-exhaust pipe	
9	1310 0345 11	1	Air Duct		32	1310 2007 29	1	Clamp-exhaust pipe	
10	1310 0345 21	1	Hose		33	0144 3246 03	4	Screw	
11	1310 0339 43	1	Flange		34	1310 0342 14	1	Shield	
12	0663 2106 16	1	O-ring		35	0144 3246 03	4	Screw	
13	1615 7667 82	1	Unloader		36	1310 0314 83	1	Screw-self tap	
14	1310 0341 73	1	Hose-hump		37	0347 6119 00	1	Clamp - Hose	
15	0663 7150 00	1	O-ring		38	0301 2335 00	4	Washer	
16	0147 1362 03	4	Screw		39	1310 0348 92	2	Dust Ejector Valve	
17	0301 2344 00	4	Washer-flat						
18	0147 1325 03	4	Screw		2	1310 0348 90		Element - Safety	
19	0301 2335 00	4	Washer-flat		1	1310 0348 89		Element - Air Filter	
20	0301 2358 00	2	Washer-flat						
21	0147 1400 03	2	Screw						
22	1310 0316 10	1	Gasket						
23	1310 0316 09	2	Clamp						


1310 9042 40 Rev. 02

SEE NOTE 1

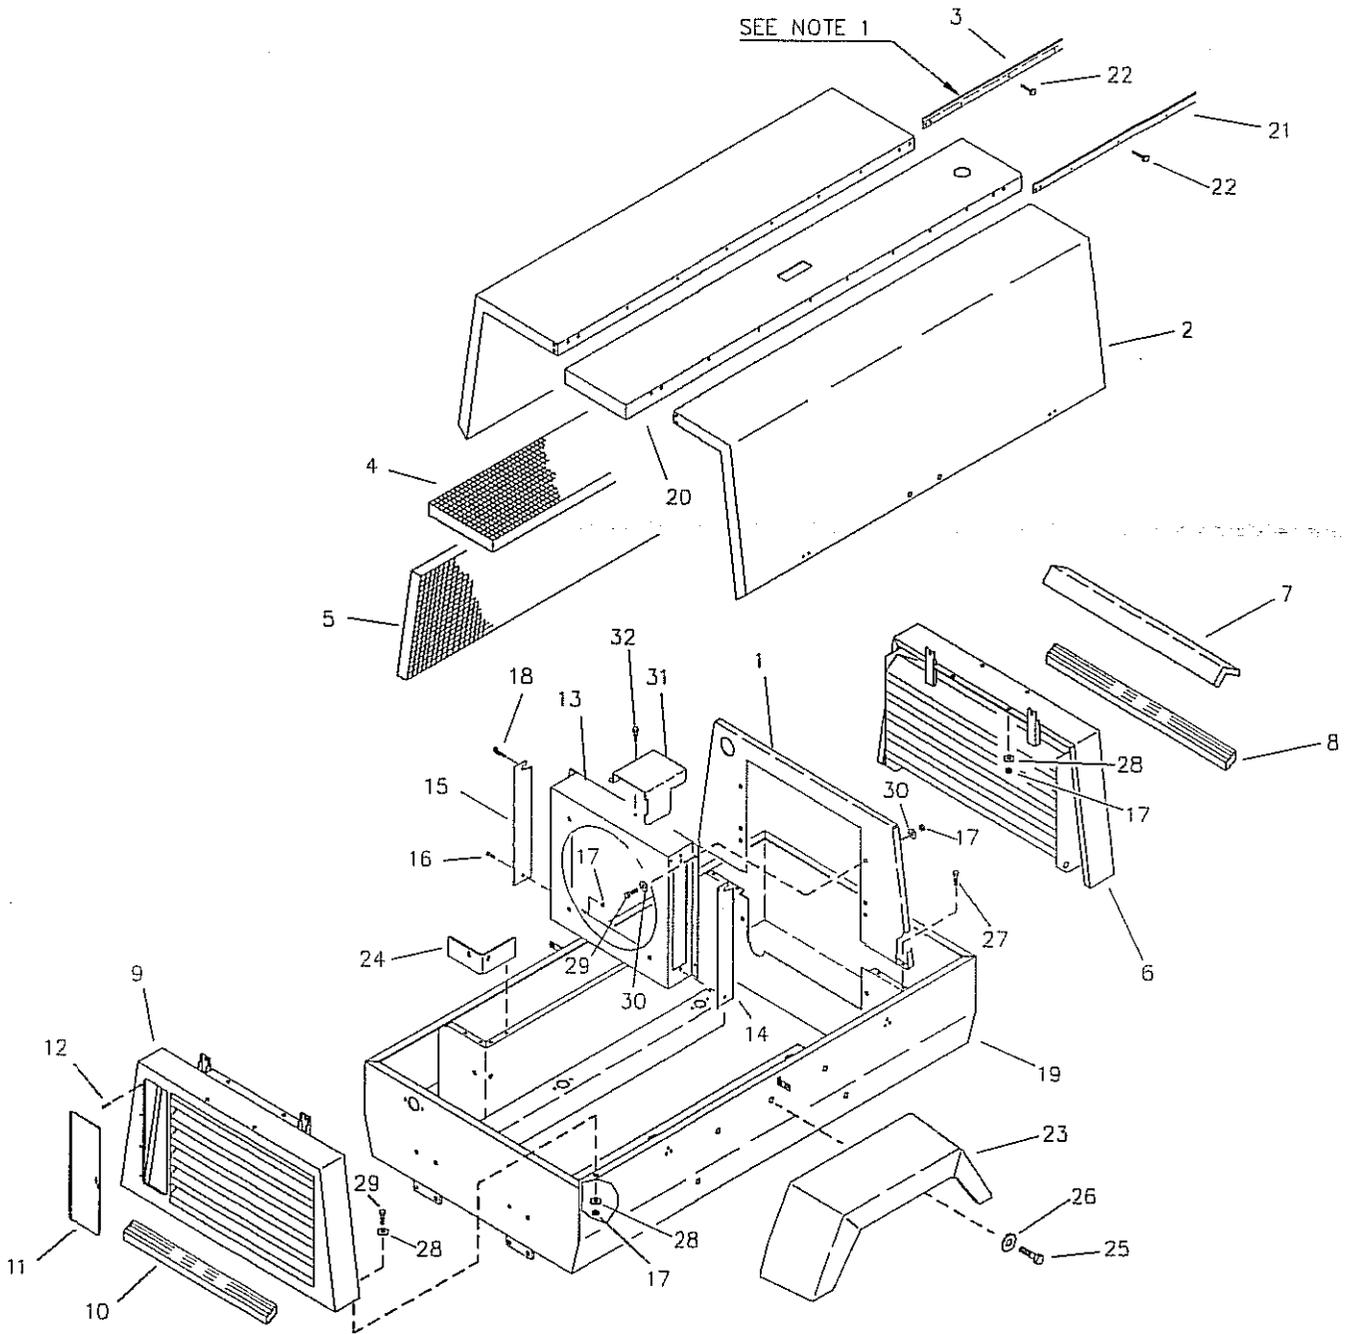

#### 4. Body


Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0339 68	1	Panel		19	1310 0339 74	1	Body / Frame Assembly	
•2	1310 0343 78	2	Door Assembly	1	•20	1310 0342 36	1	Roof Assembly	2
••	1310 0344 08	2	Door	1	••	1310 0344 13	1	Roof	2
••3	1310 0344 08	2	Profile - Door	2	••21	1310 0344 10	2	Profile - Roof	2
••4	1310 0340 77	2	Insulation - Upper Door		22	1310 0327 87	32	Rivet	
••5	1310 0340 78	2	Insulation - Lower Door		23	1310 0339 40	2	Fender	
•6	1310 0342 33	1	Rear Panel Assembly	2	24	1310 0339 72	1	Support - Air Receiver	
••	1310 0344 12	1	Rear Panel	2	25	1310 0314 83	10	Screw	
••7	1310 0342 96	5	Insulation - Rear Louvers		26	0300 8005 00	10	Washer	
••8	1310 0343 62	1	Insulation - Lower Louver		27	1310 0314 83	14	Screw	
•9	1310 0342 34	1	Front Panel Assembly	2	28	0300 8019 00	40	Washer	
••	1310 0344 11	1	Front Panel	2	29	0144 3246 03	16	Screw	
••10	1310 0340 79	6	Insulation - Front Louvers		30	0301 2335 00	16	Washer	
••11	1310 0344 14	1	Door - Control Panel	2	31	1310 0345 56	1	Guard - Alternator	
••12	1310 0327 87	4	Rivet		32	1310 0314 83	3	Screw	
•13	1310 0342 35	1	Fan Box Assembly						
••	1310 0342 85	1	Fan Box		1	Sealing Compound for profiles 1310 0342 27			
••14	1310 0340 71	1	Cooler Access Door		2	To order specify part number and color code found in unit data plate.			
••15	1310 0341 71	1	Cooler Access Door						
••16	0144 3248 03	2	Screw						
••17	0292 1305 00	30	Locknut						
••18	1310 0340 72	2	Thumb Screw						
						1310 9042 41	Rev. 02		

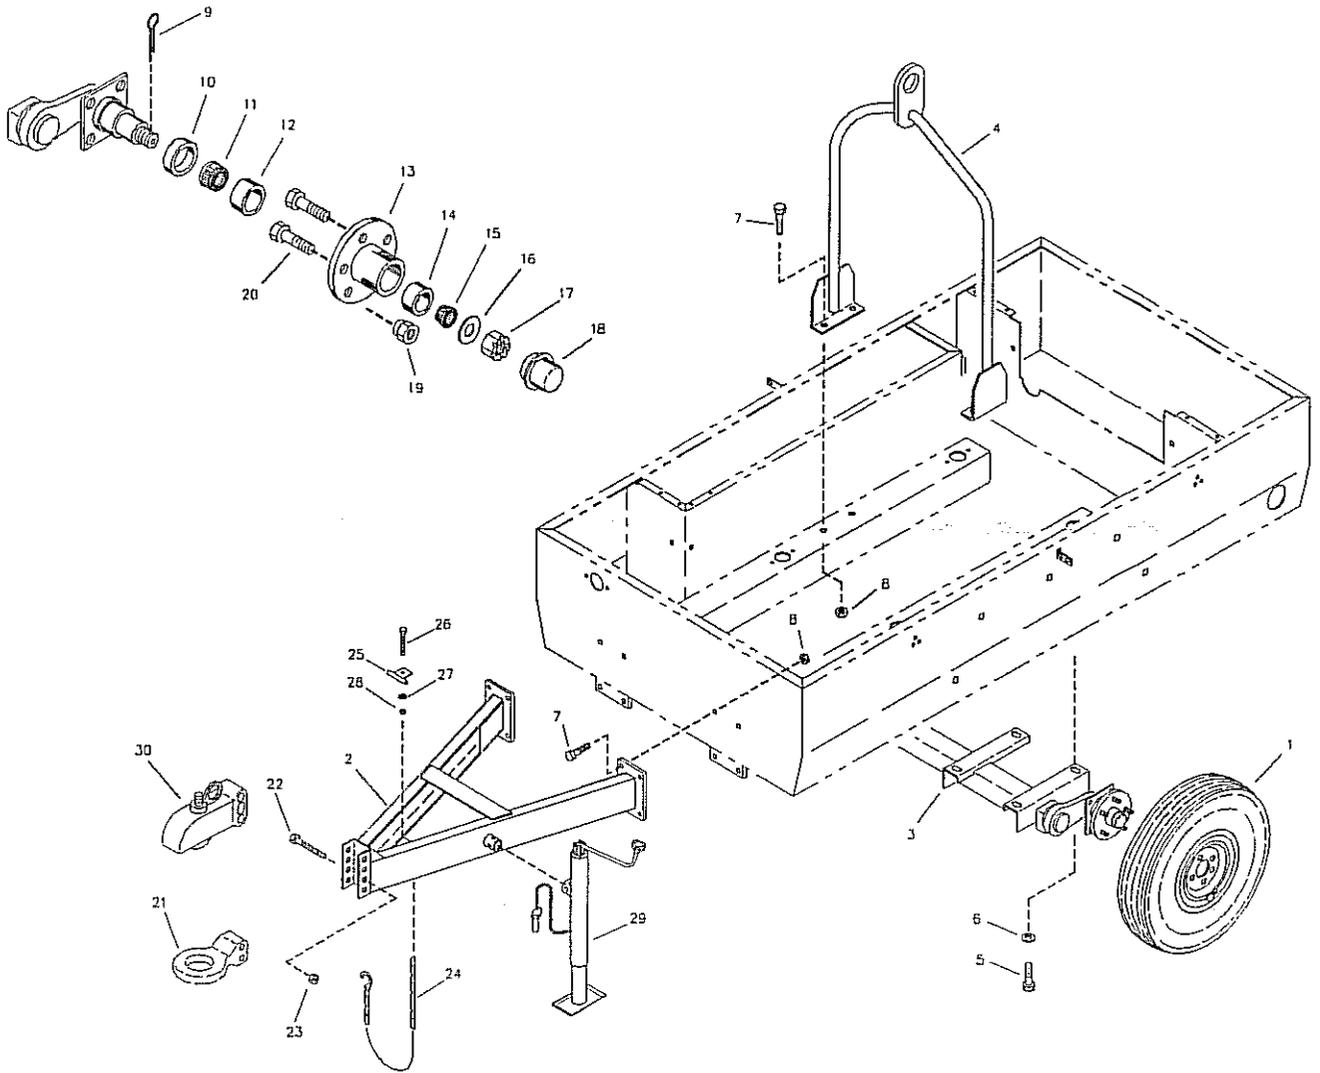

## 5. Drawbar, Lifting Yoke, Axle Assy

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0342 64	2	Wheel-tire assembly		18	1310 0343 87	2	Grease Dust Cap	
2	1310 0339 47	1	Drawbar		19	1310 0341 08	10	Lug Nut	
3	1310 0339 48	1	Axle		20	1310 0341 10	10	Stud	
4	1310 0339 49	1	Yoke-lifting		21	1310 0314 51	1	Lunette Eye	
5	0144 3447 03	8	Screw		22	0144 3461 03	2	Screw	
6	0301 2378 00	8	Washer-flat		23	0292 1310 00	2	Lock Nut	
7	1310 0331 99	12	Screw		24	1310 0314 49	2	Chain Assembly	
8	1310 0331 97	12	Nut		25	1310 0342 08	1	Pin - Chain Lock	
9	1310 0341 07	2	Cotter Pin		26	0144 3248 03	1	Screw	
10	1310 0340 91	2	Grease Seal		27	0333 2225 00	1	Lockwasher	
11	1310 0220 00	2	Inner Bearing Cone		28	0268 3205 00	1	Nut	
12	1310 0221 00	2	Inner Bearing Cup		29	1310 0340 12	1	Jack Stand	
13	1310 0341 09	2	Hub		30	1310 0342 11	1	2" Ball Hitch	
14	1310 0224 00	2	Outer Bearing Cup						
15	1310 0225 00	2	Outer Bearing Cone						
16	1310 0340 92	2	Spindle Washer						
17	1310 0340 93	2	Spindle Nut						


1310 9042 42 Rev. 01

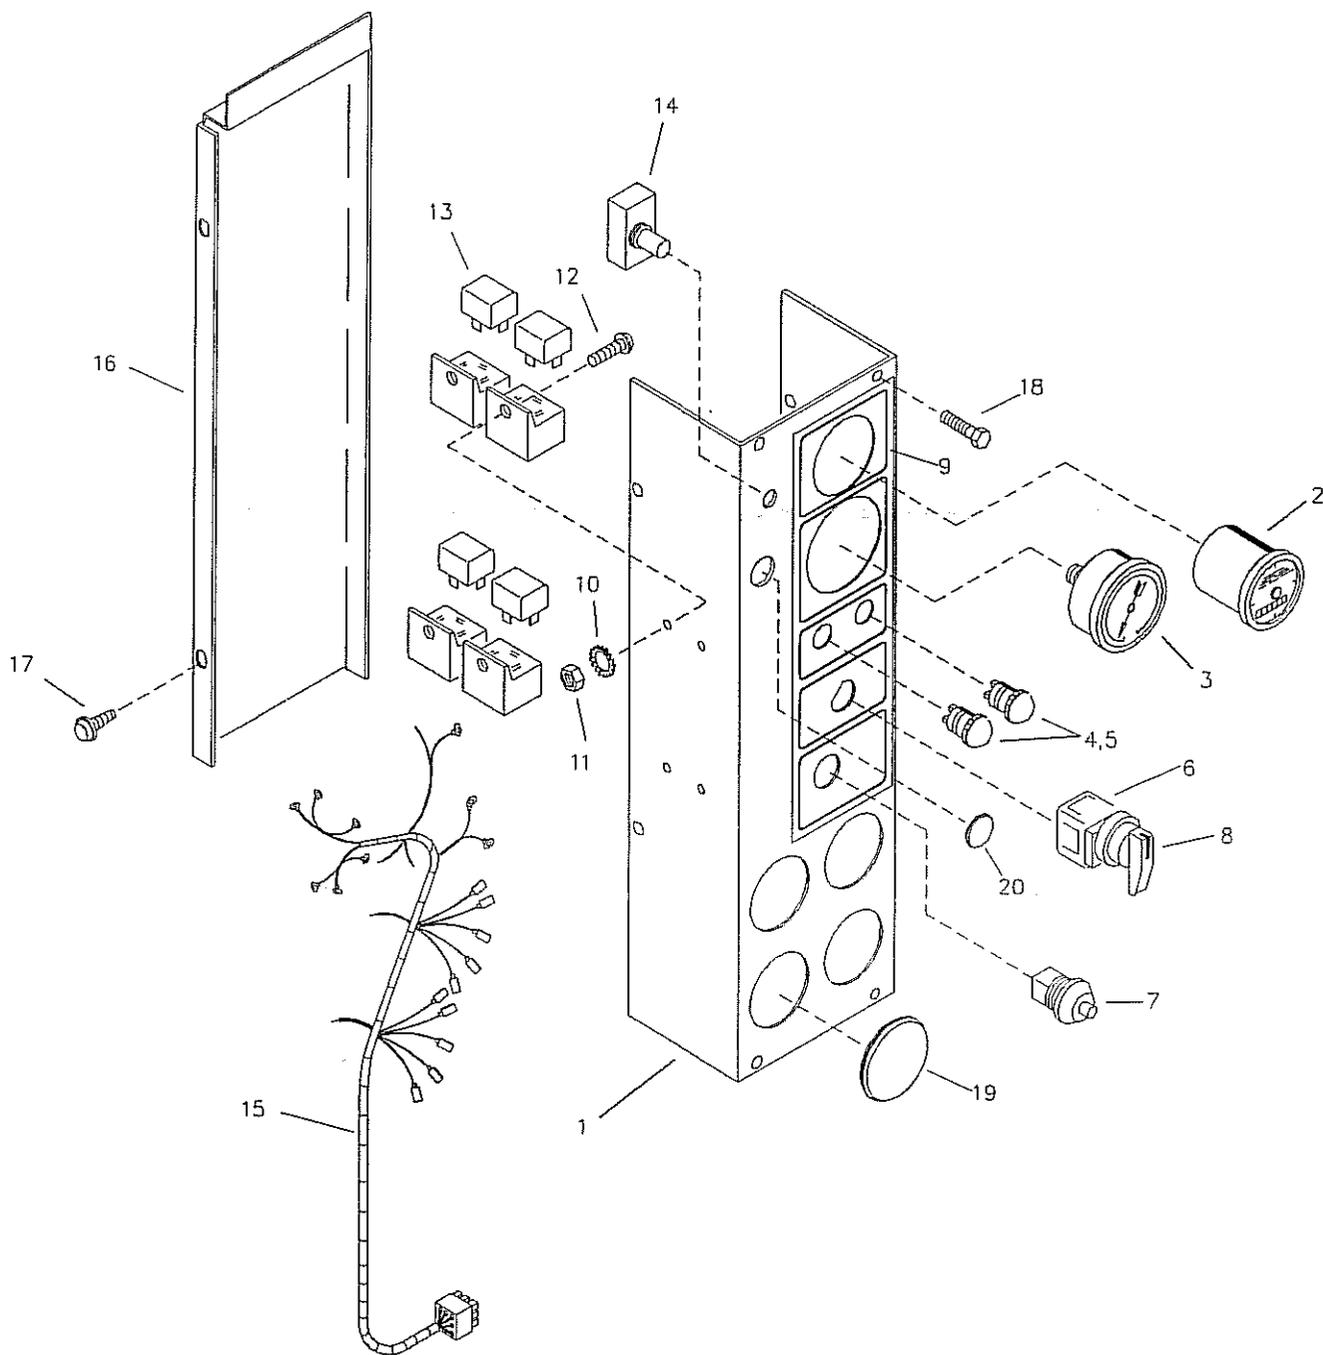

## 6. Control Panel

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0339	59	1	Control Panel	13	1089 0341	01	4	Relay
2	1089 0352	01	1	Hourmeter	14	1089 9423	01	1	Circuit Breaker
3	1615 7264	00	1	Pressure Gauge	15	1615 8662	00	1	Harness - Instrument Panel
4	1089 0312	11	2	Lamp Holder - Red Lens	16	1310 0342	07	1	Cover
5	1091 0168	00	2	Bulb	17	1310 0331	70	4	Screw
6	1089 0608	03	1	Switch	18	0147 1246	03	4	Screw
7	1089 9326	01	1	Push Button	19	1310 0327	01	4	Plug
8	1089 0608	04	1	Handle	20	1310 2512	01	1	Plug
9	1079 9919	18	1	Decal					
10	0333 3215	00	4	Lockwasher					
11	0266 2107	00	4	Nut M5					
12	0160 6060	00	4	Screw M5 x 10					


1310 9042 43 Rev. 02

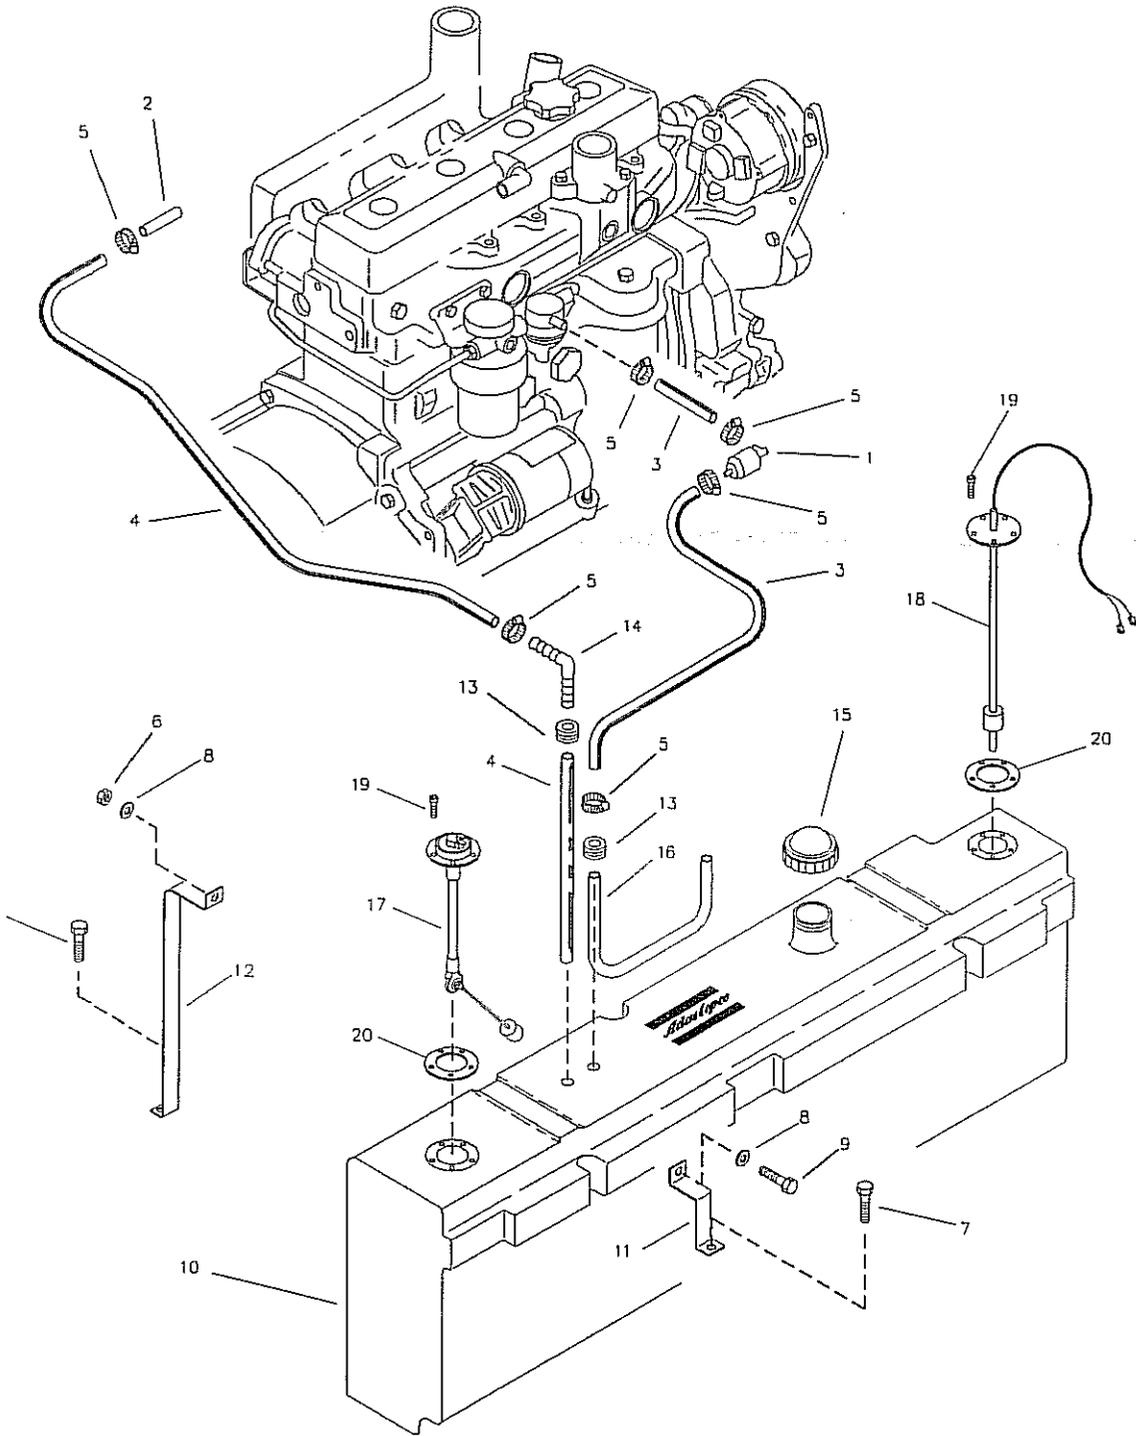




## 7. Fuel System

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0315 80	1	Filter		13	1310 0339 76	2	Grommet	
2	1310 0312 68	1	Tube		14	1310 0339 33	1	Elbow Hose	
3	1310 0311 98	2Ft	Hose		15	1310 0343 63	1	Cap	
4	1310 0311 97	6.3Ft	Hose		16	1310 0345 54	1	Drop Tube	
5	1310 0323 84	6	Clamp-hose		17	1310 0325 06	1	Gauge - Electric Fuel Level	
6	0292 1305 00	2	Locknut		18	1310 0325 03	1	Switch - Low Liquid Level	
7	1310 0314 83	4	Screw-self tap		19	1310 0343 88	10	Screw - 10-24 x 0.5 Lg.	
8	0301 2335 00	4	Washer-flat		20	1310 0327 02	2	Gasket	
9	0144 3249 03	2	Screw 5/16-18 x 1.25 Lg.						
10	1310 0339 69	1	Tank-fuel						
11	1310 0339 70	2	Strap						
12	1310 0339 71	2	Strap						

1310 9043 13 Rev. 01

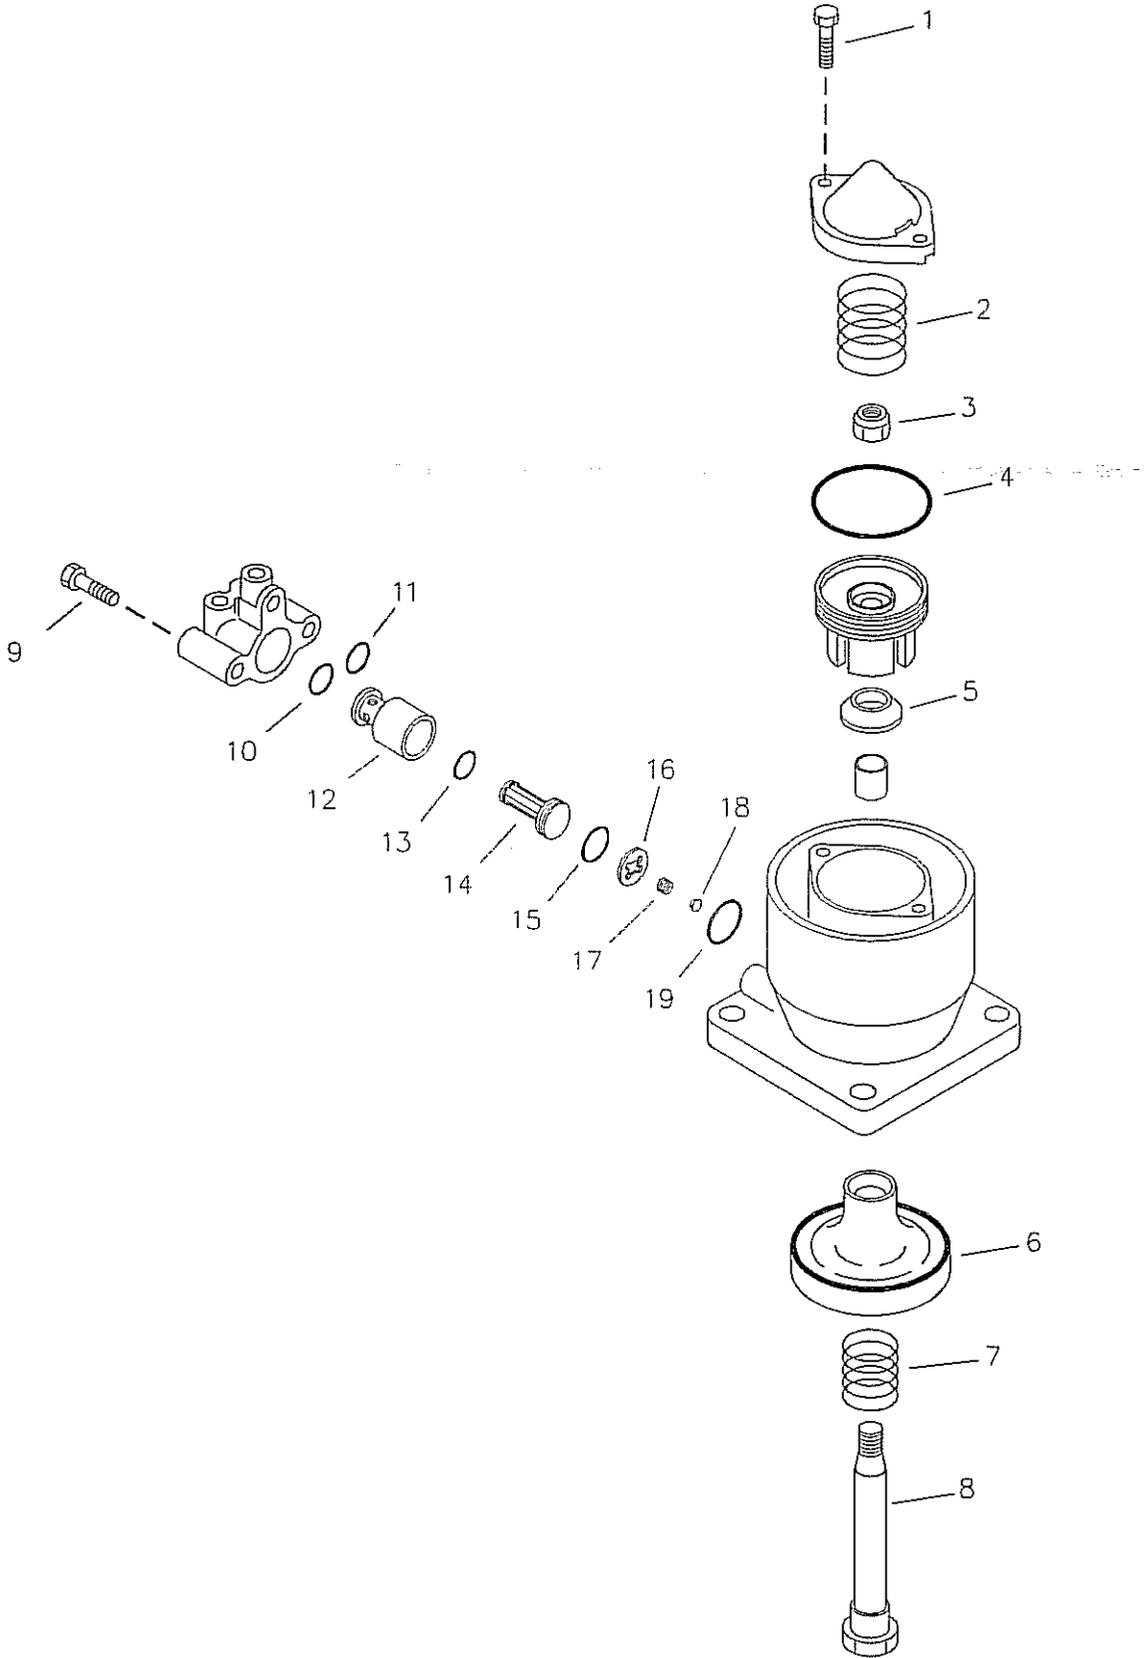




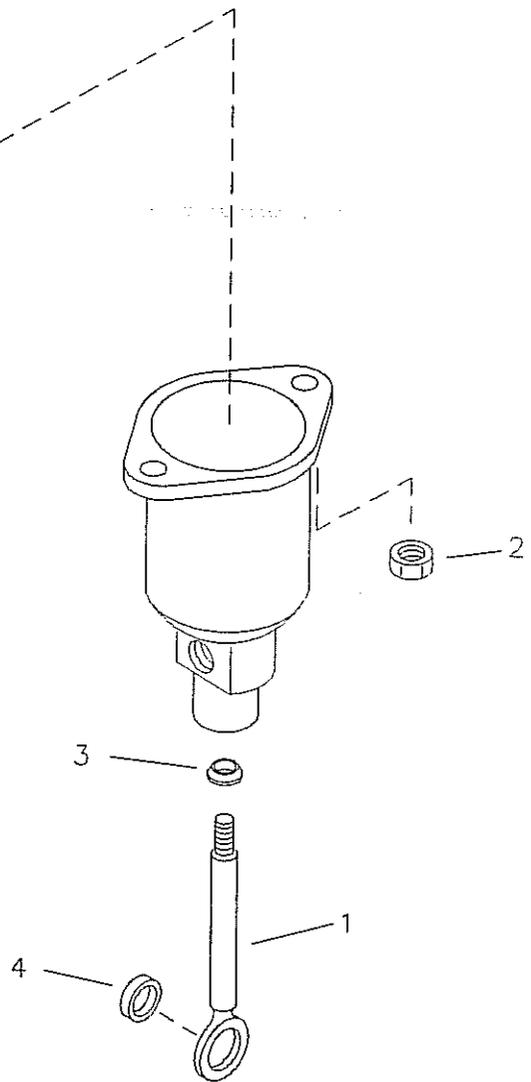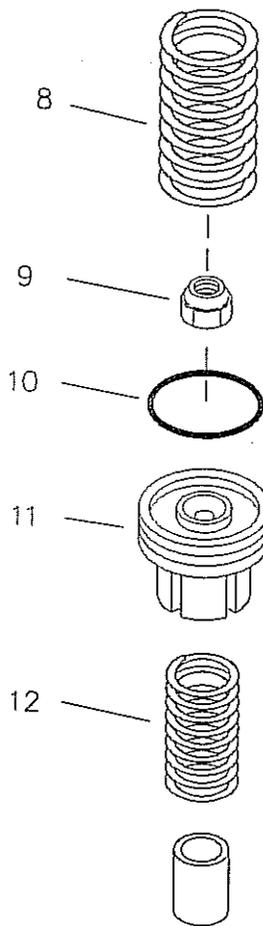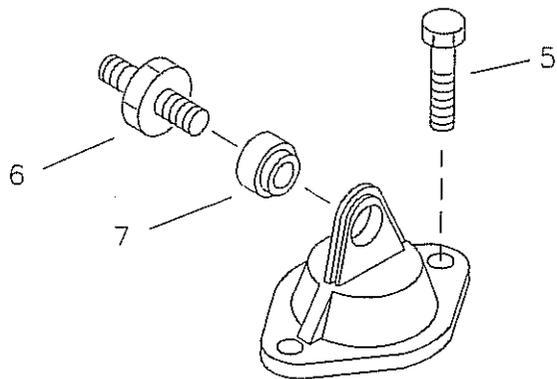

## 9. Actuating Valve Assembly


Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
-	1615 7676 82	1	Complete Actuating Unit		8	1615 8755 00	1	Spring	
1	1615 8756 00	1	Piston Rod		9	0291 1110 00	2	Locknut	
2	0266 2108 00	2	Nut		10		1	Piston Seal - See Service Kit	
3		1	Wiper - See Service Kit		11	1615 8755 00	1	Piston	
4	0501 0000 67	1	Bearing		12	2252 0489 00	1	Spring	
5	0147 1252 02	2	Hexagon Bolt						
6	1615 8382 00	1	Adaptor						
7	0501 0007 00	1	Bearing						

1310 9042 53 Rev. 00

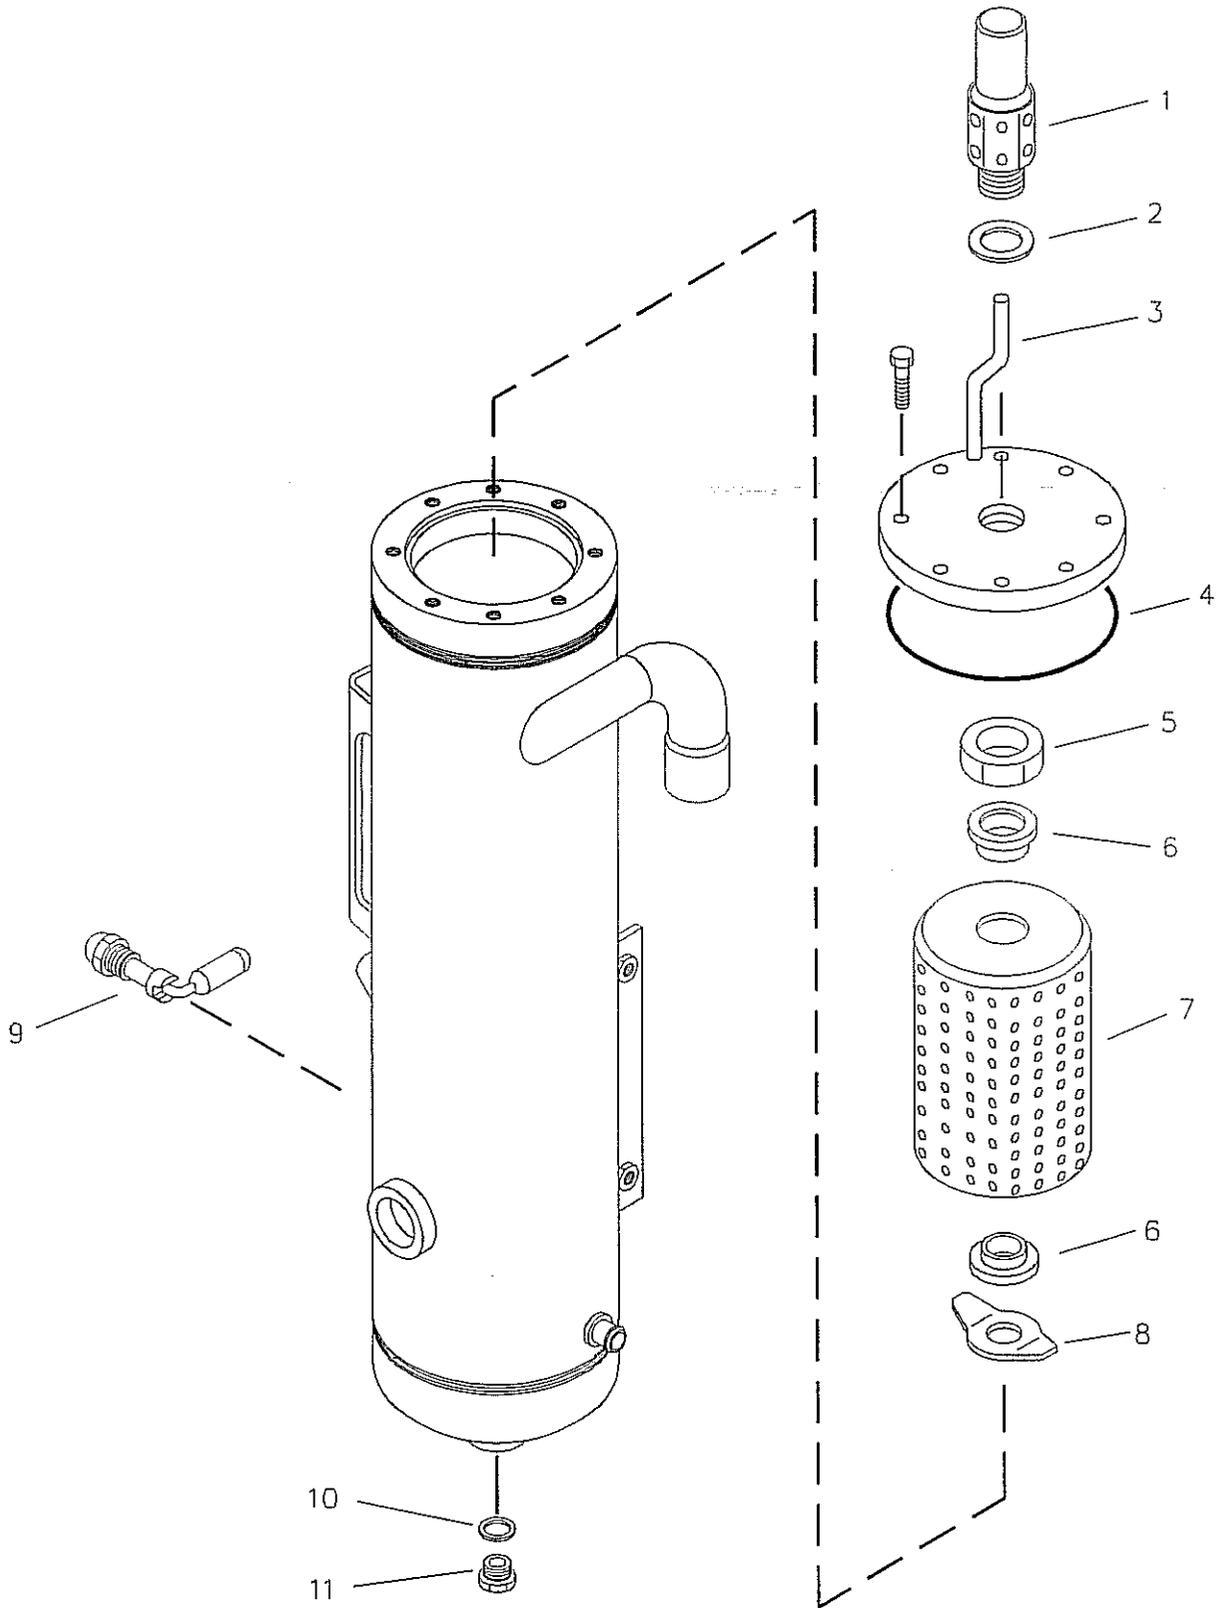

## 10. Air Receiver


<u>Ref</u>	<u>Part number</u>	<u>Qty</u>	<u>Name</u>	<u>Remarks</u>	<u>Ref</u>	<u>Part number</u>	<u>Qty</u>	<u>Name</u>	<u>Remarks</u>
-	1310 0342 30	1	Complete Air Receiver		8	1615 7697 00	1	Retainer	
1	1615 7664 80	1	Reg. Valve Assembly		9	1616 5108 00	1	Level Gauge	
2	0661 1000 30	1	Seal Washer		10	0661 1000 26	1	Seal Washer	
3	1615 7666 00	1	Tube		11	0686 4203 00	1	Hexagon Plug	
4	0663 7151 00	1	O-Ring						
5	0623 2106 03	1	Nut						
6	1615 7695 00	2	Seal						
7		1	Element - See Service Kit		1310 9042 46	Rev. 00			

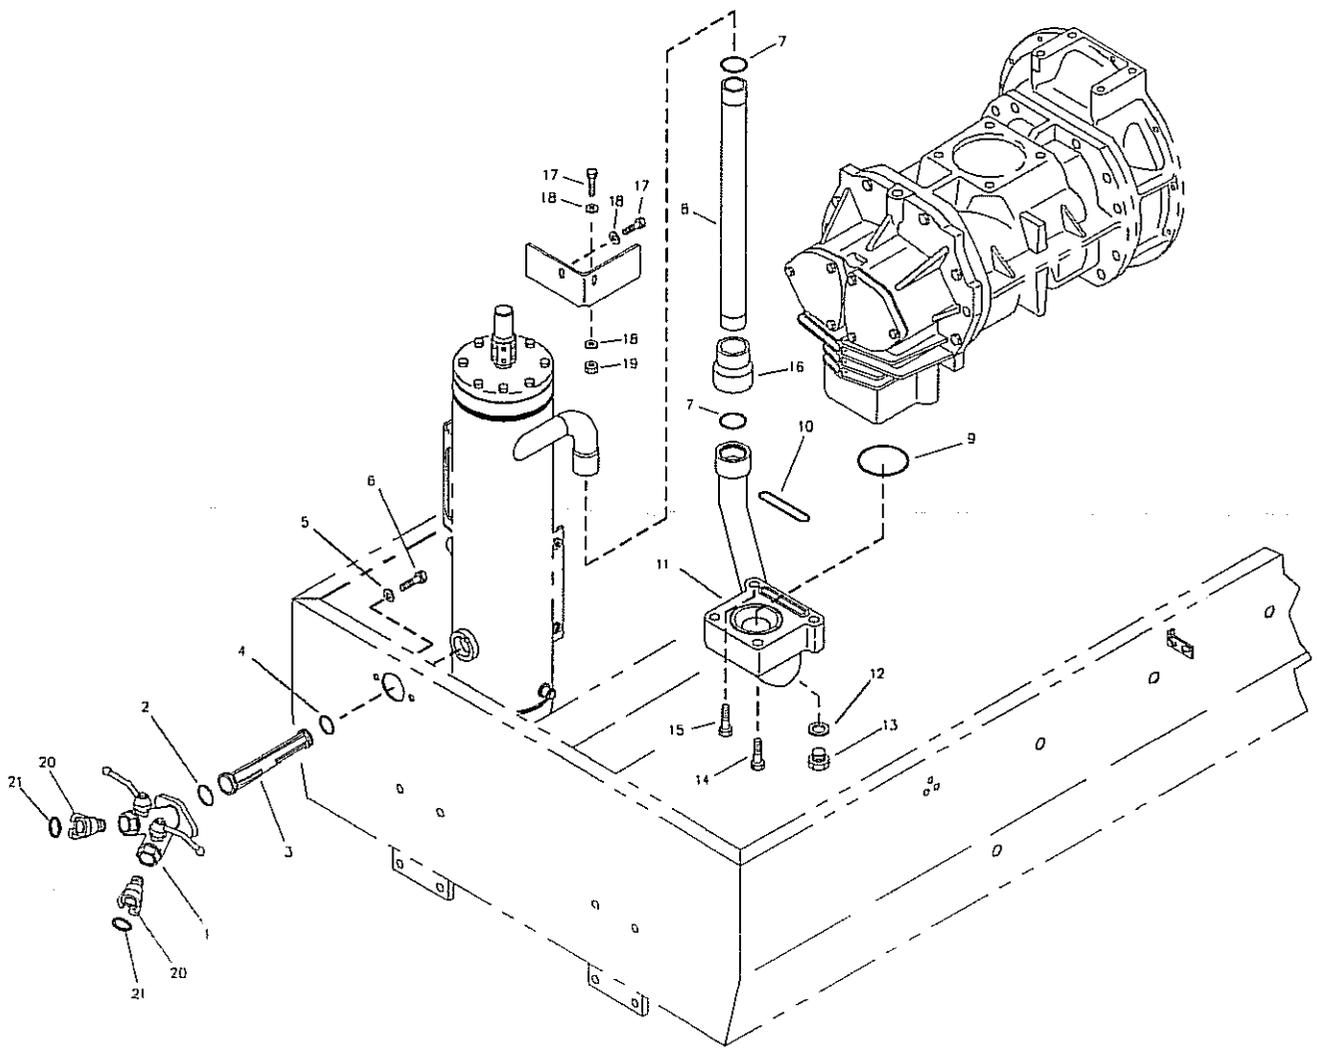

## 11. Air Outlet

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1615 7702 81	1	Twin Ball Valve		13	0686 3716 01	1	Hexagon Plug	
2	0663 3129 00	1	O-Ring		14	0147 1368 03	3	Bolt	
3	1615 7756 01	1	Restrictor		15	0147 1363 03	1	Bolt	
4	0663 3130 00	1	O-Ring		16	1615 9576 00	1	Dust Boot	
5	0333 3227 00	2	Lockwasher		17	0147 1323 03	8	Bolt	
6	0147 1323 03	2	Hexagon Bolt		18	0301 2335 00	12	Washer	
7	0663 2108 78	2	O-Ring		19	0266 2110 00	4	Nut	
8	1615 9679 00	1	Pipe		20	1310 1365 00	2	Claw Coupling	
9	0663 3137 00	1	O-Ring		21	9747 6020 00	2	Rubber Gasket	
10	0663 3136 00	1	O-Ring						
11	1310 0345 12	1	Outlet Manifold						
12	0653 1062 00	1	Flat Gasket						


1310 9042 47 Rev. 02

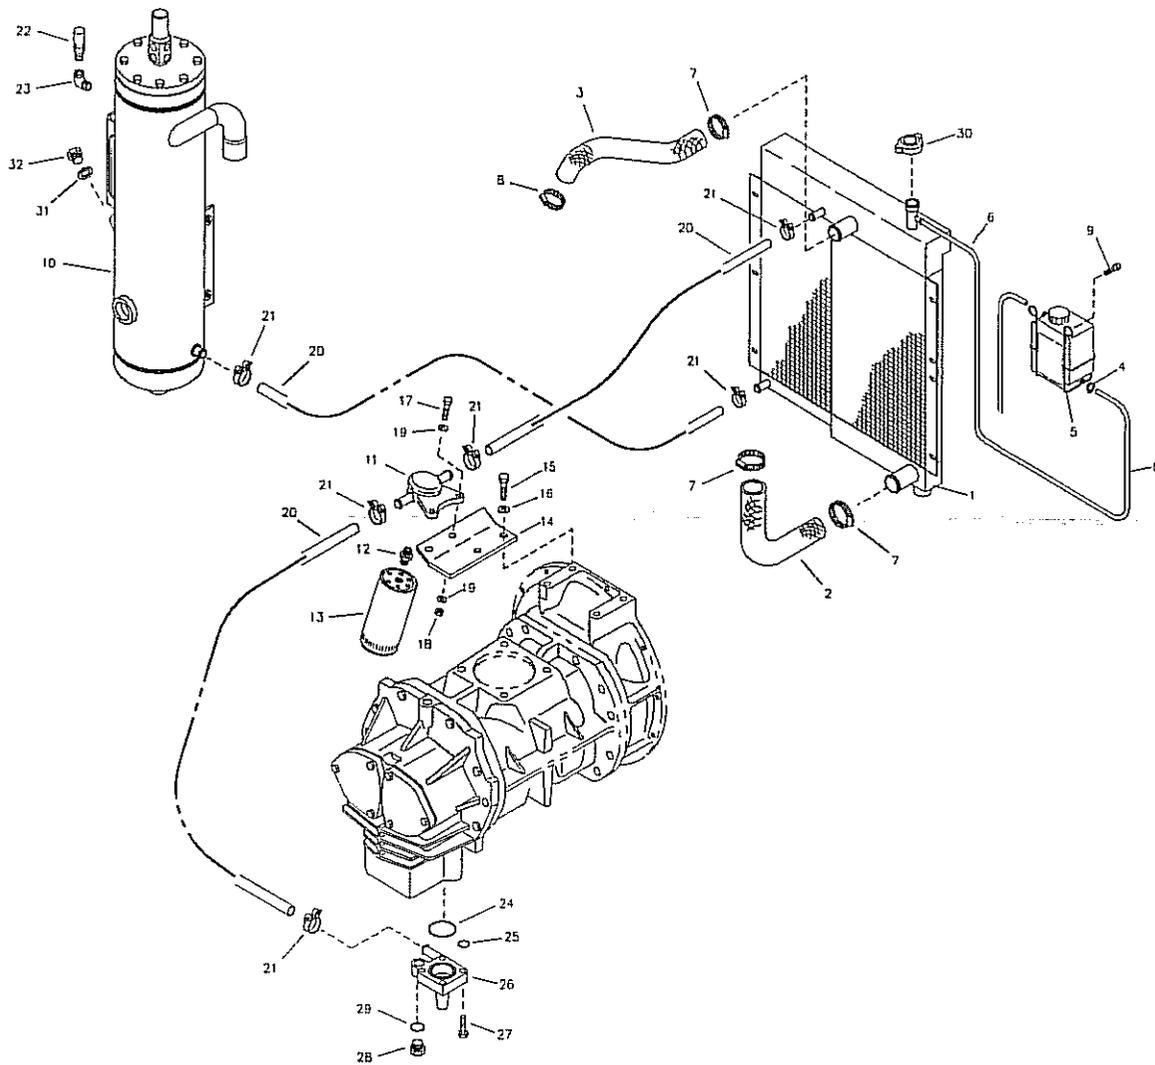

## 12. Oil System & Coolers

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0339 51	1	Oil Cooler		19	0301 2335 00	4	Washer	
2	1310 0345 44	1	Radiator		20	0072 8403 16 3.5m		Hose	
3	1310 0345 45	1	Hose		21	1202 8663 01	6	Clamp	
4	1310 0323 84	1	Clamp-hose		22	1310 0342 90	1	Safety Valve	
5	1310 0343 72	1	Coolent Recovery System		23	9710 5691 00	1	Elbow	
6	1310 0315 92	4Ft	Hose		24	0663 7135 00	1	O-Ring	
7	0347 6113 00	3	Clamp-hose		25	0663 7119 00	1	O-Ring	
8	0347 6110 00	1	Clamp-hose		26	1615 7768 80	1	Flange	
9	9710 5906 00	2	Screw-self tap		27	0147 1325 03	4	Screw	
10	1310 0342 30	1	Separator		28	0686 3716 01	1	Plug	
11	1615 7767 01	1	Oil Filter Housing		29	0653 1062 00	1	Gasket	
12	1619 3370 00	1	Nipple		30	1310 0343 79	1	Radiator Cap	
13	2914 5050 00	1	Filter		31	0611 1000 29	1	Washer	
14	1310 0341 45	1	Bracket		32	1615 5080 00	1	Plug	
15	0147 1400 03	2	Bolt						
16	0301 2358 00	2	Washer						
17	0147 1329 03	2	Screw						
18	0266 2110 00	2	Nut						


1310 9042 48 Rev. 01

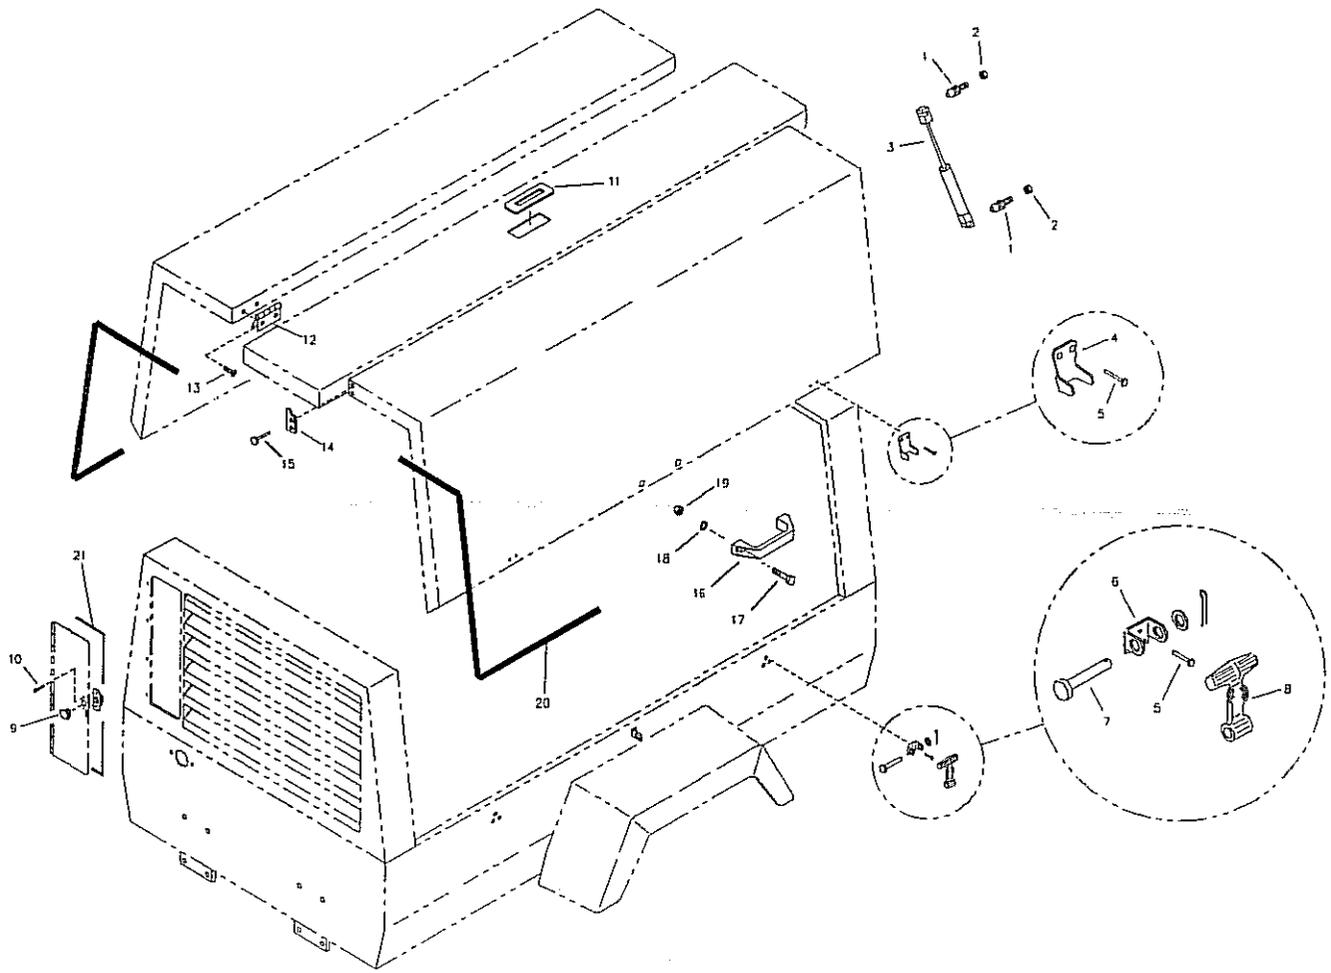

### 13. Body Mounts

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0327 78	8	Support - Ball Stand		13	0216 1324 03	8	Screw	
2	0292 1305 00	8	Locknut		14	1310 0340 81	4	Hinge Protector	
3	1310 0327 77	4	Cylinder - Gas		15	1310 0327 87	8	Rivet	
4	1615 8605 00	4	Stirrup		16	1202 8973 00	2	Handle	
5	1310 0327 87	20	Rivet		17	0147 1246 03	4	Screw	
6	1619 2980 01	4	Base Plate		18	0333 2121 00	4	Washer	
7	1619 2981 01	4	Pin w/ Washer & Cotter Pin		19	0266 2108 00	4	Nut	
8	1619 2978 01	4	Door Catch		20	1619 2665 00	4M	Seal - Bodywork	
9	1310 0341 04	1	Latch - Cover Plate		21	1310 0316 39	.7M	Seal - Door	
10	0129 3103 00	2	Rivet						
11	1614 4285 00	1	Ring - Rubber						
12	1615 7712 00	4	Hinge						


1310 9042 49 Rev. 01

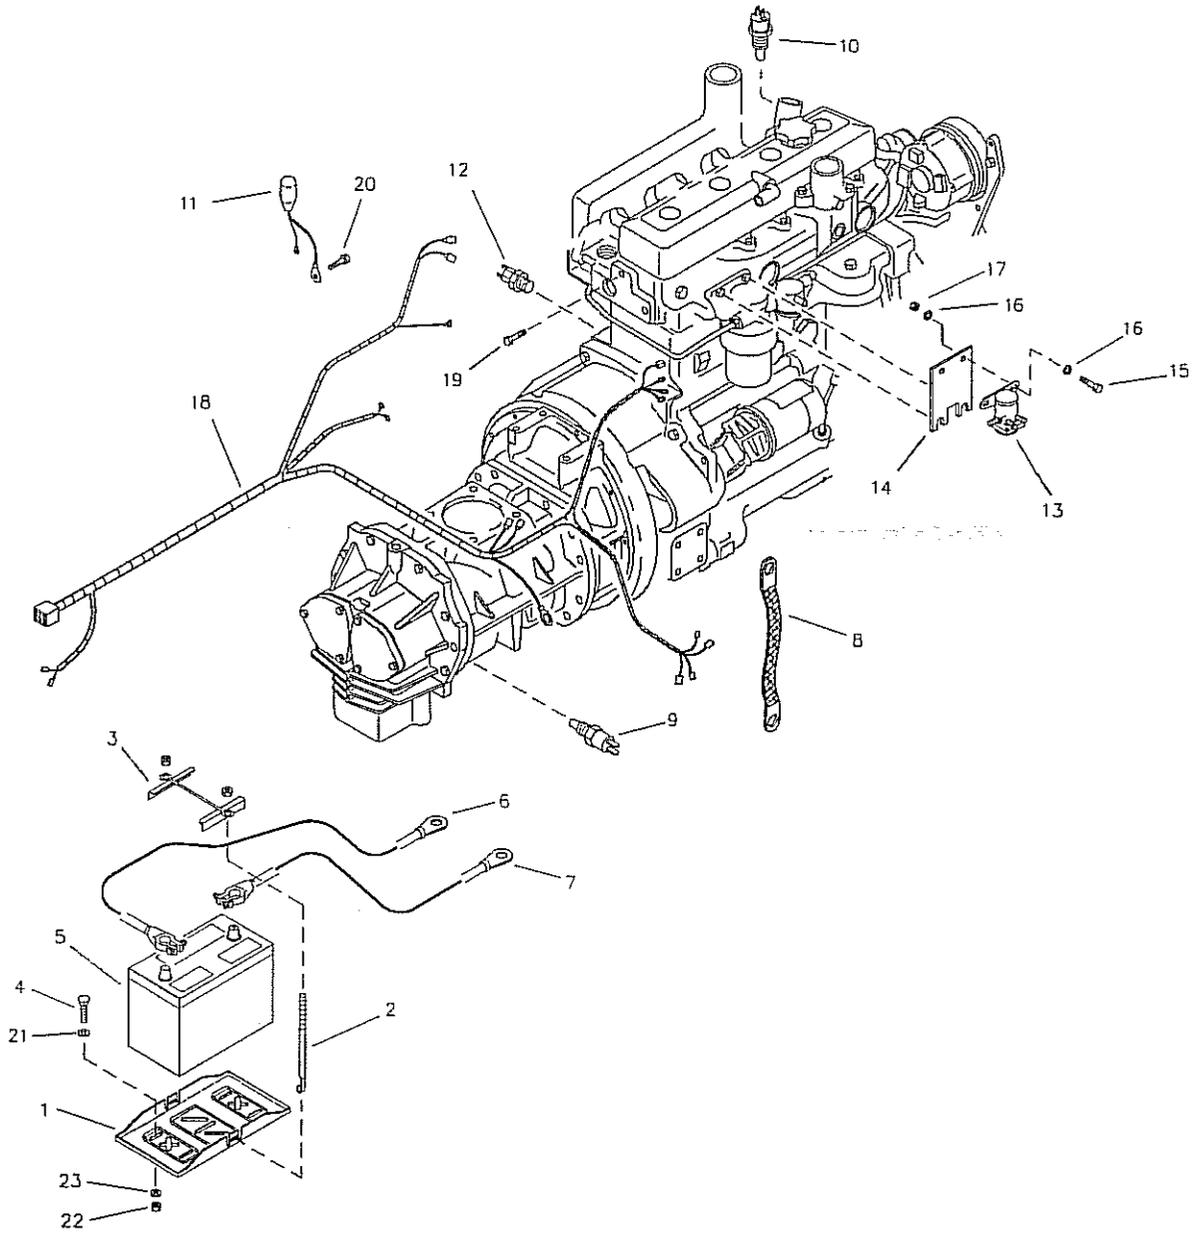

## 14. Electrical System

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0311 65	1	Tray-battery		14	1310 0341 46	1	Bracket	
2	1310 0311 67	2	Bolt-j		15	0144 3205 03	2	Screw	
3	1310 0311 66	1	Clamp-battery		16	0301 2327 00	4	Washer-flat	
4	9710 5899 01	2	Bolt		17	0268 3204 00	2	Nut	
5	1310 0310 89	1	Battery		18	1310 0342 12	1	Harness-wiring	
6	1310 0317 65	1	Cable-battery		19	0147 1359 03	1	Bolt	
7	1310 0333 25	1	Cable-battery		20	0147 1320 03	1	Bolt	
8	1310 0333 56	1	Strap		21	0301 2344 00	2	Washer	
9	1310 0335 50	1	Switch-temp		22	0268 3205 00	2	Nut	
10	1310 0330 64	1	Switch-temp		23	0333 2225 00	2	Washer	
11	1310 0321 35	1	Suppressor						
12	1310 0330 41	1	Switch-press						
13	1310 0312 67	1	Solenoid						


1310 9042 50 Rev. 01

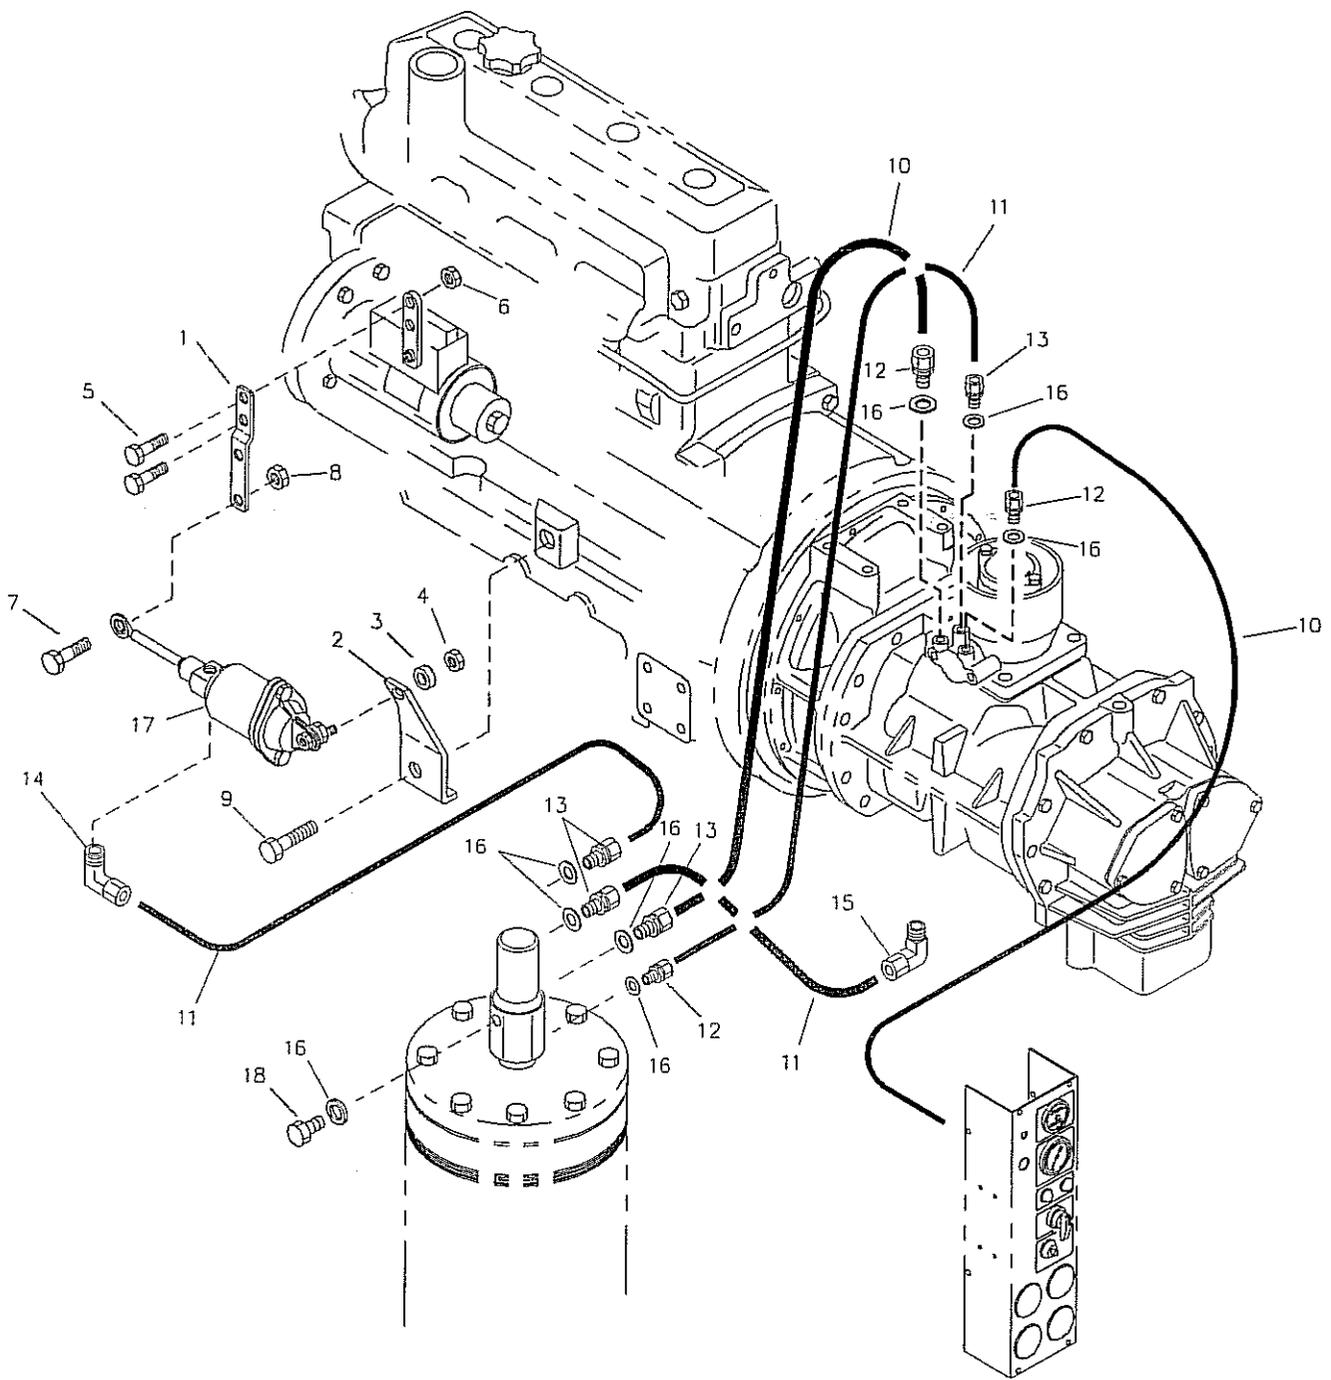

## 15. Regulating System

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0342 91	1	Lever		12	0581 0000 33	3	Coupling	
2	1310 0342 92	1	Support		13	0581 0000 38	4	Coupling	
3	0324 1130 00	1	Spacer		14	0581 1200 23	1	Elbow-tube	
4	0291 1110 00	1	Locknut		15	1615 5593 00	1	Coupling-pipe	
5	0144 3206 03	2	Screw		16	1310 0345 79	8	Gasket-flat	
6	1310 0332 16	2	Nut		17	1615 7676 82	1	Piston	
7	0147 1247 03	1	Screw		18	0686 4201 03	1	Plug	
8	0291 1108 00	1	Locknut						
9	0147 1961 37	1	Screw M14 x 20mm Lg.						
10	0070 6002 04	2.5	Tube						
11	0070 6002 05	2	Tube						

1310 9042 51 Rev. 02

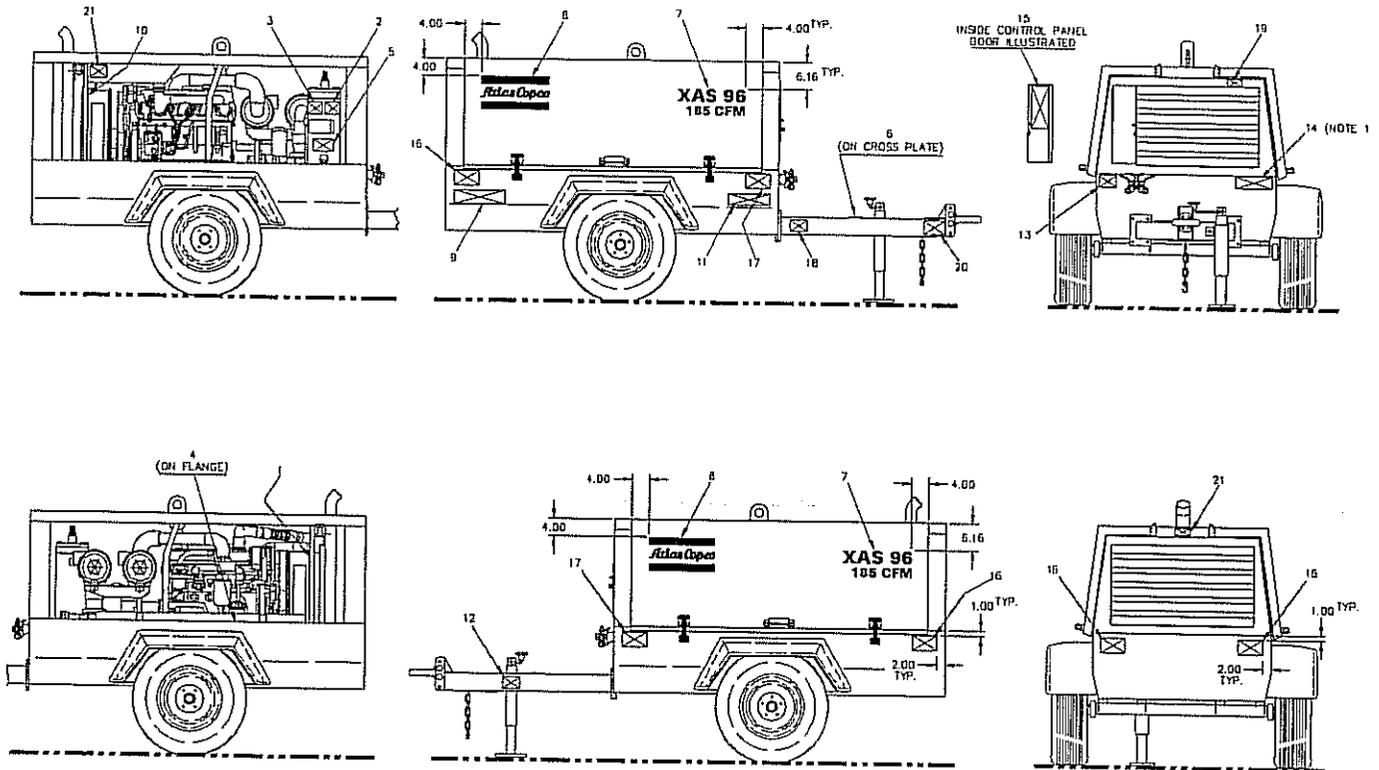


## 16. Decal Location

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	2250 9263 00	1	Label - Alternator		13	9747 6011 00	1	Label - Danger	
2	9747 6014 00	1	Label - Air Receiver		14	1310 3112 45	1	Label - John Deere	
3	9747 6012 00	1	Label - Tampering		15	1310 0343 82	1	Label - Oper. & Maint.	
4	1310 0173 00	1	Label - Fuel Only		16	1310 0331 80	4	Label - Reflector (Red)	
5	1310 3112 52	1	Label - Oil Type		17	1310 0343 65	2	Label - Reflector (Yellow)	
6	9747 6013 00	1	Label - Towing		18	1310 3112 74	1	Label - Towbar Torque Specs.	
7	1310 0339 50	2	Label - Model		19	1310 3112 36	1	Label - Calif. Prop. 65	
8	0690 1140 00	2	Label - Logo		20	1310 0343 89	1	Label - Safety Chain	
9	1613 3385 00	1	Label - Tampering		21	1310 0313 24	2	Label - Caution Hot Exhaust	
10	1310 0323 12	1	Data Plate						
11	1613 3384 00	1	Label - Noise						
12	1079 9902 00	1	Label - Tow Bar						


1310 9200 47 Rev. 01

## 25. Hose Reel Assembly

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0344 41	2	Hose Reels		11	1310 0325 80	1	Clamp	
2	1310 0344 40	1	Bracket		12	0144 3249 03	12	Screw 5/16-18 x 1.25 Lg.	
3	1310 0314 30	3	Hose Assembly		13	0301 2335 00	8	Flat Washer	
4	0570 5010 22	3	Adapter		14	0268 3205 00	12	Nut 5/16-18	
5	3176 6573 00	3	Elbow		15	0333 2225 00	12	Lockwasher	
6	0564 000H 02	1	Tee		16	1310 1365 00	1	Claw Coupling	
7	9710 5690 02	2	Elbow 45% $\phi$ d		17	3176 6539 00	1	Adapter	
8	VAL02131	2	Valve						
9	0603 0118 14	2	Nipple						
10	1310 2006 72	2	Bushing						
						1310 9200 91	Rev. 01		

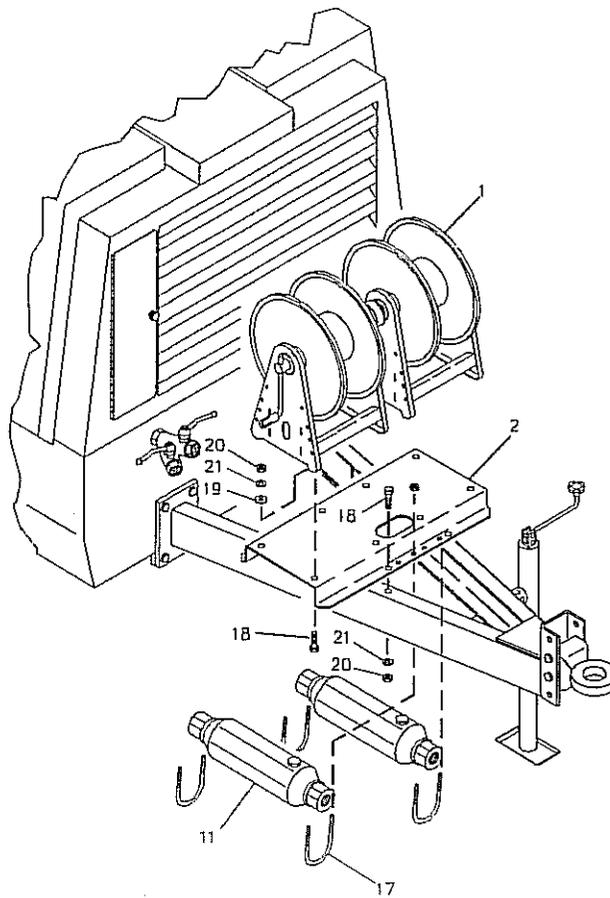

ASSEMBLY OF HOSE REELS AND LINE OILERS

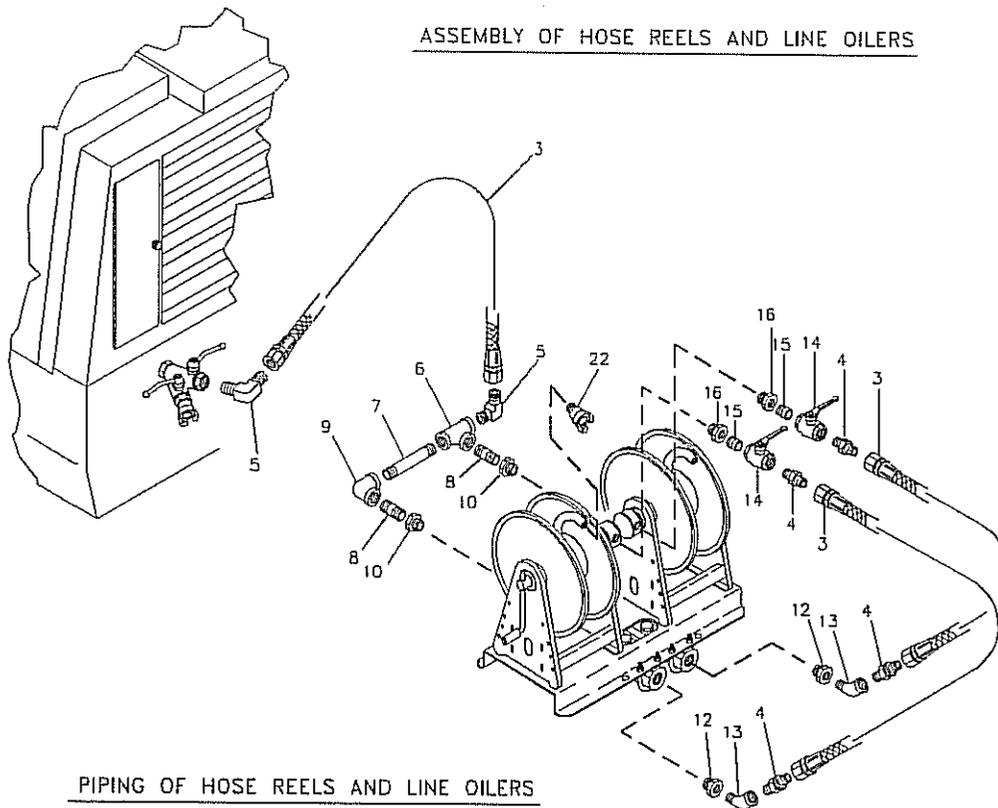


PIPING OF HOSE REELS AND LINE OILERS

## 26. Hose Reel Assembly W/Line Oilers

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0344 41	2	Hose Reels		14	VAL02131	2	Valve	
2	1310 0344 40	1	Bracket		15	0603 0118 14	2	Nipple	
3	1310 0314 30	3	Hose Assembly		16	1310 2006 72	2	Bushing	
4	0570 5010 22	4	Adapter		17	1310 0325 80	4	Clamp	
5	3176 6573 00	2	Elbow		18	0144 3249 03	12	Screw 5/16-18 x 1.25 Lg.	
6	0564 000H 02	1	Tee		19	0301 2335 00	8	Flat Washer	
7	1310 2533 36	1	Nipple		20	0268 3205 00	12	Nut 5/16-18	
8	1310 0342 22	2	Nipple - Close		21	0333 2225 00	12	Lockwasher	
9	0560 100H 02	1	Elbow 3/4 NPT		22	1310 1365 00	1	Claw Coupling	
10	1310 2032 28	2	Bushing 1 x 3/4 NPT						
11	1310 0324 71	2	Lubricator						
12	1310 2535 52	2	Bushing						
13	9710 5690 02	2	Elbow 45%%d						


1310 9200 78 Rev. 01

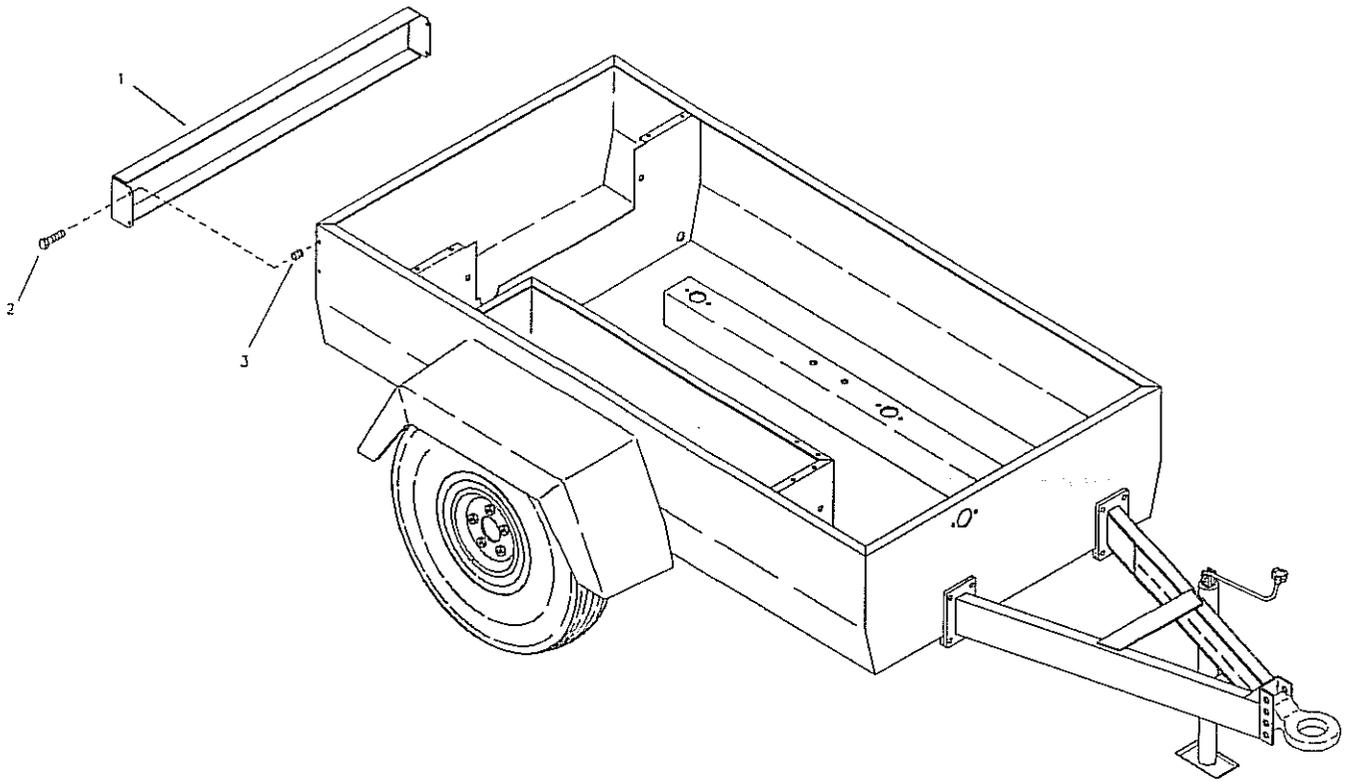


## 27. Bumper

Ref	Part number	Qty	Name	Remarks
1	1310 0344 15	2	Bumper	
2	1310 0332 64	4	Screw	
3	0259 161H 03	4	Insert - thd	

1310 9201 05 Rev. 01

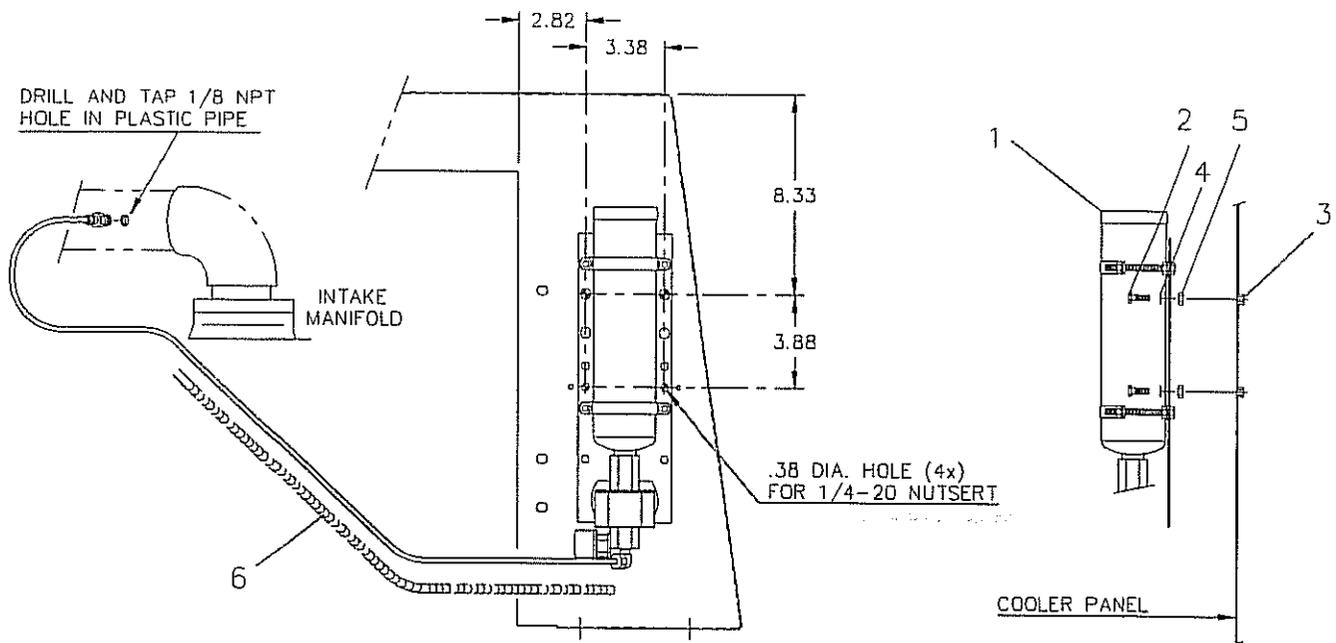

ASSEMBLY OF COLD START KIT

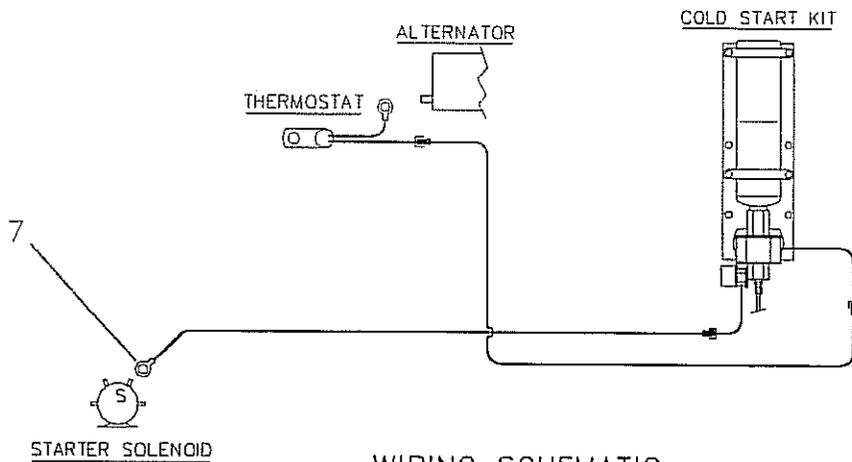


WIRING SCHEMATIC

**29. Cold Start - Ether**

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	13 10 3083 29	1	Cold Start Kit		7	1310 0313 57	3	Terminal - Wire	
2	0144 3208 03	4	Screw 1/4-20 x 1.00 Lg.		8	1088 1301 01	4	Cable Ty (Not Shown)	
3	0259 161H 02	4	Insert 1/4-20						
4	0333 2121 00	4	Lockwasher						
5	0268 3205 00	4	Hex Nut 1/4-20						
6	13 10 2514 29	4Ft	Spiral Wrap						


1310 9200 63 Rev. 02

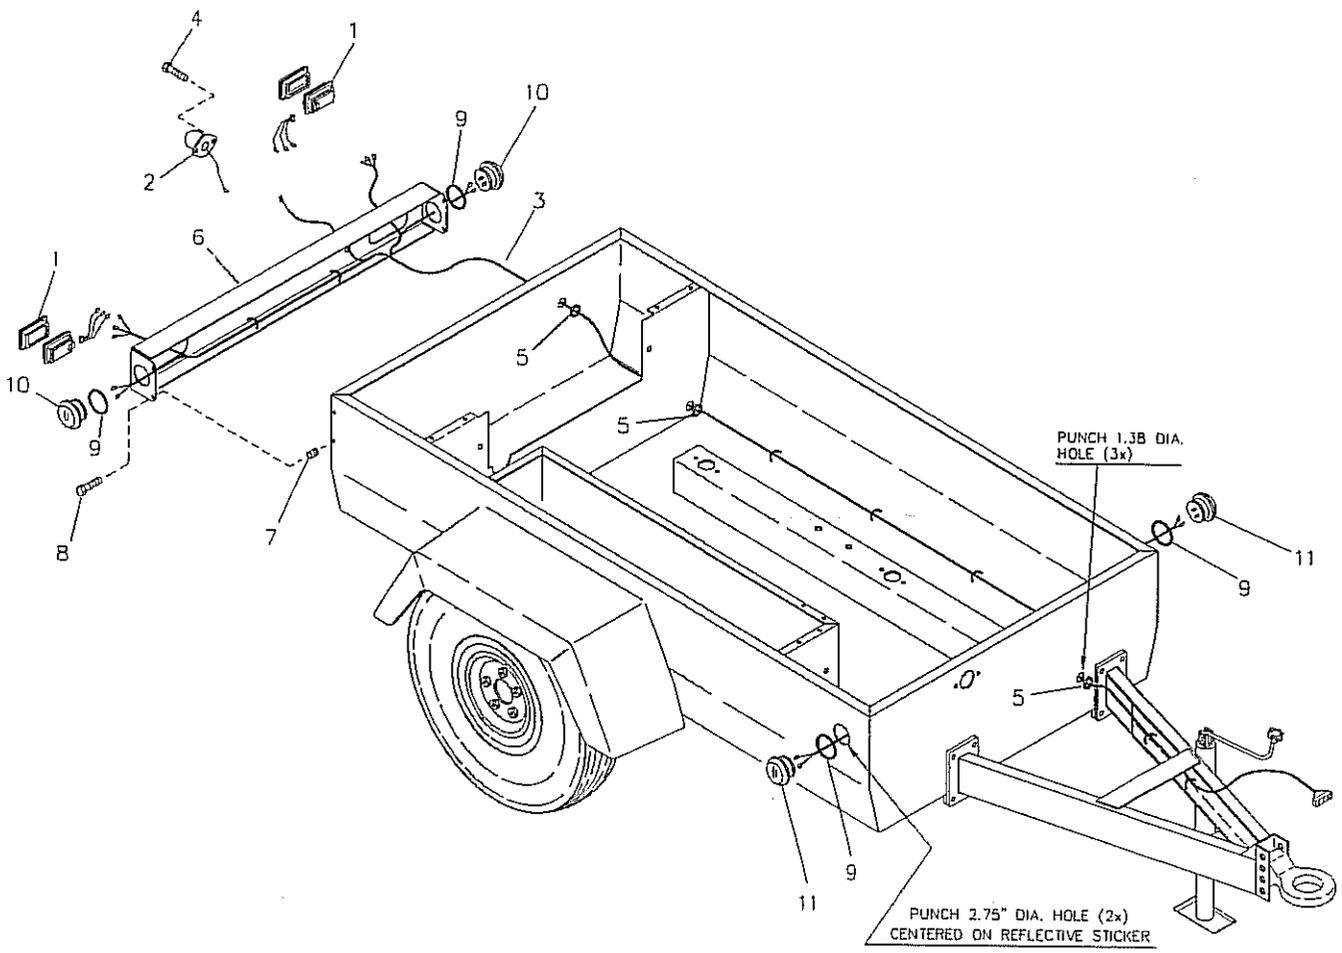

### 31. Road Lights

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0340 55	2	Lamp		8	0144 3203 03	4	Screw	
2	1310 0313 95	1	Lamp-license plate		9	1310 0344 37	4	Grommet	
3	1310 0344 43	1	Wiring harness		10	1310 0344 35	2	Marker (Red)	
4	0144 3203 03	4	Screw		11	1310 0344 36	2	Marker (Yellow)	
5	1088 0801 40	3	Grommet						
6	1310 0344 42	1	Bumper-rear						
7	0259 161H 02	4	Insert-thd						



1310 9200 66 Rev. 01

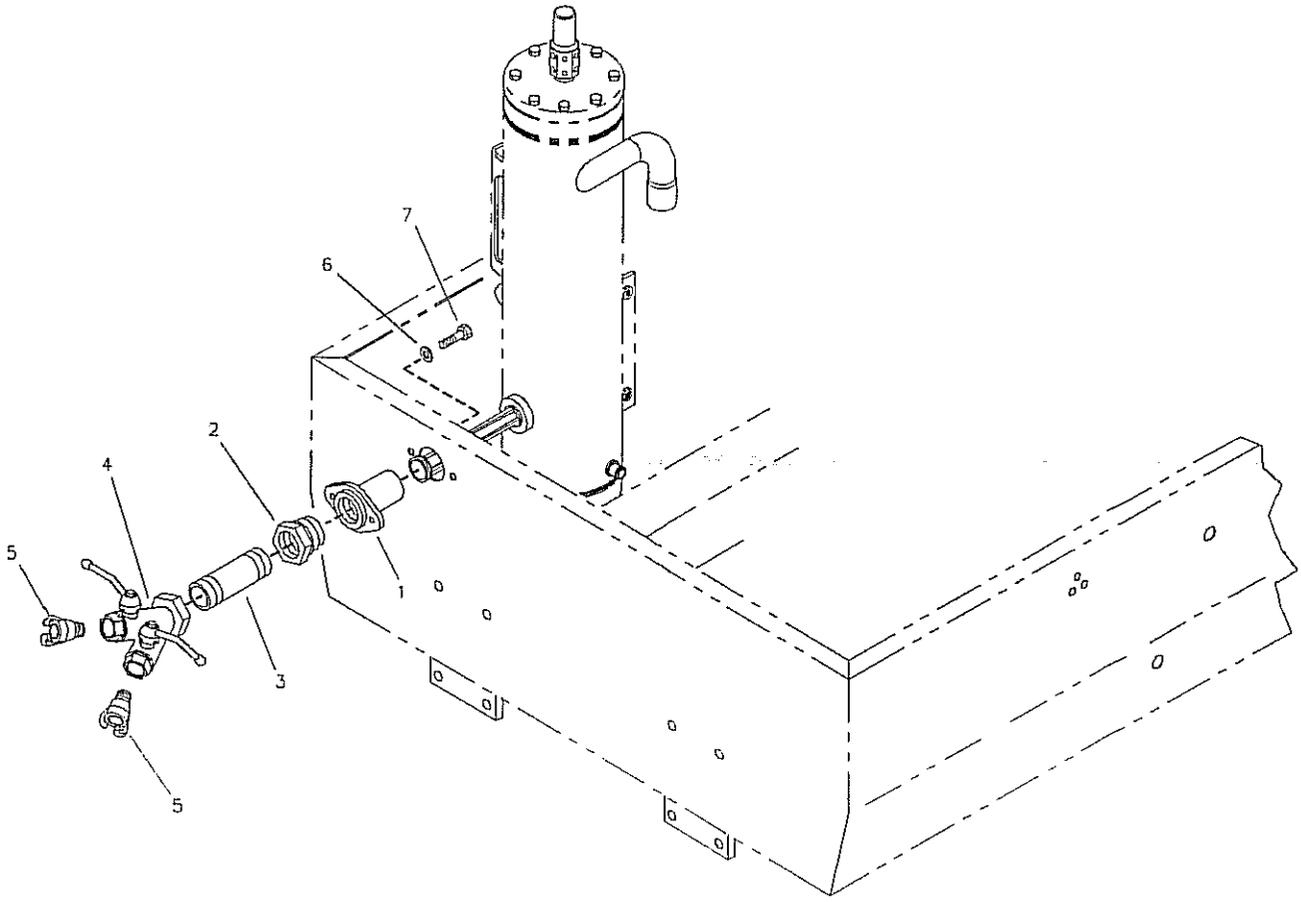

### 32. Threaded Discharge

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
1	1310 0345 47	1	Flange		6	0333 3227 00	2	Lockwasher	
2	0605 870H 12	1	Bushing		7	0147 1323 03	2	Screw	
3	0551 000H 29	1	Nipple						
4	1310 0332 13	1	Valve assembly						
5	1310 0257 00	2	Coupling - claw						


1310 9201 40 Rev. 00

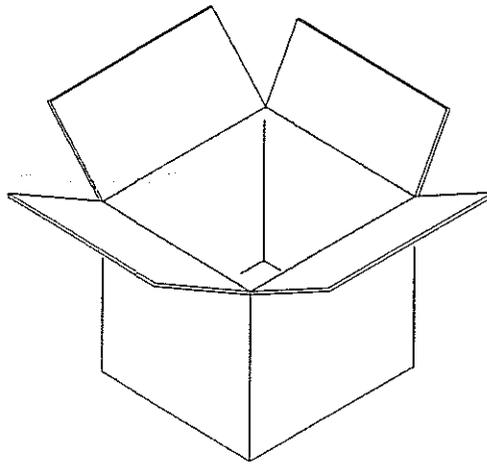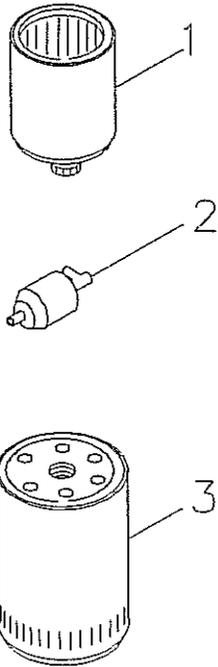

### 33. 250/750 Hour Filter Kit

Ref	Part number	Qty	Name	Remarks
-	1310 3103 25	1	250/750 Hour Kit	
1	1310 0331 39	1	Fuel Filter (Screw On Type)	
2	1310 0315 80	1	Fuel Filter (In Line Type)	
3	1310 0339 31	1	Oil Filter (Engine)	


1310 9042 80 Rev. 00

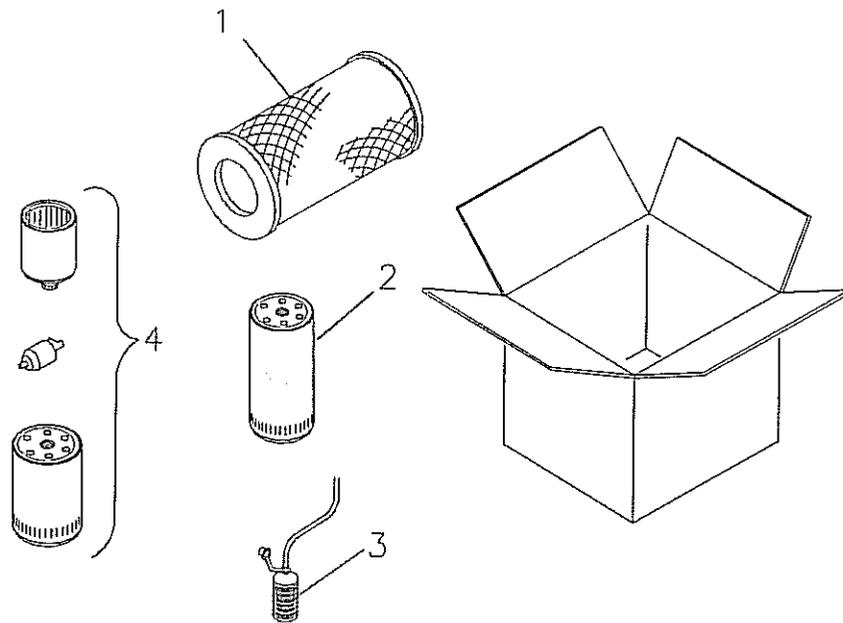

### 34. 500 Hour Filter Kit

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
-	1310 3105 10	1	500 Hour Kit		4	1310 3103 25	1	250/750 Hour Kit	
1	1310 0339 26	2	Air Filter						
2	2914 5050 00	1	Hydraulic Filter						
3	1310 3083 46	1	Oil Analysis Kit						

1310 9042 84 Rev. 00

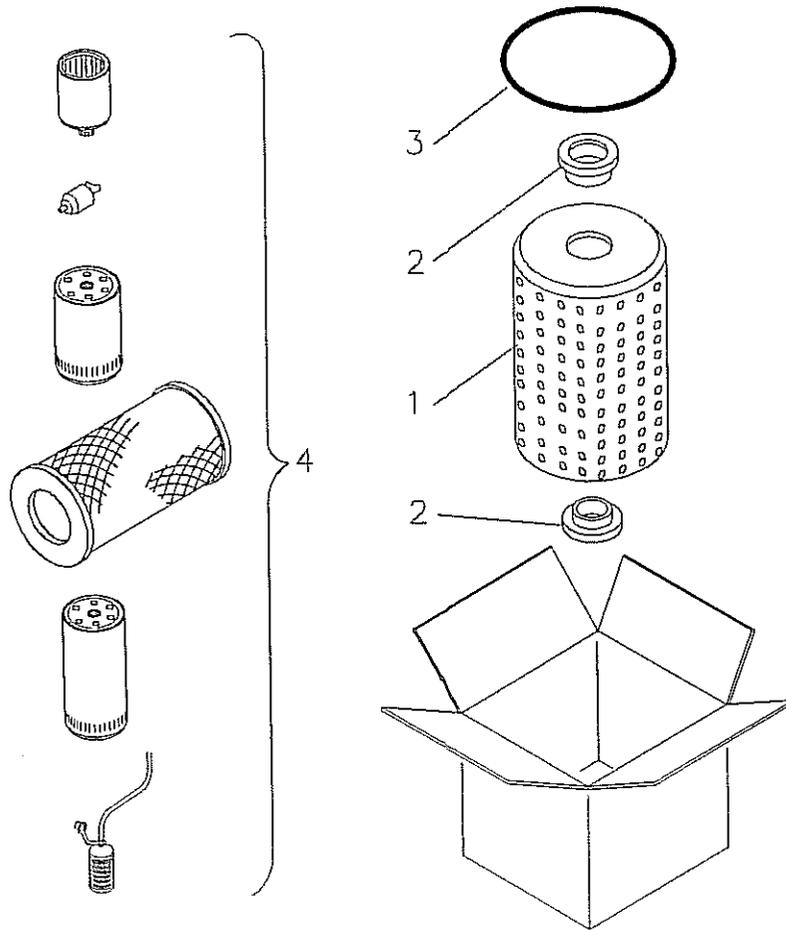

### 35. 1000 Hour Filter Kit

Ref	Part number	Qty	Name	Remarks	Ref	Part number	Qty	Name	Remarks
-	1310 3105 11	1	1000 Hour Kit		4	1310 3105 10	1	500 Hour Kit	
1	-	1	Oil Separator	1					
2	-	2	Seal Ring	1					
3	-	1	O-Ring	1		1310 9042 85		Rev. 00	