


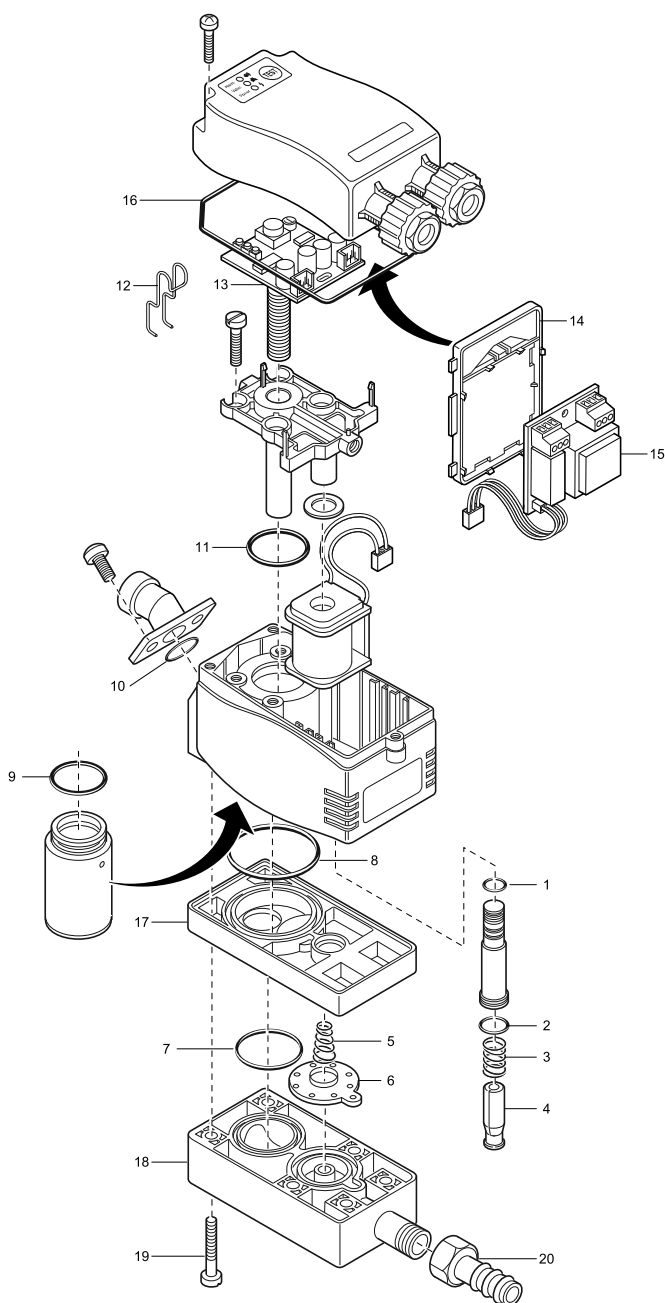


Kit Number	
2901 0673 00	
2901 0674 00	
2901 0675 00	
2901 0676 00	
2901 0677 00	
2901 0678 00	
2901 0679 00	
2901 0680 00	
2901 0681 00	

EWD 50

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	16	17	18	19	20
2901 0673 00	Set of wearing parts		✓	✓	✓	✓	✓	✓	✓		✓								
2901 0674 00	Set of seals	✓	✓					✓	✓	✓	✓	✓			✓				
2901 0675 00	PCB control 230 Vac												✓	✓					
2901 0676 00	PCB control 110 Vac												✓	✓					
2901 0681 00	Diaphragm seat					✓	✓	✓	✓							✓	✓	✓	✓

EWD 50A

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
2901 0673 00	Set of wearing parts		✓	✓	✓	✓	✓	✓	✓		✓										
2901 0674 00	Set of seals	✓	✓					✓	✓	✓	✓	✓					✓				
2901 0677 00	PCB control												✓	✓							
2901 0678 00	PCB control 230 Vac														✓	✓					
2901 0679 00	PCB control 110 Vac														✓	✓					
2901 0680 00	PCB control 24 Vac														✓	✓					
2901 0681 00	Diaphragm seat					✓	✓	✓	✓									✓	✓	✓	✓

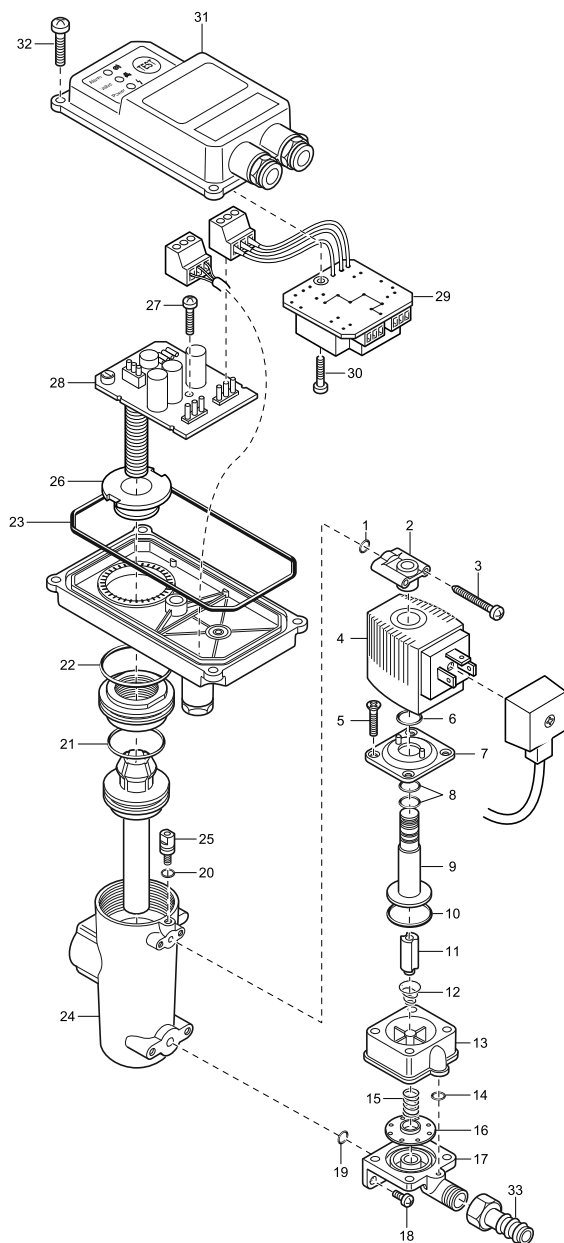

Kit Number	
2901 0619 00	
2901 0620 00	
2901 0621 00	
2901 0622 00	
2901 0623 00	
2901 0624 00	
2901 0625 00	
2901 0626 00	
2901 0627 00	
2901 0628 00	
2901 0629 00	
2901 0630 00	
2901 0631 00	

EWD 75


Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	36
2901 0619 00	Set of wearing parts	✓									✓	✓			✓	✓	✓			✓								
2901 0620 00	Valve mounting parts	✓	✓	✓		✓								✓	✓			✓	✓									✓
2901 0621 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓									
2901 0622 00	Set of seals	✓					✓		✓		✓				✓					✓	✓	✓	✓	✓				
2901 0623 00	Housing complete	✓																		✓	✓	✓			✓	✓	✓	

EWD 75 C

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	36
2901 0619 00	Set of wearing parts	✓									✓	✓			✓	✓	✓			✓								
2901 0625 00	Valve mounting parts	✓	✓	✓		✓								✓	✓			✓	✓									✓
2901 0626 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓									
2901 0622 00	Set of seals	✓					✓		✓		✓				✓					✓	✓	✓	✓	✓				
2901 0628 00	Housing complete	✓																		✓	✓	✓			✓	✓	✓	

EWD 75 C EHP

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	36
2901 0624 00	Set of wearing parts	✓									✓	✓			✓	✓	✓			✓								
2901 0629 00	Valve mounting parts	✓	✓	✓		✓								✓	✓			✓	✓									✓
2901 0630 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓									
2901 0627 00	Set of seals	✓					✓		✓		✓				✓					✓	✓	✓	✓	✓				
2901 0631 00	Housing complete	✓																		✓	✓	✓			✓	✓	✓	

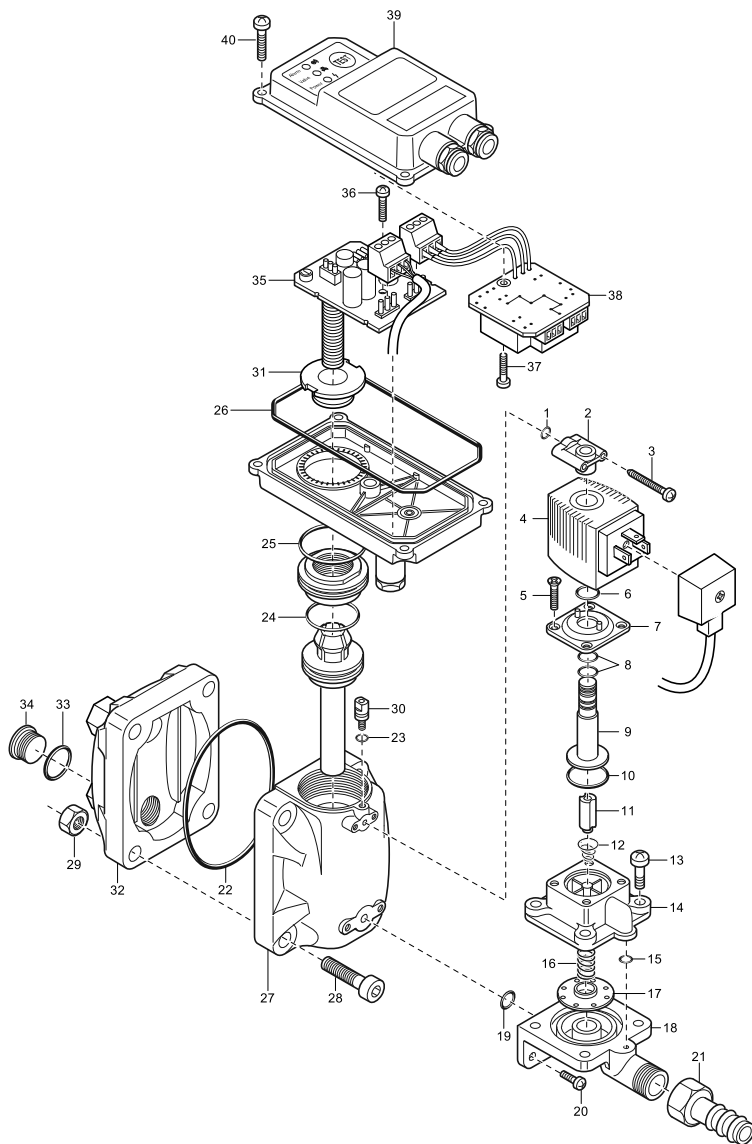

Kit Number	
2901 0633 00	
2901 0634 00	
2901 0635 00	
2901 0636 00	
2901 0637 00	
2901 0638 00	
2901 0640 00	
2901 0641 00	
2901 0643 00	
2901 0644 00	
2901 0646 00	
2901 0647 00	
2901 0649 00	
2901 0650 00	

EWD 330


Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	
2901 0633 00	Set of wearing parts	✓									✓	✓	✓			✓	✓	✓		✓			✓													
2901 0634 00	Valve mounting parts	✓	✓	✓		✓								✓	✓	✓			✓	✓	✓	✓														
2901 0635 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓														
2901 0636 00	Set of seals	✓					✓		✓		✓					✓				✓			✓	✓	✓	✓	✓									
2901 0637 00	Housing complete	✓																		✓			✓	✓	✓			✓	✓	✓	✓	✓				
2901 0638 00	Housing cover																						✓						✓	✓			✓	✓	✓	

EWD 330 C

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
2901 0633 00	Set of wearing parts	✓									✓	✓	✓			✓	✓	✓		✓		✓													
2901 0640 00	Valve mounting parts	✓	✓	✓		✓								✓	✓	✓			✓	✓	✓	✓													
2901 0641 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓													
2901 0636 00	Set of seals	✓					✓		✓		✓					✓				✓			✓	✓	✓	✓	✓								
2901 0643 00	Housing complete	✓																		✓			✓	✓	✓			✓	✓	✓	✓	✓			
2901 0644 00	Housing cover																						✓						✓	✓			✓	✓	✓

EWD 330 C EHP

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
2901 0633 00	Set of wearing parts	✓									✓	✓	✓			✓	✓	✓		✓		✓													
2901 0646 00	Valve mounting parts	✓	✓	✓		✓								✓	✓	✓			✓	✓	✓	✓													
2901 0647 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓													
2901 0636 00	Set of seals	✓					✓		✓		✓					✓				✓			✓	✓	✓	✓	✓								
2901 0649 00	Housing complete	✓																		✓			✓	✓	✓			✓	✓	✓	✓	✓			
2901 0650 00	Housing cover																						✓						✓	✓			✓	✓	✓

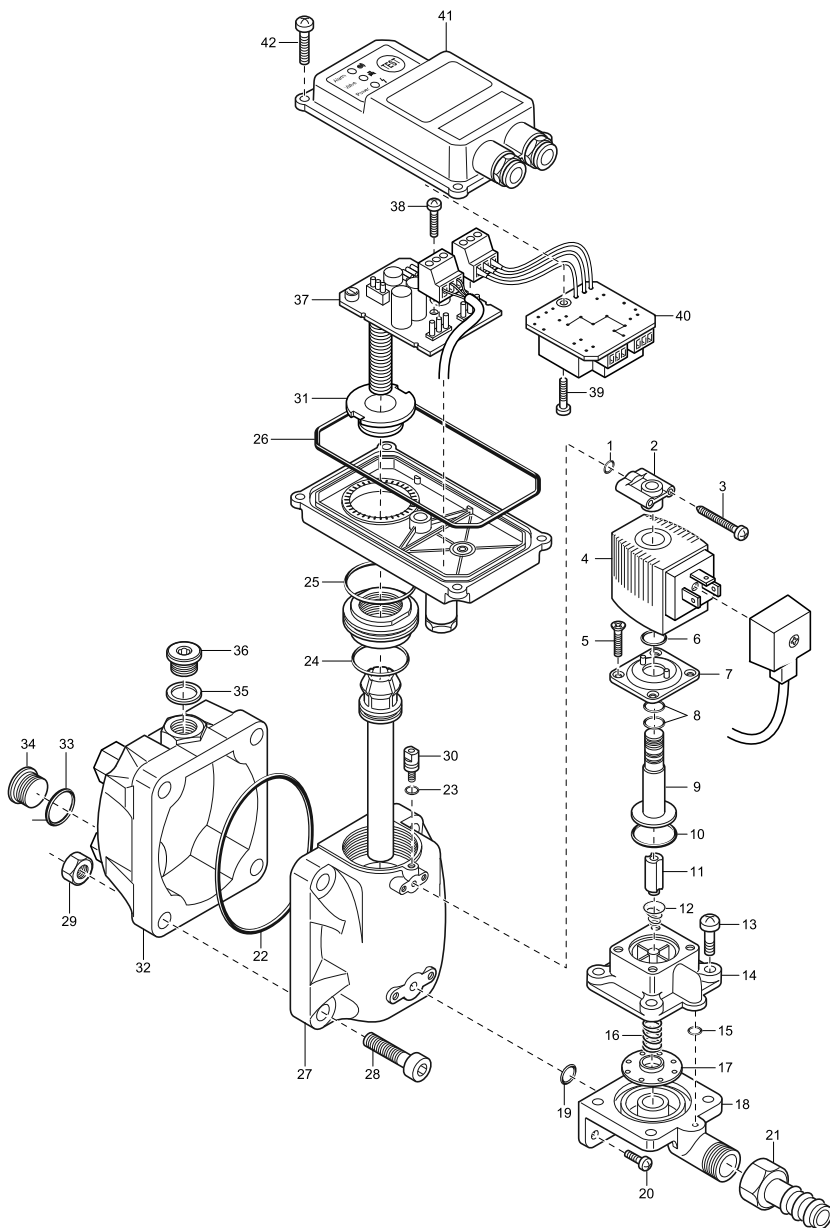


Kit Number	
2901 0634 00	
2901 0635 00	
2901 0640 00	
2901 0641 00	
2901 0645 00	
2901 0652 00	
2901 0653 00	
2901 0654 00	
2901 0656 00	
2901 0657 00	

EWD 1500

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	
2901 0645 00	Set of wearing parts	✓									✓	✓	✓			✓	✓	✓		✓			✓															
2901 0634 00	Valve mounting parts	✓	✓	✓		✓								✓	✓	✓			✓	✓	✓	✓																
2901 0635 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓															
2901 0652 00	Set of seals	✓					✓		✓		✓					✓				✓			✓	✓	✓	✓	✓											
2901 0653 00	Housing complete	✓																				✓		✓	✓	✓	✓	✓										
2901 0654 00	Housing cover																						✓	✓	✓	✓			✓	✓	✓		✓	✓	✓	✓	✓	

EWD 1500 C


Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
2901 0645 00	Set of wearing parts	✓									✓	✓	✓			✓	✓	✓		✓			✓														
2901 0640 00	Valve mounting parts	✓	✓	✓	✓									✓	✓	✓			✓	✓	✓																
2901 0641 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																
2901 0652 00	Set of seals	✓					✓		✓		✓					✓				✓			✓	✓	✓	✓	✓										
2901 0656 00	Housing complete	✓																					✓	✓	✓	✓	✓										
2901 0657 00	Housing cover																						✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓	✓

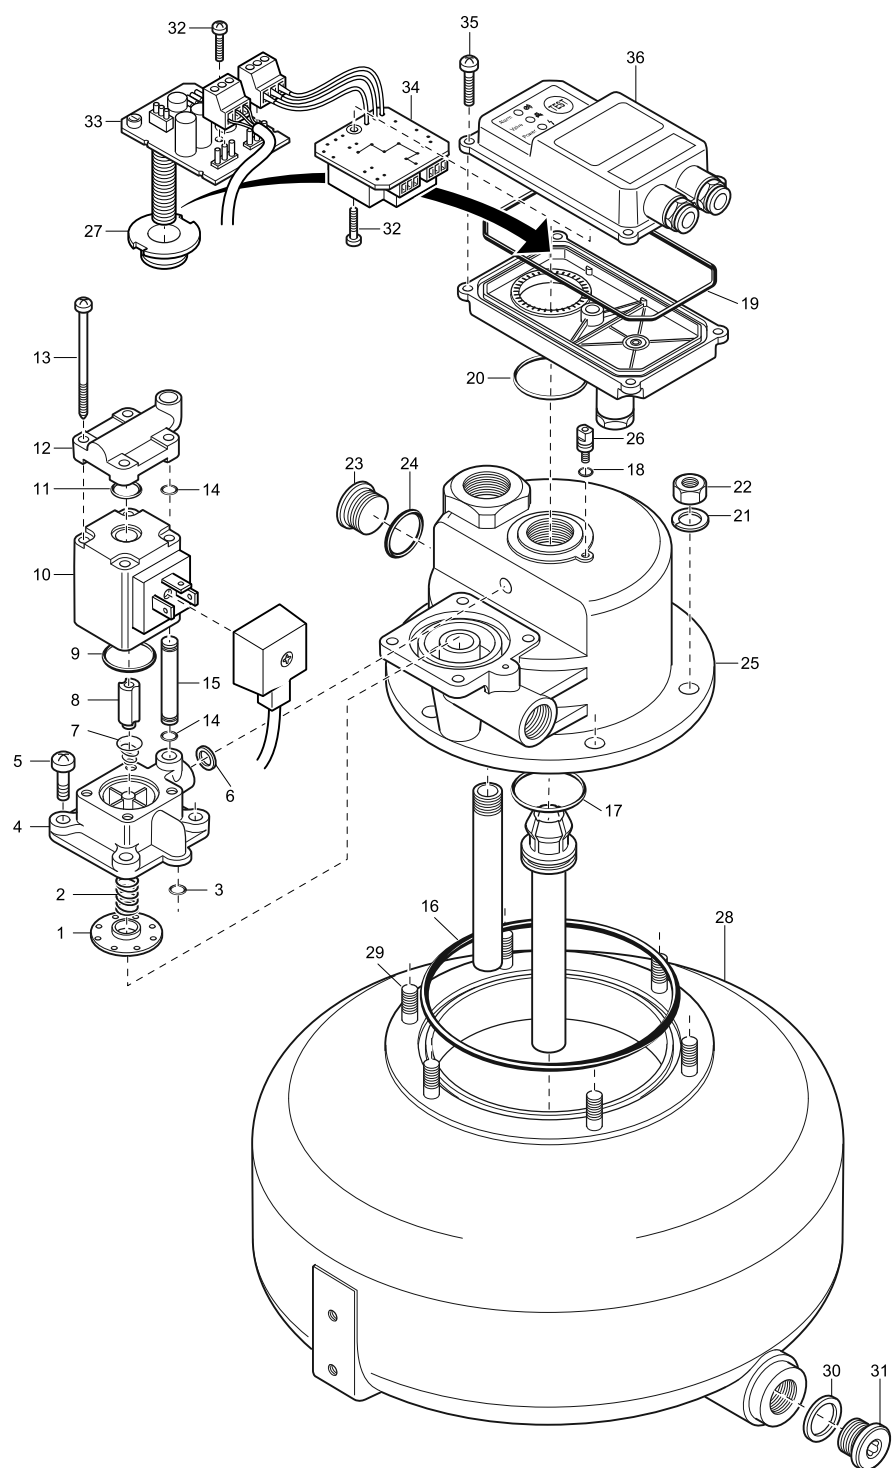

Kit Number	
2901 0659 00	
2901 0660 00	
2901 0661 00	
2901 0662 00	
2901 0663 00	
2901 0664 00	

EWD 16K C

Partnumber	Description	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2901 0659 00	Set of wearing parts	✓	✓	✓			✓	✓	✓	✓																						
2901 0660 00	Valve mounting parts			✓	✓	✓	✓			✓		✓	✓	✓	✓	✓																
2901 0661 00	Valve unit complete	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓																
2901 0662 00	Set of seals			✓			✓			✓		✓			✓		✓	✓	✓	✓												
2901 0663 00	Housing complete																	✓	✓			✓	✓	✓	✓	✓	✓	✓				
2901 0664 00	Housing cover																✓					✓	✓						✓	✓	✓	✓

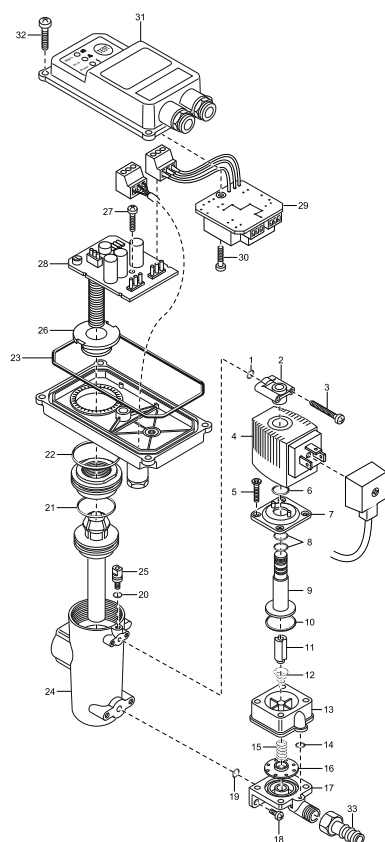


Kit Number	
2901 0616 00	
2901 0617 00	
2901 0618 00	
2901 0670 00	
2901 0671 00	

EWD 75, 75 C, 75 EHP

Partnumber	Description	23	27	28	29	30	31	32	33	34	35
2901 0670 00	PCB control		✓	✓							
2901 0671 00	PCB power 230 Vac				✓	✓					
2901 0616 00	PCB power 110 Vac				✓	✓					
2901 0617 00	PCB power 24 Vac				✓	✓					
2901 0618 00	Top cover complete	✓					✓	✓	✓	✓	✓


Service Kits : EWD 330 – EWD 330 C – EWD 330 C HP

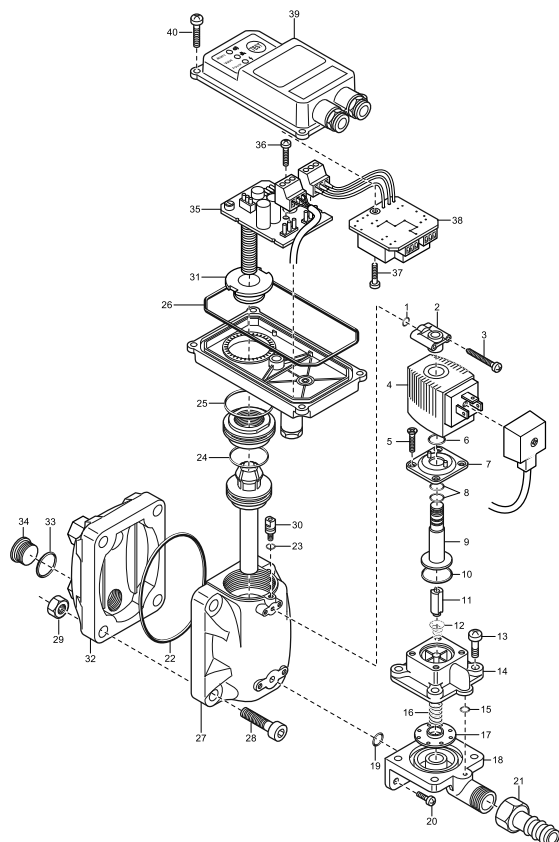

Kit Number	
2901 0616 00	
2901 0617 00	
2901 0618 00	
2901 0632 00	
2901 0671 00	

EWD 330, 330 C, 330 EHP

Partnumber	Description	26	35	36	37	38	39	40	41	42	43
2901 0632 00	PCB control		✓	✓							
2901 0671 00	PCB power 230 Vac				✓	✓					
2901 0616 00	PCB power 110 Vac				✓	✓					
2901 0617 00	PCB power 24 Vac				✓	✓					
2901 0618 00	Top cover complete	✓					✓	✓	✓	✓	✓

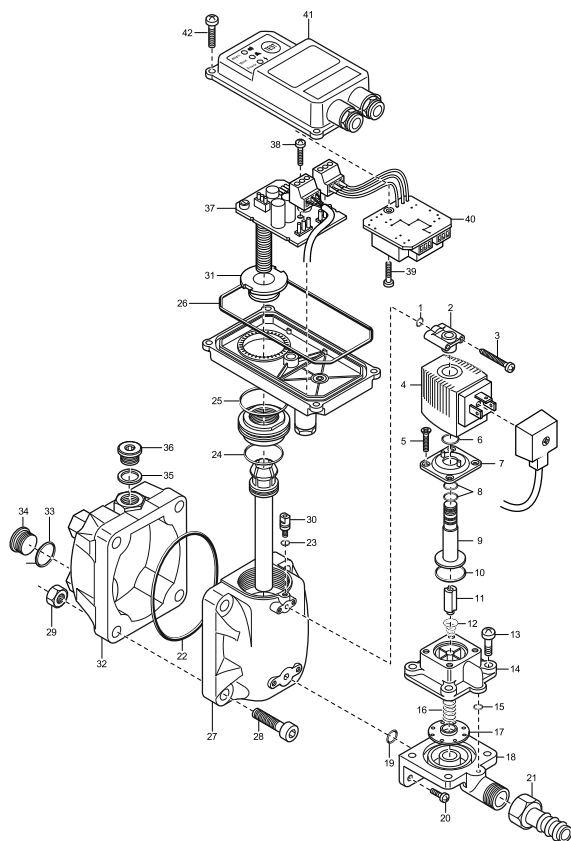


Kit Number	
2901 0616 00	
2901 0617 00	
2901 0618 00	
2901 0651 00	
2901 0671 00	

EWD 1500, 1500 C

Partnumber	Description	26	37	38	39	40	41	42	43	44	45
2901 0651 00	PCB control		✓	✓							
2901 0671 00	PCB power 230 Vac				✓	✓					
2901 0616 00	PCB power 110 Vac				✓	✓					
2901 0617 00	PCB power 24 Vac				✓	✓					
2901 0618 00	Top cover complete	✓					✓	✓	✓	✓	✓

Service Kits : EWD 16K C

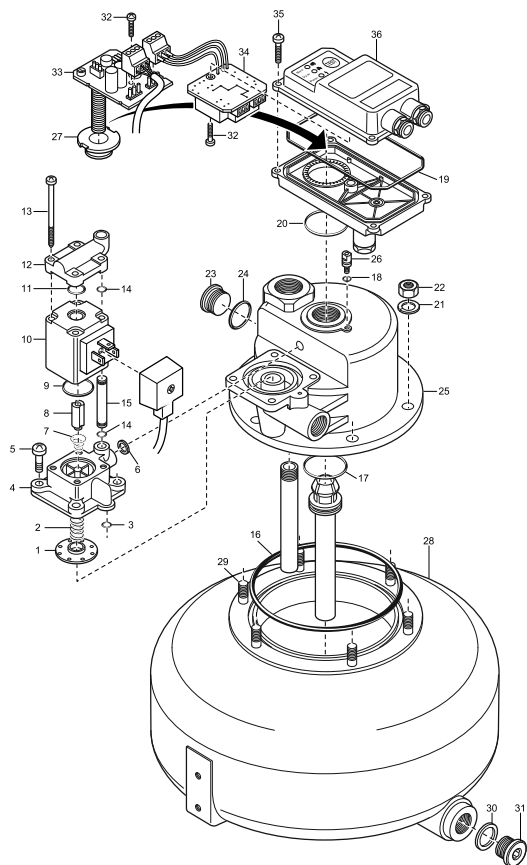

Kit Number	
2901 0616 00	
2901 0617 00	
2901 0618 00	
2901 0658 00	
2901 0671 00	

EWD 16K C

Partnumber	Description	19	32	33	34	35	36	37	38
2901 0658 00	PCB control		✓	✓					
2901 0671 00	PCB power 230 Vac		✓		✓				
2901 0616 00	PCB power 110 Vac		✓		✓				
2901 0617 00	PCB power 24 Vac		✓		✓				
2901 0618 00	Top cover complete	✓			✓	✓	✓	✓	✓