


Atlas Copco

Oil-injected rotary screw air compressors

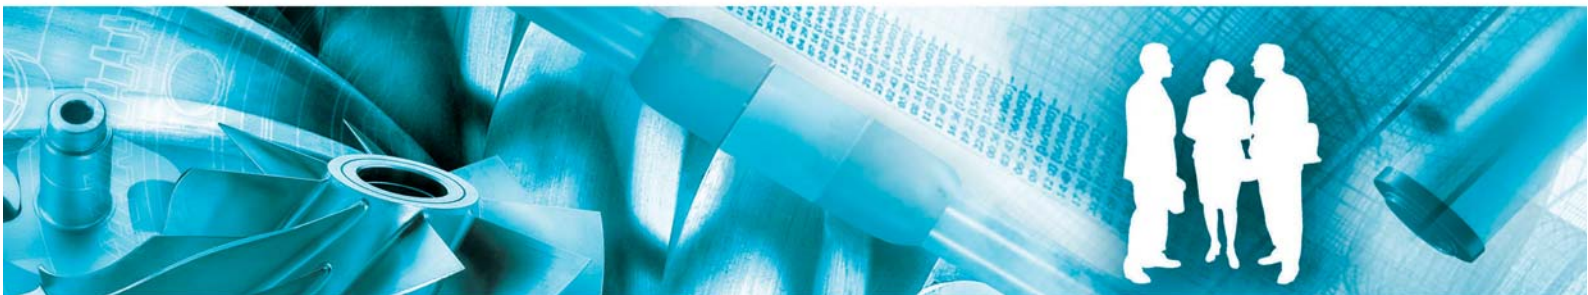

GX^e 7, GX^e 11, GX^e 15S

Parts list



Atlas Copco

Oil-injected rotary screw air compressors

GX^e 7, GX^e 11, GX^e 15S

From following serial No. onwards:
WUX 700 000

Parts list

- Copyright, Atlas Copco Airpower n.v., Antwerp, Belgium.
Any unauthorized use or copying of the contents or any part thereof is prohibited.
This applies in particular to trademarks, model denominations, part numbers and drawings.
- **Use only authorized parts.** Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

2011 - 06

No. 2930 7099 10

www.atlascopco.com

Atlas Copco

en - INSTRUCTIONS FOR USE

1 ORDERING PARTS

Always specify the part number, the name and quantity of the required items, as well as the type and serial number of the machine.

Pages marked with Service symbol -  contain parts of Service kit(s). For complete contents of the kit see chapter “1 - Service kits”.

2 COLUMN INFORMATION

Ref. - Reference number: links a specific listed part to the drawing. Only parts with a reference number are shown in the drawing. Parts in the drawing without a reference number are simply there to illustrate the assembly.

Part number - Part number: if no part number is specified, the component is not available as a spare part. A line shown in bold is an assembly. A part of which the number is followed by a black dot is comprised in the bold printed assembly right above.

“<<< >>>” Directs to another list with the same title as the “Name”.

When the part number of the specific parts is placed below the “Ref.”/“Name” line a choice must be made upon the type/version of the machine.

Qty - Quantity: indicates the number of parts in connection with the corresponding reference number. „AR“ means „As required“: quantity or number to be determined.

Name - Part name: translations of the English names can be found in document “Glossary of part names”.

Remarks - Extra information about the part.

A series of letters can indicate that a particular part has been certified by the specified authorized body, in accordance with the codes or rules of the list.

Measurements are given in millimeters.

zh - 使用说明

1 订购零件

订购零件时必需指定零件号、零件名称、零件数量以及机器的类型和系列号。

在标有维修标记  的页上有维修组件的部分内容。该组件的完整内容请参见章节“1 - 维修组件”“1 - Service kits”。

2 每列内容的说明

Ref. - 图示编号：将零件清单中列出的零件与示意图中的该零件相关联。零件清单中仅显示有图示编号的零件。示意图中没有标注图示编号的零件仅用来在图中帮助示意。

Part number - 零件号：如果某项没有零件号，则该项不可作为零备件供应。以粗体印刷的零件号表示这是一个装置。编号后面有一个黑点的零件包含在其上面以粗体印刷的装置中。

“<<< >>>”表示该装置的零件清单在手册中以同一名称另外分章单列。

如果指定的零件号位于“Ref.”(图示编号)“Name”(零件名称)列上，则订购零件时必须指明机器的类型/版本。

Qty - 数量：显示相应的图示编号的零件个数。“AR”表示“As required”：即根据需要确定数量。

Name - 零件名称：在文件“零件名称对照表”中可以找到对应的英文名称。

Remarks - 零件的附注。

一连串的字母表示某一特定零件依照标准或规定的要求已获得指定授权机构的认证。

Table of contents

1	Service kits	4
2	Drive arrangement	7
3	Air system - Air inlet	15
4	Air system - Unloader assembly	17
5	Air system - Cooling and air outlet - Pack - Floor mounted	19
6	Air system - Cooling and air outlet - Pack - Tank mounted	21
7	Air system - Cooling and air outlet - Full Feature - Tank mounted	23
8	Air system - Full Feature - Air dryer parts - GX ^e 7-FX ⁱ 5	25
9	Air system - Full Feature - Air dryer parts - GX ^e 11-FX ⁱ 7, GX ^e 15S-FX ⁱ 7	27
10	Oil system - Oil separator module	31
11	Regulating system	33
12	Cubicle - IEC	35
13	Bodywork - Compressor - Pack - Floor mounted	39
14	Bodywork - Compressor - Pack - Tank mounted	41
15	Bodywork - Compressor - Full Feature - Tank mounted	43
16	Bodywork - Air dryer - Full Feature - Tank mounted - FX ⁱ 5	45
17	Bodywork - Air dryer - Full Feature - Tank mounted - FX ⁱ 7	47
18	Standard option - Pack - With aftercooler	49


Notes:

Service kits

1

Ref.	Part number	Qty	Name	Remarks
		1	Oil	
	2901 0245 01		ROTO-INJECTFLUID - 5 litres	
	2901 0522 00		ROTO-INJECTFLUID - 20 litres	
	2901 1700 00		Roto Xtend Duty Fluid - 5 Litres	
	2901 1700 01		Roto Xtend Duty Fluid - 20 Litres	
	2901 3501 00	1	Element mounting kit	
	2901 3500 00	1	Shaft seal kit	
	2901 1399 00	1	Minimum Pressure Valve kit	
	0661 1000 44 •	1	Seal washer	
	0663 2105 40 •	1	O-ring	
	1513 0063 00 •	1	Spring	
	1513 0064 00 •	1	Spring	
	1513 0401 01 •	1	Valve disc	
	2904 1015 00 •	1	Minimum pressure valve	
	2901 0298 50	1	Unloader kit	
	1513 0532 00 •	1	Piston	
	1513 0011 00 •	1	Spring	
	1513 0019 00 •	1	Piston ring	
	0663 2105 13 •	1	O-ring	
	1513 0015 00 •	1	Spring	
	0663 6129 00 •	1	O-ring	
	0663 7132 00 •	1	O-ring	
	0335 2130 00 •	1	Circlip	
	0335 2136 00 •	1	Circlip	
	1513 0028 01 •	1	Gasket	
	1513 0434 00 •	1	Valve	
	1613 9010 00 •	1	Gasket	
		1	Thermostat kit	
	2901 1616 00		38°C	
	2901 1617 00		60°C	
		1	Tropical Thermostat kit - Standard option	
	2901 1618 00		75°C	
	1625 0056 90	1	Air/Oil filter kit	
	1092 2002 81 •	1	Air filter element	
	1092 2002 88 •	1	Oil filter	
	1625 0055 90	1	Oil separator kit	
	1092 2002 89 •	1	Oil separator	
	3002 6000 40	1	Preventive maintenance kit	
	1625 0056 90 •	1	Air/Oil filter kit	
	1625 0055 90 •	1	Oil separator kit	
	2901 1399 00 •	1	MPV kit	
	2901 0298 50 •	1	Unloader kit	

2

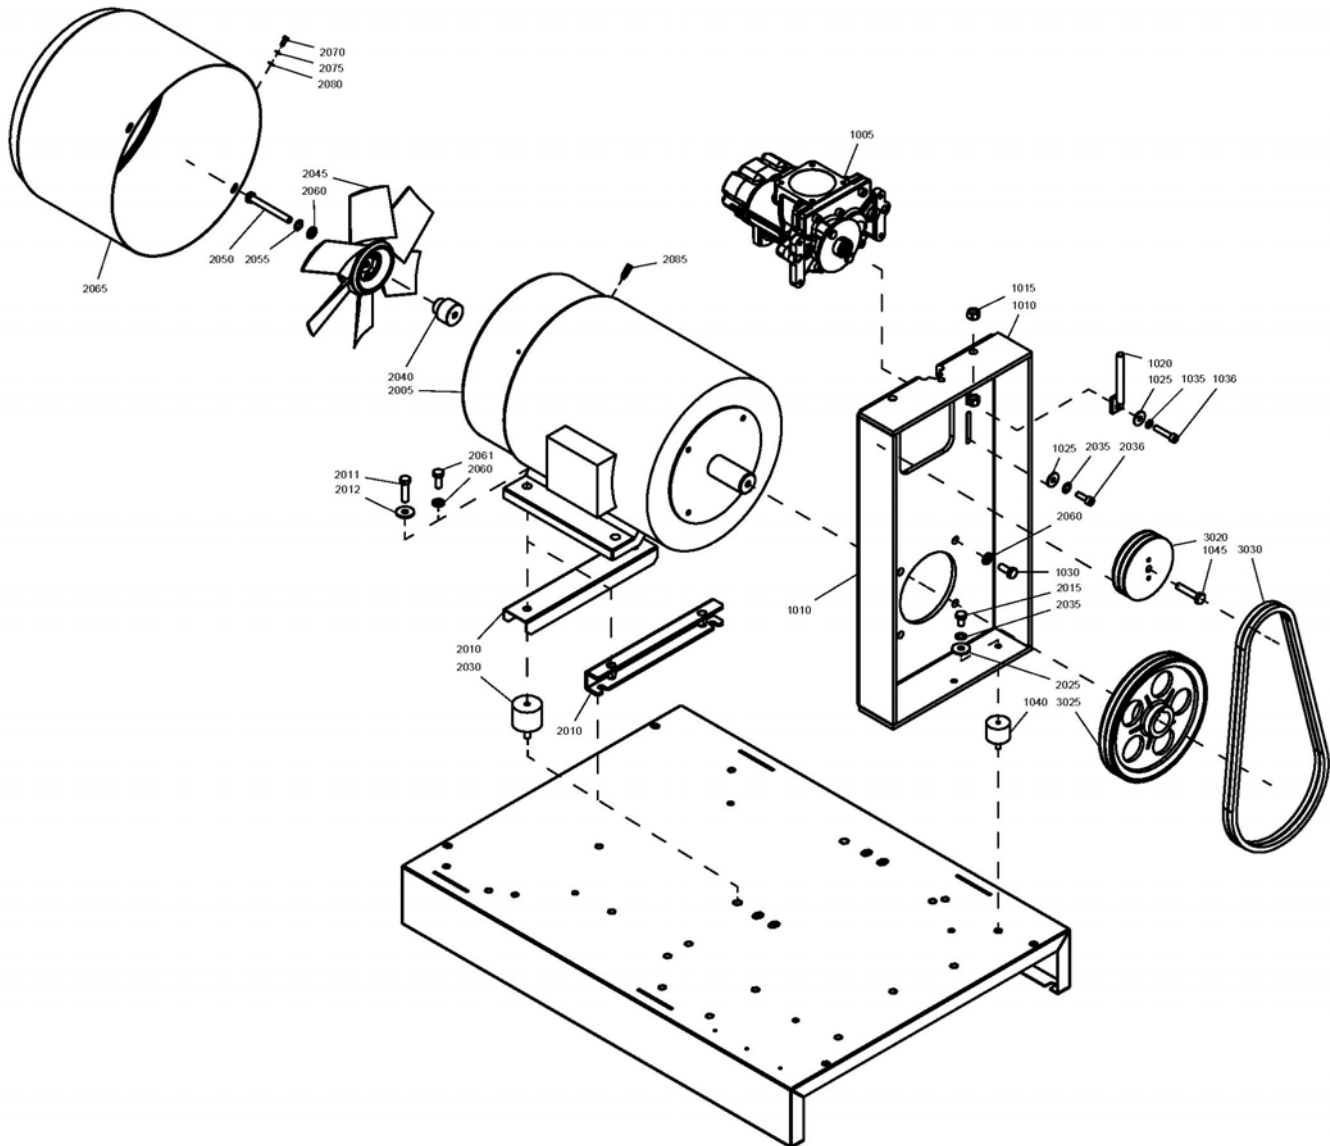


Drive arrangement

2

Ref.	Part number	Qty	Name	Remarks
1005	1616 7535 80	1	Compressor element	
1010		1	Support	
	1092 2000 34		GX ^e 7	
	1092 2000 34		GX ^e 11	
	1092 2000 27		GX ^e 15S	
1015	0266 2112 00	4	Nut	
1020	2202 2600 63	2	Pulling rod	
1025	0300 8019 00	4	Washer	
1030		4	Screw	
	0147 1362 03		GX ^e 7	
	0147 1362 03		GX ^e 11	
	0147 1400 03		GX ^e 15S	
1035	0333 3227 00	4	Washer	
1036	0147 1326 03	1	Bolt	
1040	0392 1100 22	2	Damper	
1045	2202 2500 96	1	Screw	
1050	0574 9910 19	1	Hose assembly	
2005		1	Motor	
	1092 2000 00		GX ^e 7 400V/50Hz	
	1092 2000 01		GX ^e 11 400V/50Hz	
	1092 2000 02		GX ^e 15S 400V/50Hz	
2010		1	Stirrup	
	1092 2000 58		GX ^e 7	
	1092 2000 58		GX ^e 11	
	1092 2000 93		GX ^e 15S	
2011		2	Screw	
	0147 1962 64		GX ^e 7	
	0147 1962 64		GX ^e 11	
2012		2	Washer	
	0300 0274 17		GX ^e 7	
	0300 0274 17		GX ^e 11	
2015		2	Screw	
	0147 1359 03		GX ^e 7	
	0147 1359 03		GX ^e 11	
	0147 1364 03		GX ^e 15S	
2020		2	Washer	
	0333 4232 00		GX ^e 7	
	0333 4232 00		GX ^e 11	
	0301 2344 00		GX ^e 15S	
2021	0211 1325 03	1	Bolt	
2025	0300 0274 17	2	Washer	
2030		2	Damper	
	0392 1100 39		GX ^e 7	
	0392 1100 39		GX ^e 11	
	1092 2000 99		GX ^e 15S	
2040	1092 0096 00	1	Spacer	
2045		1	Fan	
	1092 2001 70		GX ^e 7	
	1092 2001 72		GX ^e 11	
	1092 2001 72		GX ^e 15S	
2050	0147 1375 07	1	Screw	
2055	0333 4232 00	1	Washer	
2060	0301 2344 00	1	Washer	
2061	0147 1362 03	4	Bolt	



2

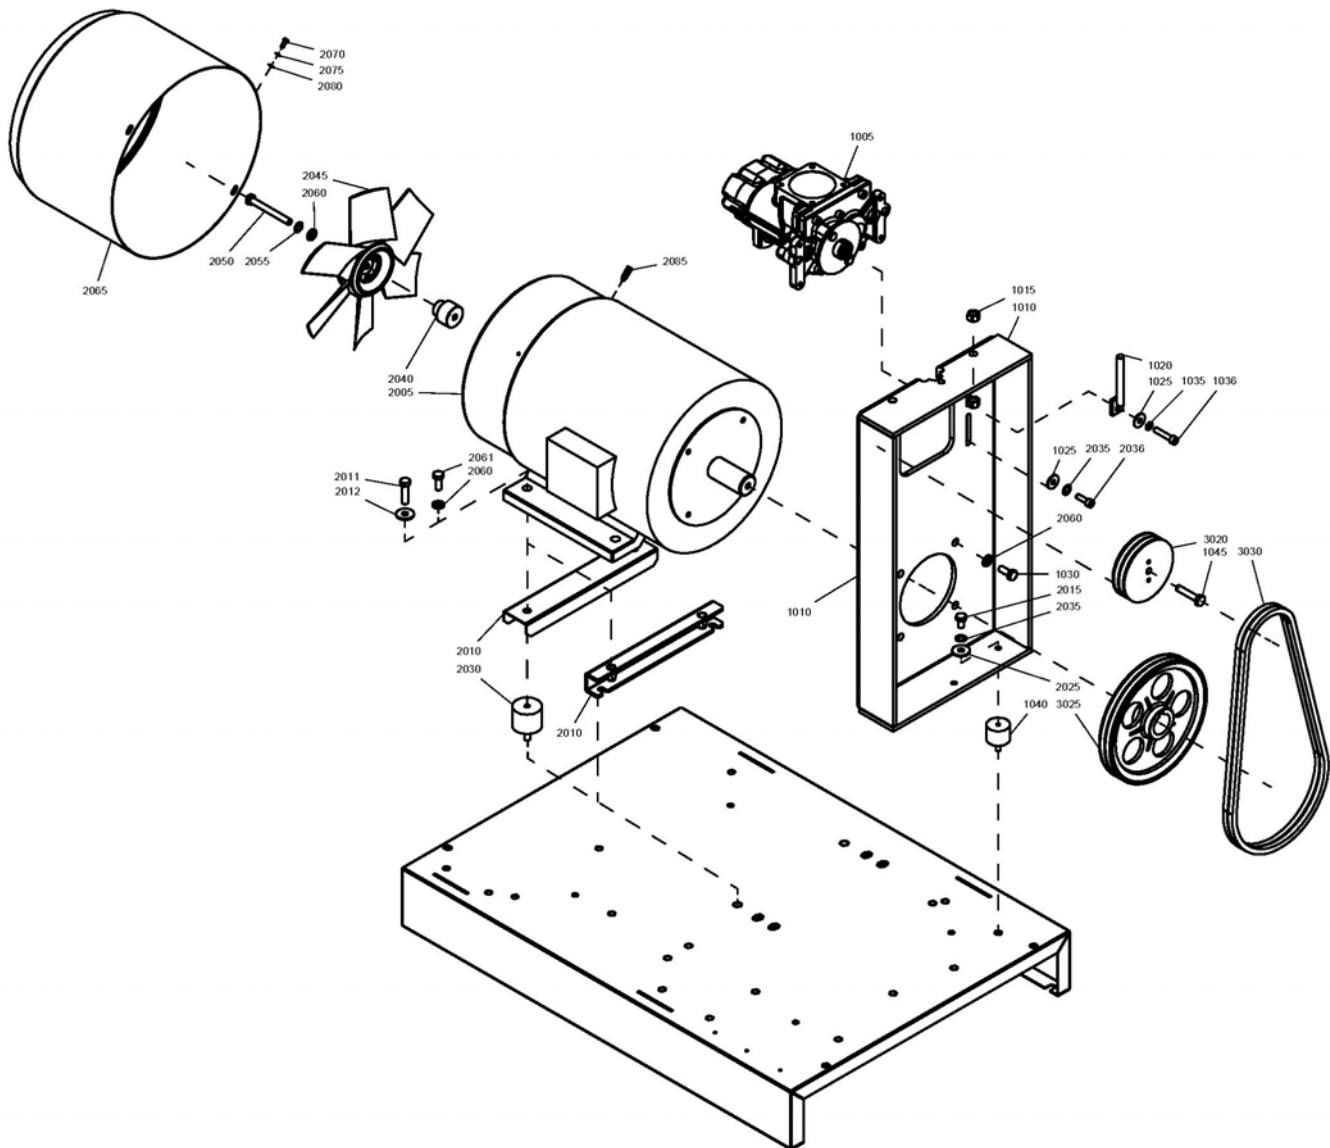


Drive arrangement

2

Ref.	Part number	Qty	Name	Remarks
2065		1	Fan duct	
	1092 2000 98		GX ^e 7	
	1092 2000 81		GX ^e 11	
	1092 2000 65		GX ^e 15S	
2070			Bolt	
	0147 1205 03	3	GX ^e 7	
	0147 1205 03	3	GX ^e 11	
	0147 1205 03	4	GX ^e 15S	
2075			Washer	
	0333 3215 00	3	GX ^e 7	
	0333 3215 00	3	GX ^e 11	
	0333 3215 00	4	GX ^e 15S	
2080			Lock washer	
	0301 2318 00	3	GX ^e 7	
	0301 2318 00	3	GX ^e 11	
	0301 2318 00	4	GX ^e 15S	
2085			Threaded rod	
	1092 2001 01	3	GX ^e 7	
	1092 2000 91	3	GX ^e 11	
	1092 2000 92	4	GX ^e 15S	
2086	0147 1331 03	1	Bolt	
2087	0301 2335 00	1	Washer	
3020		1	Pulley element	
	1092 2004 02		GX ^e 7 7.5bar(e)	
	1092 2004 03		GX ^e 7 8.5bar(e)	
	1092 2004 06		GX ^e 7 10bar(e)	
	1092 2004 01		GX ^e 7 13bar(e)	
	1092 2004 06		GX ^e 11 7.5bar(e)	
	1092 2004 11		GX ^e 11 8.5bar(e)	
	1092 2004 00		GX ^e 11 10bar(e)	
	1092 2004 01		GX ^e 11 13bar(e)	
	1092 2004 00		GX ^e 15S 7.5bar(e)	
	1092 2004 06		GX ^e 15S 8.5bar(e)	
	1092 2004 01		GX ^e 15S 10bar(e)	
	1092 2004 12		GX ^e 15S 13bar(e)	
3025		1	Pulley motor	
	1092 2004 22		GX ^e 7 7.5bar(e)	
	1092 2004 21		GX ^e 7 8.5bar(e)	
	1092 2004 25		GX ^e 7 10bar(e)	
	1092 2004 26		GX ^e 7 13bar(e)	
	1092 2004 22		GX ^e 11 7.5bar(e)	
	1092 2004 21		GX ^e 11 8.5bar(e)	
	1092 2004 27		GX ^e 11 10bar(e)	
	1092 2004 27		GX ^e 11 13bar(e)	
	1092 2004 20		GX ^e 15S 7.5bar(e)	
	1092 2004 20		GX ^e 15S 8.5bar(e)	
	1092 2004 20		GX ^e 15S 10bar(e)	
	1092 2004 20		GX ^e 15S 13bar(e)	
3030			V-belt	
	1092 2001 33	2	GX ^e 7 7.5bar(e)	
	1092 2001 33	1	GX ^e 7 8.5bar(e)	
	1092 2001 50	2	GX ^e 7 10bar(e)	
	1009 2001 50	2	GX ^e 7 13bar(e)	



2

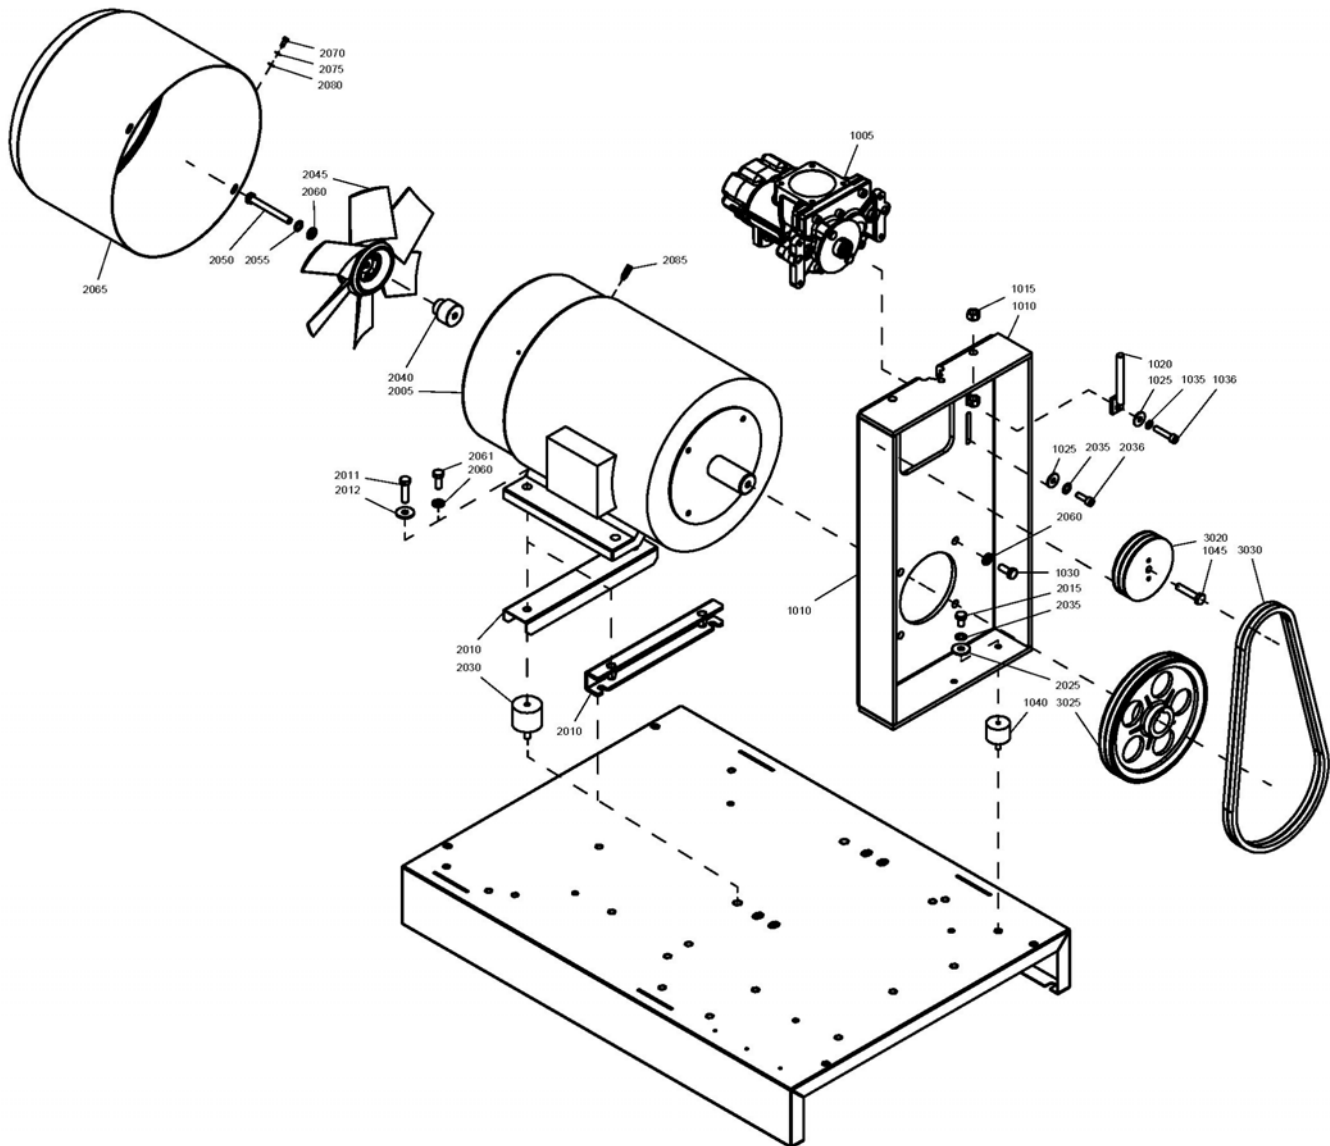


Drive arrangement

2

Ref.	Part number	Qty	Name	Remarks
	1092 2001 51	2	GX ^e 11 7.5bar(e)	
	1092 2001 53	2	GX ^e 11 8.5bar(e)	
	1092 2001 53	2	GX ^e 11 10bar(e)	
	1092 2001 53	2	GX ^e 11 13bar(e)	
	1092 2001 28	2	GX ^e 15S 7.5bar(e)	
	1092 2001 28	1	GX ^e 15S 8.5bar(e)	
	1092 2001 04	1	GX ^e 15S 10bar(e)	
	1092 2001 29	1	GX ^e 15S 13bar(e)	

3

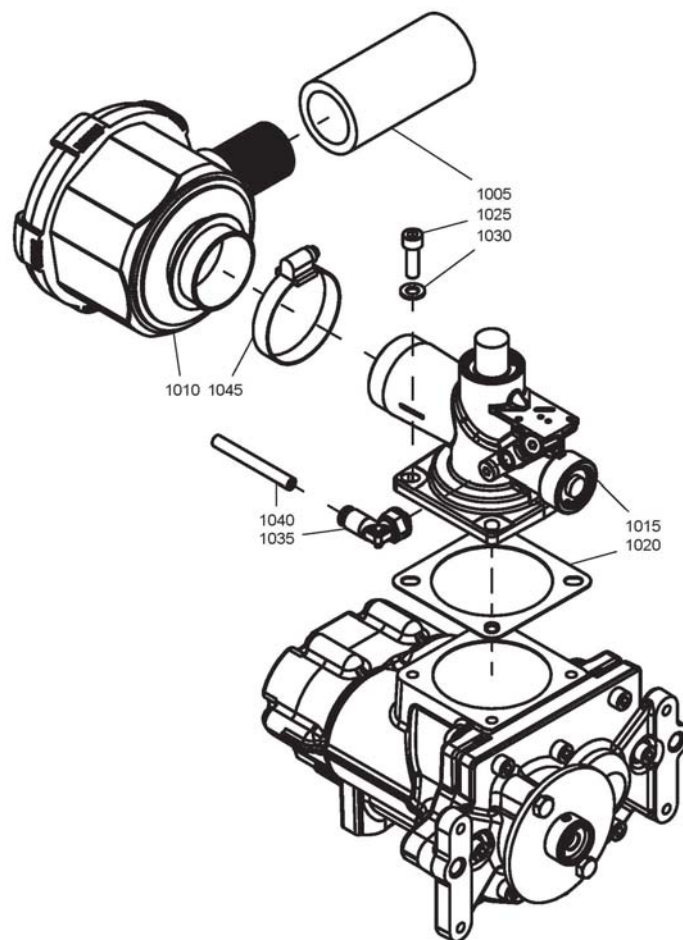


Air system - Air inlet

3

Ref.	Part number	Qty	Name	Remarks
1005	1091 6506 00	1	Air hose	
1010	1092 2002 80	1	Air filter	
	1092 2002 81 •	1	Filter element	
1015	<<< >>>	1	Unloading valve	
1020	2202 8548 00	1	Gasket	
1025	0211 1325 03	4	Hexagon bolt	
1030	0301 2335 00	4	Washer	
1035	0583 8120 64	1	Fitting tube	
1040	0070 6002 09	1	Plastic tube	
1045	0346 6113 00	2	Clamp	



4

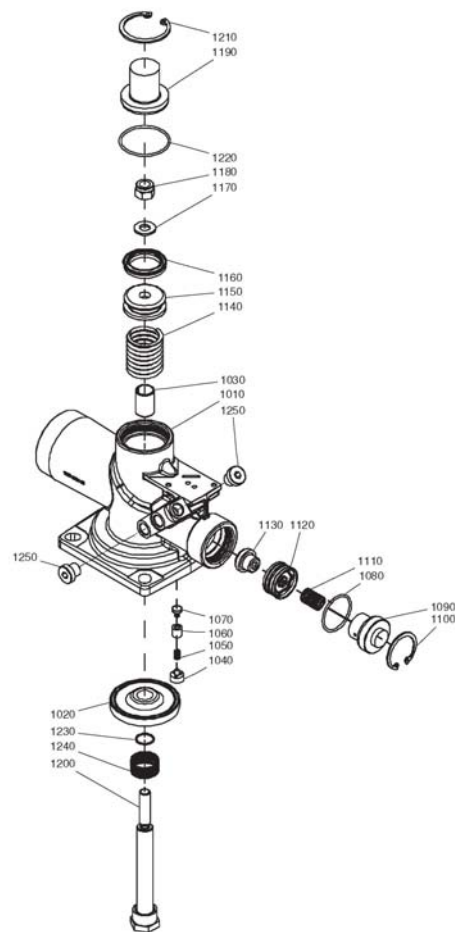


Air system - Unloader assembly

4

Ref.	Part number	Qty	Name	Remarks
	1622 3539 85	1	Unloading valve	
1010	•	1	Housing	
1020	1622 5128 80 •	1	Valve	
1030	1622 5129 00 •	1	Bushing	
1040	1622 5127 00 •	1	Plug	
1050	1622 5126 00 •	1	Spring	
1060	1622 5125 00 •	1	Piston	
1070	1622 5124 00 •	1	Seal	
1080	0663 6129 00 •	1	O-ring	
1090	1622 5121 00 •	1	Cover	
1100	0335 2130 00 •	1	Circlip	
1110	1622 5122 01 •	1	Spring	
1120	1622 4375 00 •	1	Piston	
1130	1622 5123 00 •	1	Seat	
1140	1622 5117 00 •	1	Spring	
1150	1622 5119 00 •	1	Piston	
1160	1622 5118 00 •	1	Ring	
1170	0301 2135 01 •	1	Washer	
1180	5541 5510 00 •	1	Nut	
1190	1622 5120 00 •	1	Cover	
1200	1622 5115 00 •	1	Rod	
1210	0335 2136 00 •	1	Circlip	
1220	0663 7132 00 •	1	O-ring	
1230	0663 2105 13 •	1	O-ring	
1240	1622 5116 00 •	1	Spring	
1250	0686 3718 14 •	2	Plug	



5

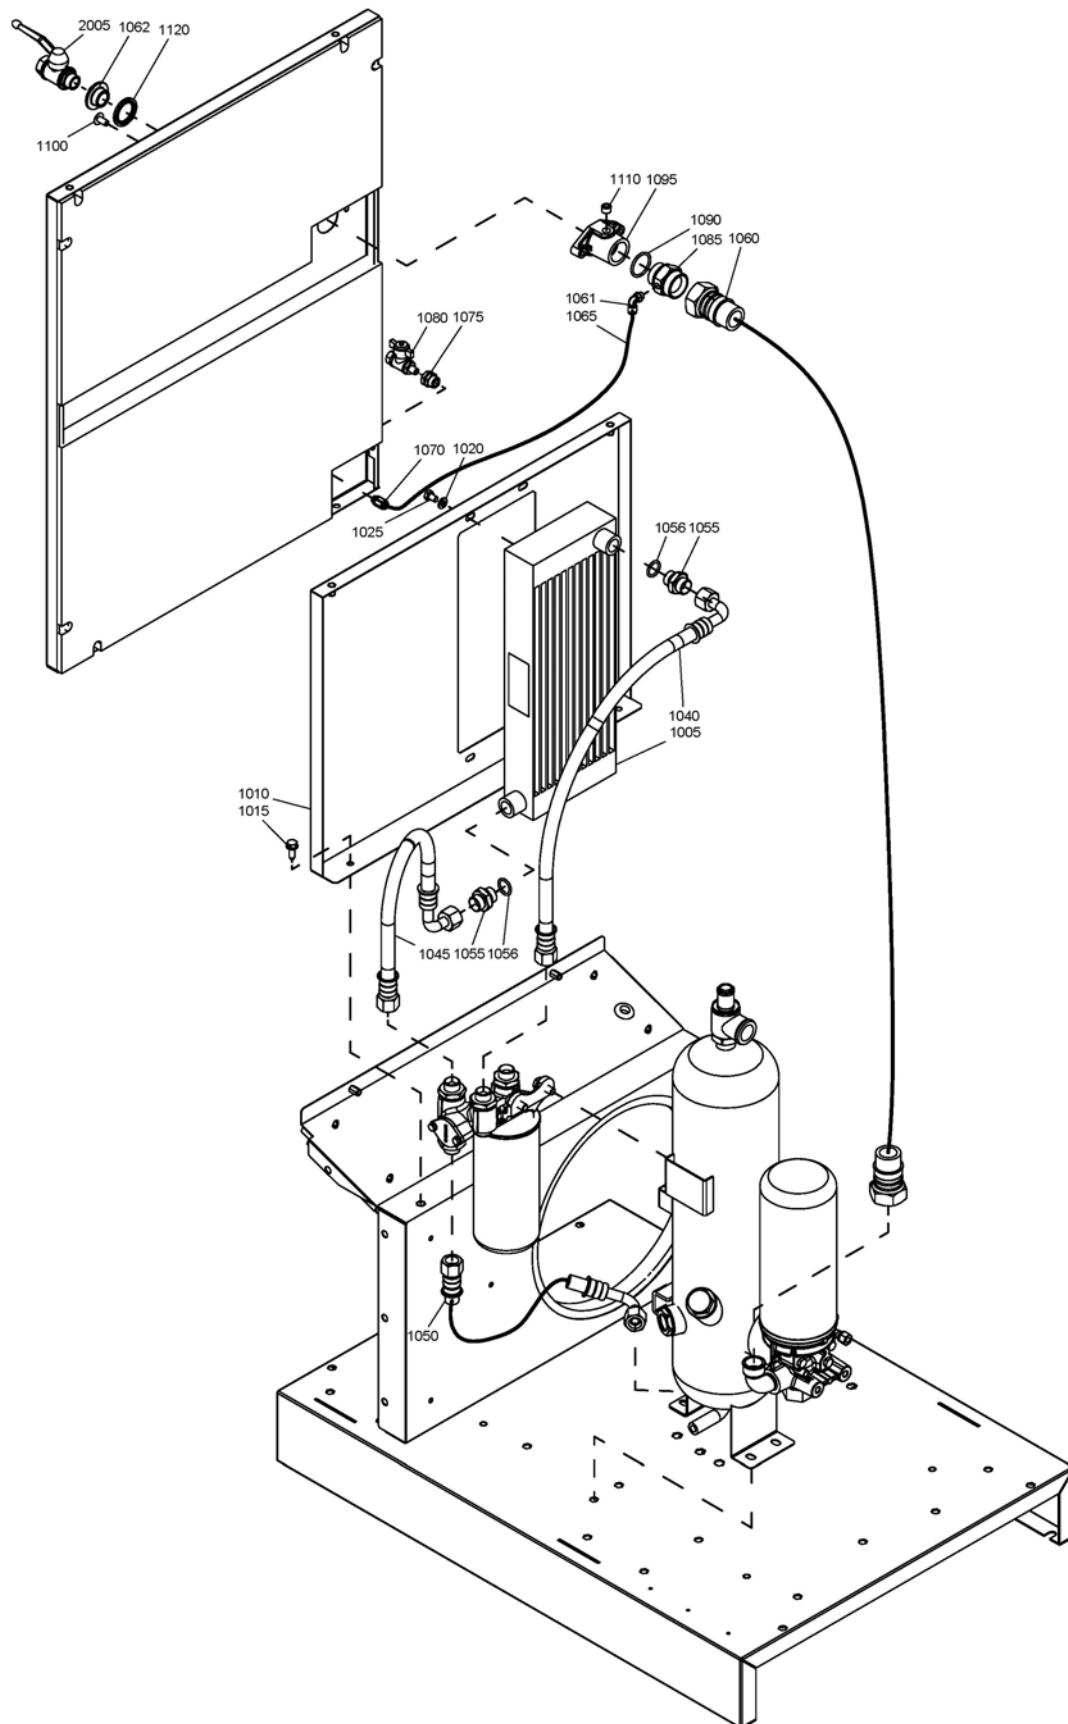


Air system - Cooling and air outlet - Pack - Floor mounted

5

Ref.	Part number	Qty	Name	Remarks
1005		1	Oil cooler	
	1092 0056 73		GX ^e 7	
	1092 0056 75		GX ^e 11	
	1092 0056 77		GX ^e 15S	
1010		1	Support	
	1092 0129 00		GXe 7	
	1092 0129 01		GXe 11	
	1092 0129 02		GXe 15S	
1015	0147 1963 08	2	Bolt	
1020	0301 2335 00	2	Washer	
1025	0147 1320 03	4	Bolt	
1040	0574 9911 14	1	Hose assembly	
1045		1	Hose assembly	
	0574 9911 50		GX ^e 7	
	0574 9911 17		GX ^e 11	
	0574 9911 17		GX ^e 15S	
1050	0574 9911 17	1	Hose assembly	
1055	0571 0035 96	2	Nipple	
1056	0663 3125 00	2	O-ring	
1060	0574 8000 20	1	Hose assembly	
1061	0583 8120 73	1	Elbow	
1062	1092 0123 00	1	Reducer	
1065	0070 6002 04	1	Plastic tube	
1070	0583 8100 66	1	Coupling	
1075	0581 0000 43	1	Coupling	
1080	0852 0010 55	1	Ball valve	
1085	1625 8332 00	1	Nipple	
1090	0663 3130 00	1	O-ring	
1095	1622 2733 00	1	Connector	
1100	0215 0006 14	2	Bolt	
1110	0686 6128 00	1	Plug	
1120	0661 1000 44	1	Seal washer	
2005	0852 0010 14	1	Ball valve	

6

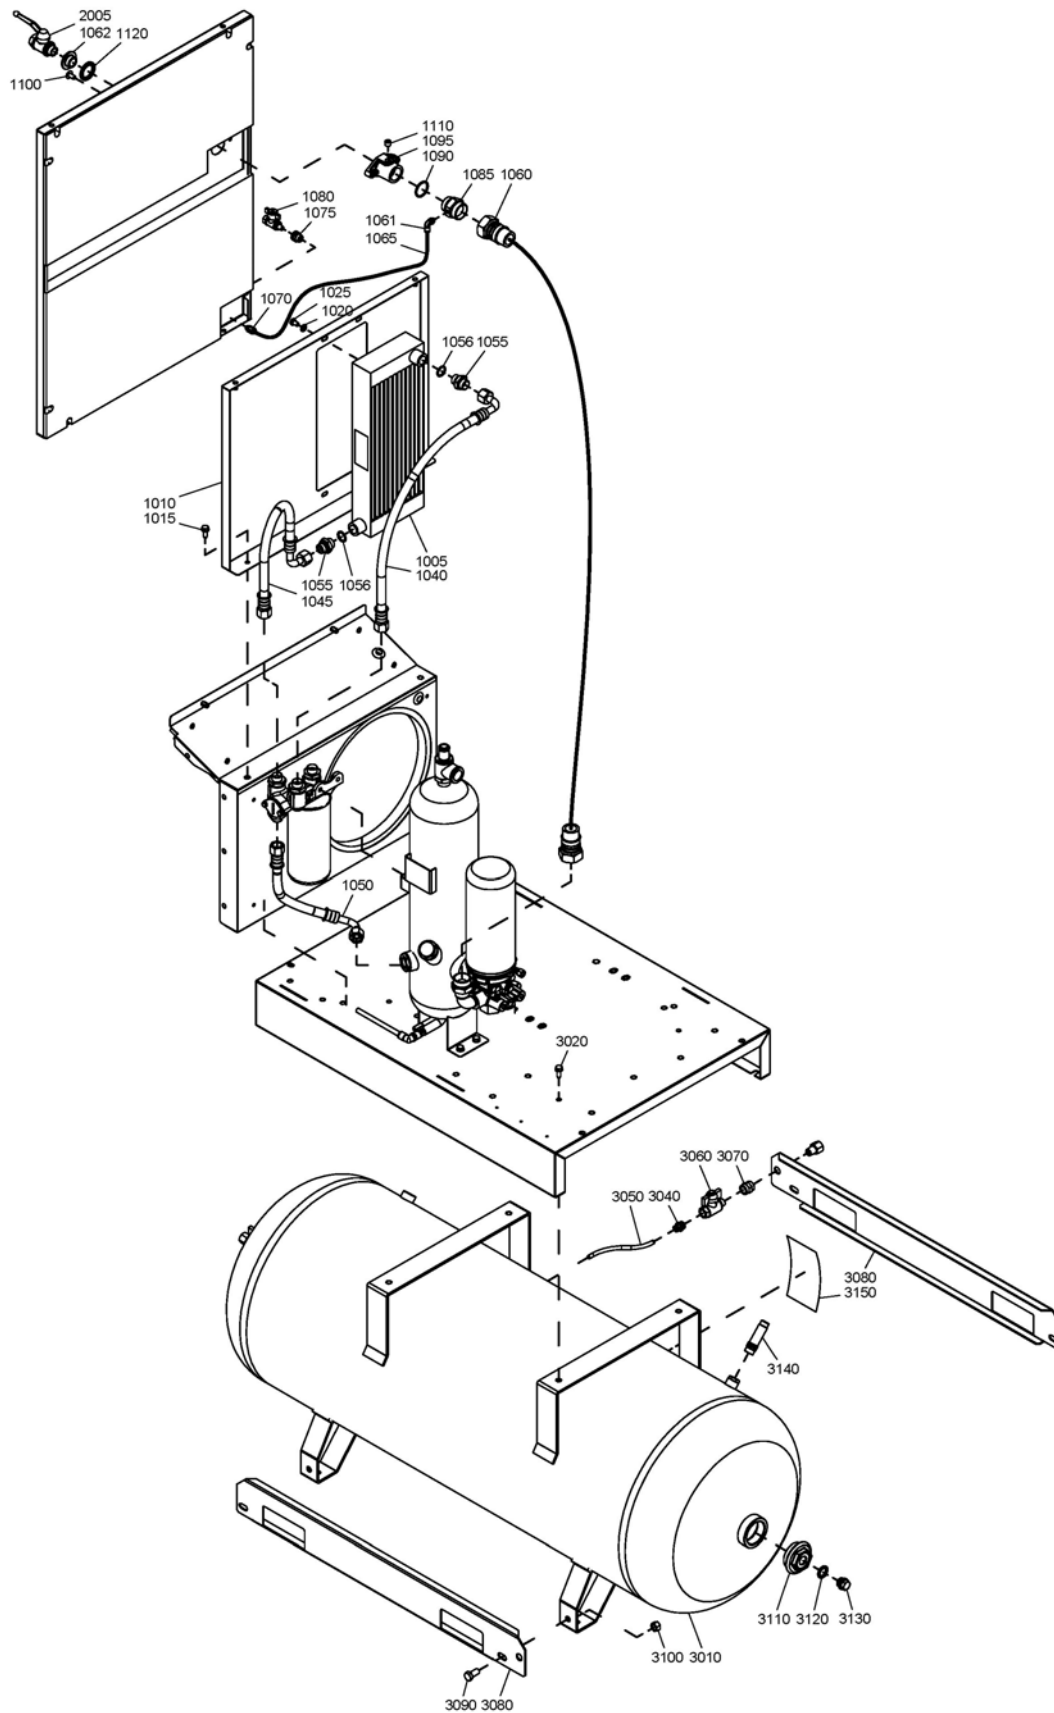


Air system - Cooling and air outlet - Pack - Tank mounted

6

Ref.	Part number	Qty	Name	Remarks
1005		1	Oil cooler	
	1092 0056 73		GX ^e 7	
	1092 0056 75		GX ^e 11	
	1092 0056 77		GX ^e 15S	
1010		1	Support	
	1092 0129 00		GXe 7	
	1092 0129 01		GXe 11	
	1092 0129 02		GXe 15S	
1015	0147 1963 08	2	Bolt	
1020	0301 2335 00	2	Washer	
1025	0147 1320 03	4	Bolt	
1040	0574 9911 14	1	Hose assembly	
1045		1	Hose assembly	
	0574 9911 50		GX ^e 7	
	0574 9911 17		GX ^e 11	
	0574 9911 17		GX ^e 15S	
1050	0574 9911 17	1	Hose assembly	
1055	0571 0035 96	2	Nipple	
1056	0663 3125 00	2	O-ring	
1060	0574 8000 20	1	Hose assembly	
1061	0583 8120 73	1	Elbow	
1062	1092 0123 00	1	Reducer	
1065	0070 6002 04	1	Plastic tube	
1070	0583 8100 66	1	Coupling	
1075	0581 0000 43	1	Coupling	
1080	0852 0010 55	1	Ball valve	
1085	1625 8332 00	1	Nipple	
1090	0663 3130 00	1	O-ring	
1095	1622 2733 00	1	Connector	
1100	0215 0006 14	2	Bolt	
1110	0686 6128 00	1	Plug	
1120	0661 1000 44	1	Seal washer	
2005	0852 0010 14	1	Ball valve	
3010		1	Air receiver	
	1092 2001 11		270 Litres	
	1092 2003 43		500 Litres	1)
3020	0147 1963 08	4	Hexagon bolt	
3030	2202 7505 76	1	Coupling	
3040	0583 8100 63	1	Fitting	
3050	0070 7250 07	1	Plastic tube	
3060	0852 0010 09	1	Ball valve	
3070	0607 1150 08	1	Socket	
3080	2202 8427 00	2	Stirrup	
3090	0147 1400 03	4	Screw	
3100	0266 2112 00	4	Nut	
3110	2200 7506 45	1	Reducer	
3120	0661 1000 39	1	Seal washer	
3130	2200 7509 12	1	Plug	
3140	1092 0019 24	1	Safety valve	
3150	2202 2607 48	1	Label	

1) Standard option „Air receiver 500 Litres“

7

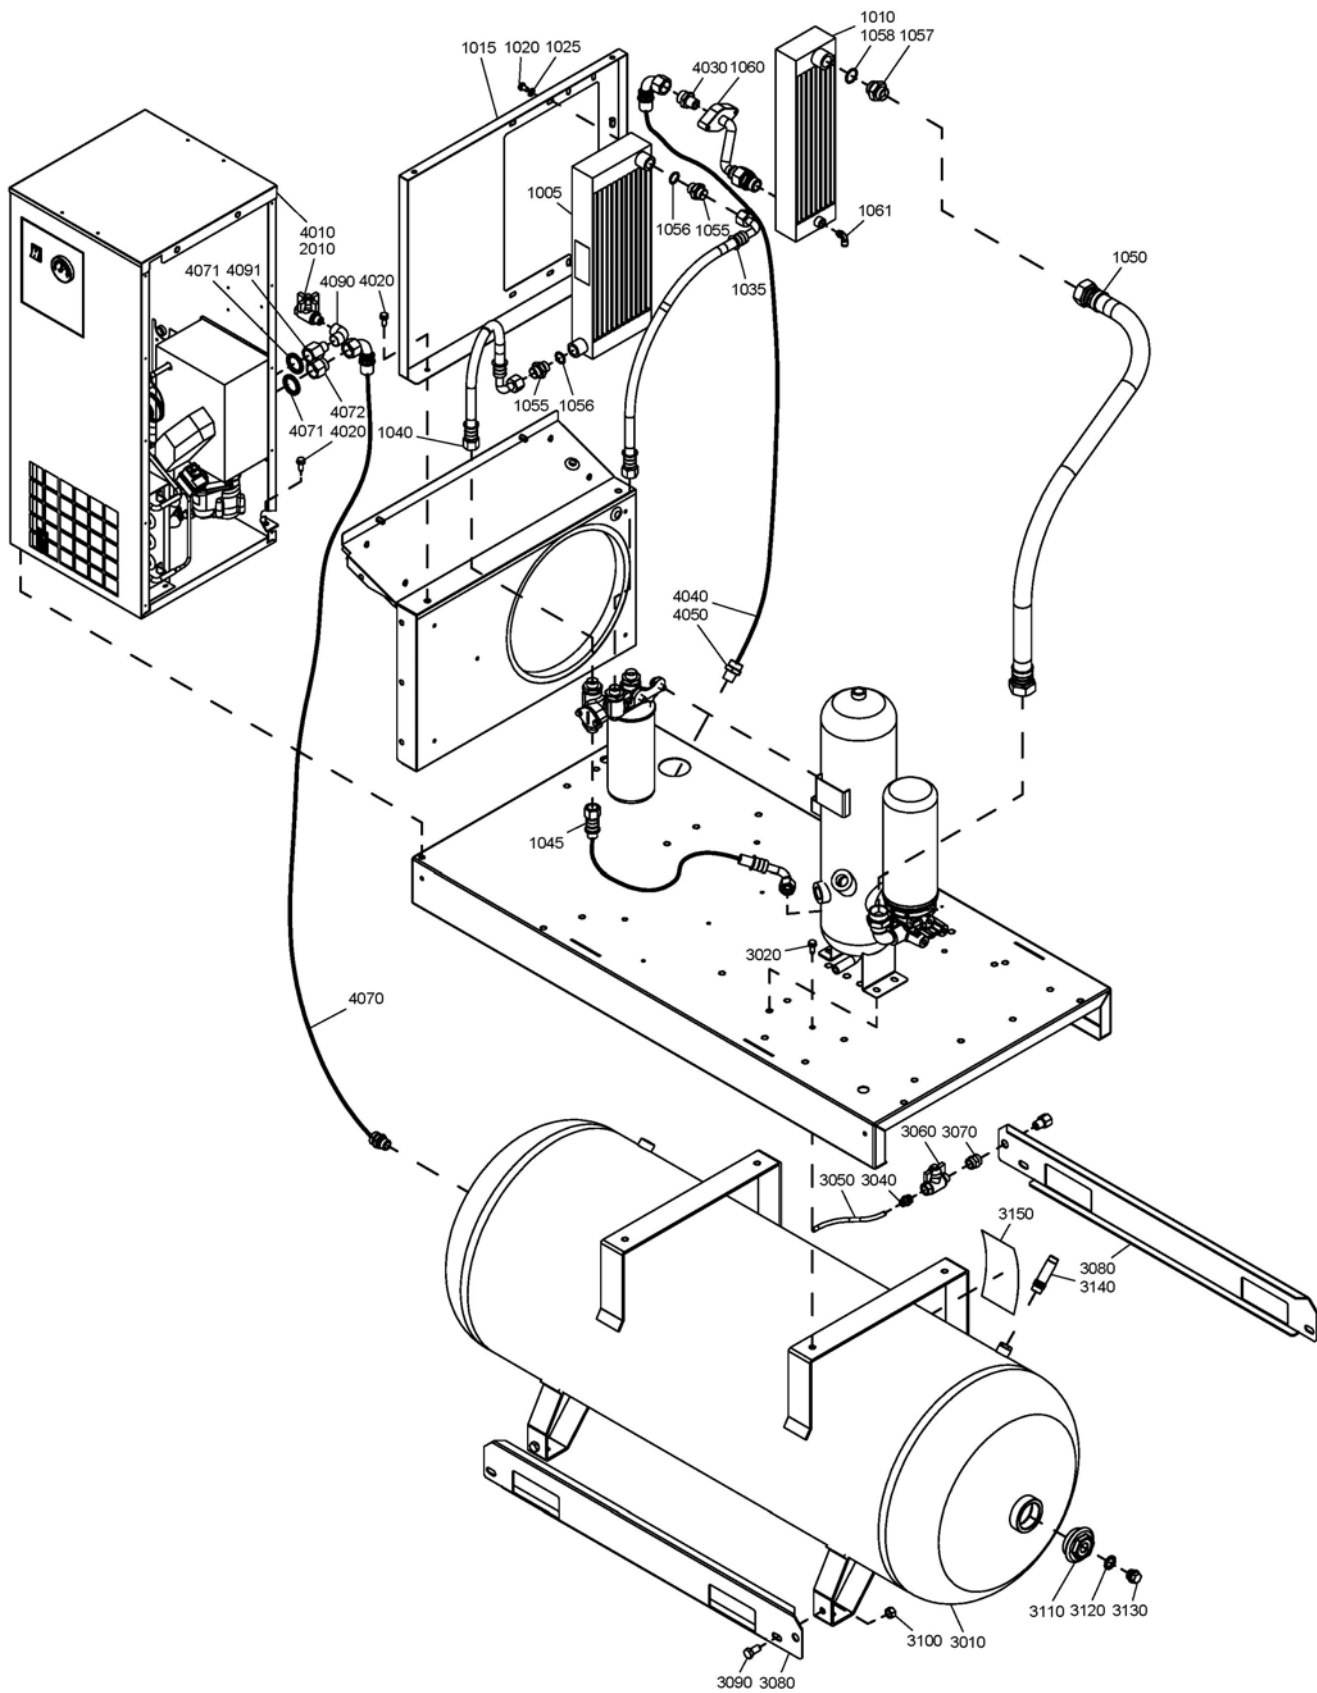


Air system - Cooling and air outlet - Full Feature - Tank mounted

7

Ref.	Part number	Qty	Name	Remarks
1005		1	Oil cooler	
	1092 0056 73		GX ^e 7	
	1092 0056 75		GX ^e 11	
	1092 0056 77		GX ^e 15S	
1010		1	Aftercooler	
	1092 0056 74		GX ^e 7	
	1092 0056 76		GX ^e 11	
	1092 0056 78		GX ^e 15S	
1015		1	Support	
	1092 2000 66		GX ^e 7	
	1092 2000 78		GX ^e 11	
	1092 2000 55		GX ^e 15S	
1020	0147 1320 03	4	Bolt	
1025	0301 2335 00	4	Washer	
1035	0574 9911 14	2	Hose assembly	
1040		1	Hose assembly	
	0574 9911 50		Gxe 7	
	0574 9911 17		Gxe 11	
	0574 9911 17		Gxe 15S	
1045	0574 9911 17	1	Hose assembly	
1050	0574 9910 30	1	Hose assembly	
1055	0571 0035 96	2	Nipple	
1056	0663 3125 00	2	O-ring	
1057	0571 0035 99	1	Nipple	
1058	0663 2113 37	1	O-ring	
1060		1	Metal pipe	
	1092 2001 26		GXe 7	
	1092 2001 35		GXe 11	
	1092 2001 23		GXe 15S	
1061	0583 8120 73	1	Elbow	
3010		1	Air receiver	
	1092 2001 11		270 Litres	
	1092 2003 43		500 Litres	1)
3020	0147 1963 08	4	Hexagon bolt	
3030	2202 7639 01	1	Coupling	
3040	0583 8100 63	1	Fitting	
3050	0070 7250 07	1	Plastic tube	
3060	0852 0010 09	1	Ball valve	
3070	0607 1150 08	1	Socket	
3080	2202 8427 00	2	Stirrup	
3090	0147 1400 03	4	Screw	
3100	0266 2112 00	4	Nut	
3110	2200 7506 45	1	Reducer	
3120	0661 1000 39	1	Seal washer	
3130	2200 7509 12	1	Plug	
3140	1092 0019 24	1	Safety valve	
3150	2202 2607 48	1	Label	
4010		1	Air dryer	
	<<< >>>		GX ^e 7-FX ⁱ 5	
	<<< >>>		GX ^e 11-FX ⁱ 7	
	<<< >>>		GX ^e 15S-FX ⁱ 7	

7

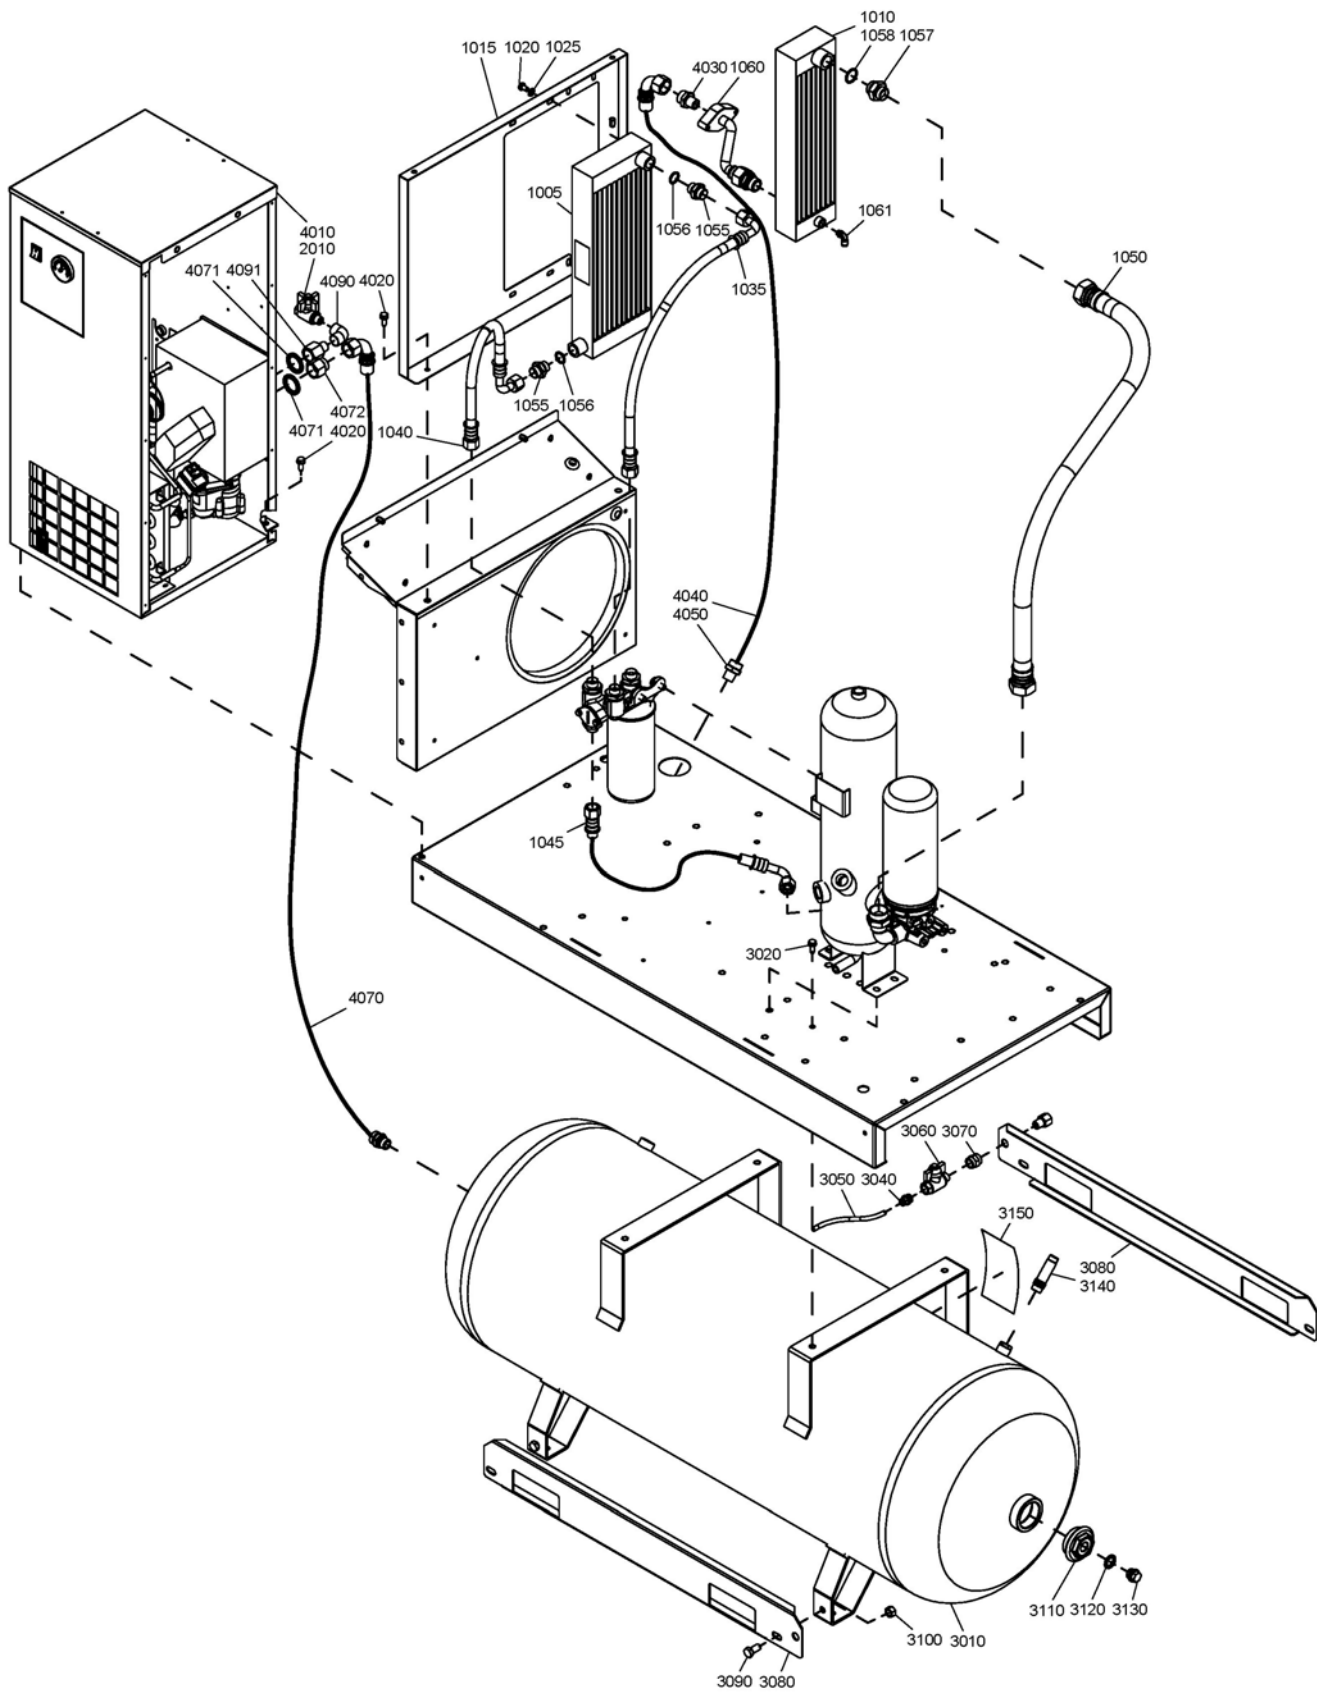

Air system - Cooling and air outlet - Full Feature - Tank mounted

7

Ref.	Part number	Qty	Name	Remarks
4020	0147 1963 08	6	Hexagon bolt	
4030	0571 0035 55	1	Nipple	
4040	0574 8000 17	1	Hose assembly	
4050	0571 0035 55	1	Nipple	
4060	0571 0035 36	1	Nipple	
4070		1	Hose assembly	
	0574 8000 19		FXi 5	
	1092 0030 26		FXi 7	
4071		2	Seal washer	
	0661 1000 44		FXi 7	
4072		1	Bushing	
	0571 0035 37		FXi 5	
	1079 5840 22		FXi 7	
4080	0571 0036 37	1	Nipple	
4090	1092 0104 00	1	Elbow	
4091		1	Bushing	
	0605 8549 42		FXi 5	
	1092 0123 00		FXi 7	

1) Standard option „Air receiver 500 Litres“

8

Air system - Full Feature - Air dryer parts - GX^e 7-FXⁱ 5

8

Ref.	Part number	Qty	Name	Remarks
	8102 4935 77	1	Air dryer	
	<<< >>> •	1	Bodywork	
1010	0017 9862 67 •	AR	Tape aluminium	
1020	0070 6002 49 •	AR	Plastic tube	
1040	0129 3121 00 •	2	Blind rivet	
1050	0266 2108 00 •	3	Nut	
1070	0300 0274 64 •	2	Washer	
1080	0333 3220 00 •	4	Lock washer	
1090	0348 0101 20 •	6	Cable tie	
1100	2200 5997 43 •	1	Check valve+pipe	
1110	2200 7199 53 •	1	Screw	
1120	1624 6064 41 •	1	Warning label	
1140	2200 6598 59 •	AR	Insulation tape	
1150	2202 7605 01 •	4	Snup-on fasteners	
1180	2202 7703 81 •	1	Pipe fitting kit	
	2202 7618 00 ••	2	Straight coupling	
	2202 7719 01 ••	2	Washer rubber	
1200	0129 3108 00 •	4	Rivet	
2010	0698 5141 21 •	1	Cable gland	
2040	2200 7099 06 •	1	Terminal cap	
2050	1624 6606 56 •	1	Compressor	
2060	1624 6411 36 •	1	Capacitor	
2070	1624 6074 65 •	3	Spacer	
2080	1624 6074 62 •	1	Condenser	
2090	1617 2381 81 •	1	Fan ass'y	
	1617 1314 01 ••	1	Fan	
	1617 1315 01 ••	1	Fanmotor	
	1617 1316 01 ••	1	Fangrating	
2110	2202 7547 01 •	1	Electric drain ED 12	
	2202 7719 01 ••	2	Rubber washer	
	0663 9096 00 ••	1	O-ring	
2120	2202 7569 04 •	1	Filter	
2140	1624 6076 55 •	1	Capillary	
2150	1624 6411 38 •	1	Wiring set	
2160	2200 6006 78 •	1	Pressure switch	
2170	1624 6720 28 •	1	Insulation hose	
	1624 6712 81 •	1	Heat exchanger assy	
3010	••	1	Insulation	
3020	••	1	Insulation	
3030	2202 7618 00 ••	1	Straight coupling	
3040	1624 9344 00 ••	1	Heat exchanger	
4010	1624 6712 01 •••	1	Air inlet pipe	
4020	1624 6712 02 •••	1	Air outlet pipe	
4030	1624 6712 03 •••	1	Freon outlet pipe	
4040	1624 6712 04 •••	1	Freon inlet pipe	
4050	1624 6712 05 •••	1	Water separator	
	1624 6248 48 •	1	Pipe	
5010	1624 6075 39 ••	1	Pipe set	
5020	2202 7324 04 ••	1	HGB valve	
5030	1624 6075 94 ••	1	Pipe assy	


9

Air system - Full Feature - Air dryer parts - GX^e 11-FXⁱ 7, GX^e 15S-FXⁱ 7

9

Ref.	Part number	Qty	Name	Remarks
	8102 4935 85	1	Air dryer	
	<<< >>> •	1	Bodywork	
1020	0147 3000 10 •	3	Hexagon bolt	
1030	1624 9853 00 •	1	Support	
1040	0301 2321 00 •	3	Washer	
1050	0291 1128 16 •	3	Lock nut	
2010	1624 9848 00 •	1	Heat exchanger	
2020	•	1	Insulation	
3020	1624 9834 03 •	1	Condenser	
3030	0129 3270 46 •	4	Rivet	
3040	0301 2321 00 •	2	Washer	
3050	0291 1128 16 •	2	Lock nut	
3060	1624 9857 00 •	1	Pipe assy	
3070	1624 9872 00 •	1	Pipe assy	
3080	1624 9873 00 •	1	Pipe assy	
3090	1624 2486 03 •	1	HGB valve	
3100	2202 7466 01 •	1	Sleeve	
3110	2202 7466 02 •	1	Nut	
3120	1617 0092 03 •	1	Ring	
3150	1617 0092 03 •	1	Ring	
3160	1624 9902 01 •	1	Capillary	
	2202 7466 10 ••	1	Sleeve	
	2202 7466 02 ••	1	Nut	
3170	0017 9862 67 •	AR	Insulation tape	
3180	1624 2465 00 •	1	Filter dryer	
4010	1624 9815 01 •	1	Compressor	
4020	1624 9901 00 •	3	Bushing	
4030	0301 2321 00 •	3	Washer	
4040	0291 1128 16 •	3	Lock nut	
4050	1624 2725 02 •	3	Capacitor	
4060	2202 7373 01 •	1	Fan	
4070	0215 0003 91 •	4	Bolt	
4080	0333 3220 00 •	4	Lock washer	
4090	0300 0274 64 •	4	Washer	
4100	1624 9622 00 •	1	Fan switch	
4110	1089 9139 16 •	1	HP switch	
4120	1624 9897 02 •	1	Wiring harness	
4130	9827 9886 00 •	1	Service diagram	
4140	2202 7618 00 •	1	Straight coupling	
4150	0348 0110 03 •	5	Anchor	
4160	0129 3121 00 •	5	Blind rivet	
4170	0348 0101 13 •	10	Cable tie	
5010	2202 7547 03 •	1	Electric drain ED 12	
	0663 9096 00 ••	1	O-ring	

10

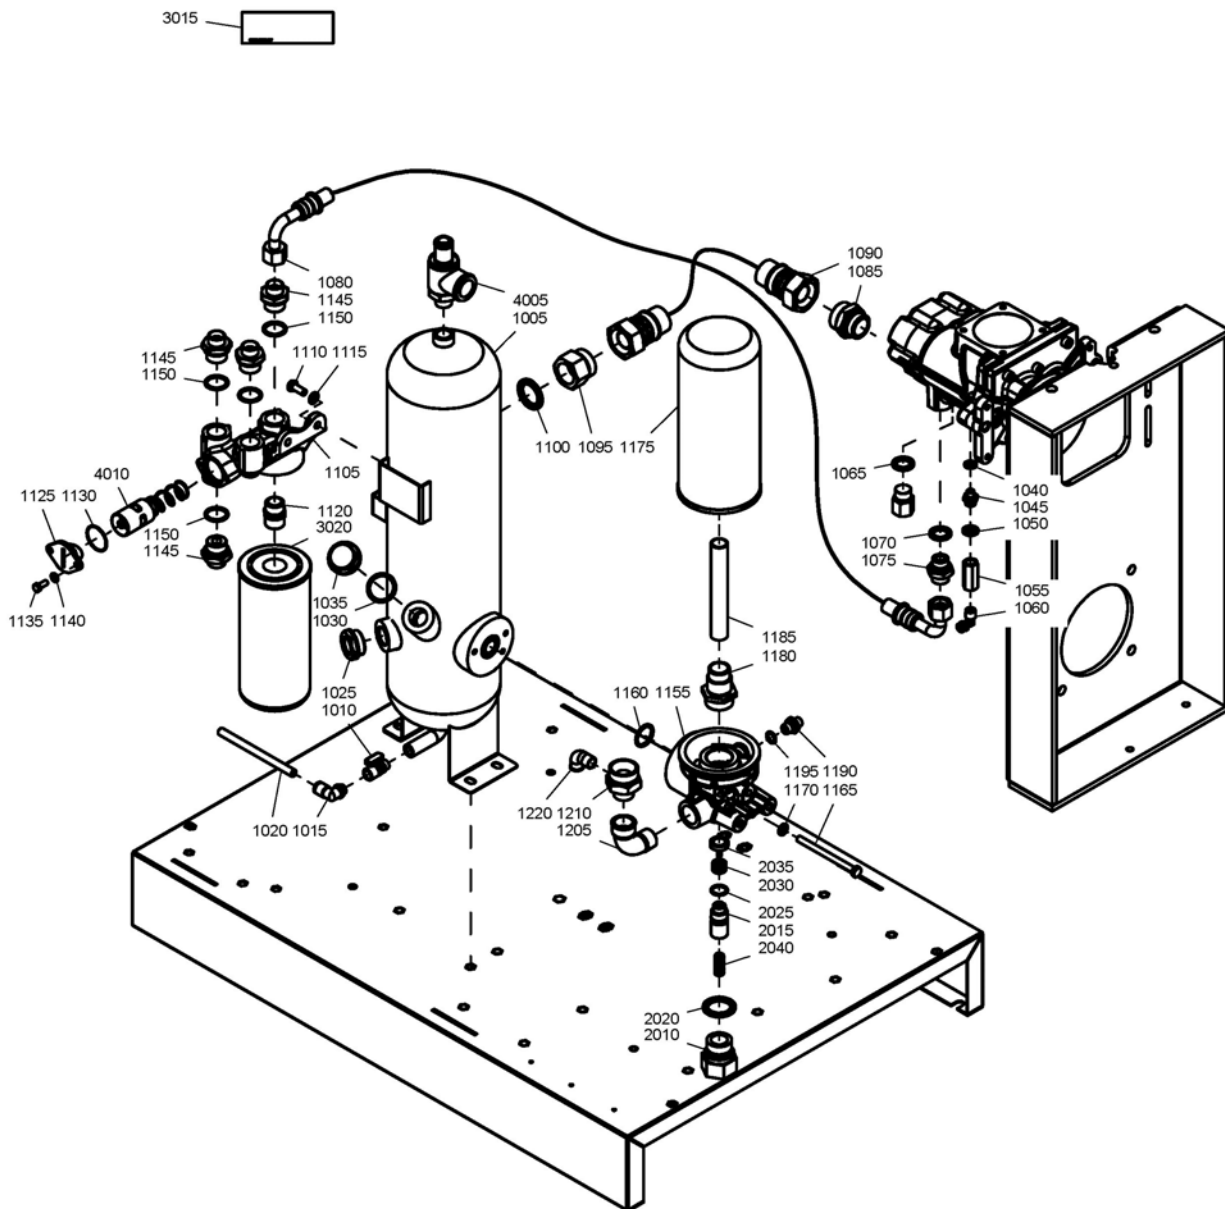


Oil system - Oil separator module

10

Ref.	Part number	Qty	Name	Remarks
1005	1092 2000 36	1	Vessel	
1010	2200 7601 30	1	Drain valve	
1015	0583 8120 22	1	Coupling	
1020	0070 6002 15	AR	Hose	
1025	1513 0167 00	1	Sight glass	
1030	0663 2102 15	1	O-ring	
1035	1202 8992 00	1	Plug	
1040	0661 1000 42	1	Seal washer	
1045	1092 0119 00	1	Nipple	
1050	0661 1000 38	1	Seal washer	
1055	0823 0050 09	1	Check valve	
1060	9740 2004 32	1	Coupling	
1065	0661 1000 39	1	Washer	
1070	0661 1000 39	1	Washer	
1075	0571 0035 96	1	Nipple	
1080	0574 9917 17	1	Hose assembly	
1085	0571 0036 01	1	Nipple	
1095	0571 0035 30	1	Nipple	
1100	0661 1000 44	1	Seal washer	
1105	1622 2728 00	1	Valve housing	
1110	0147 1323 03	2	Hexagon bolt	
1115	0301 2335 00	2	Washer	
1120	1092 0051 00	1	Nipple	
1125	1614 6118 00	1	Flange	
1130	0663 2101 95	1	O-ring	
1135	0147 1246 03	2	Hexagon bolt	
1140	0301 2321 00	2	Washer	
1145	0571 0035 97	4	Nipple	
1150	0663 2113 37	4	O-ring	
1155	1622 6199 00	1	Instrument block	
1160	0663 3128 00	1	O-ring	
1165	0147 1341 03	3	Hexagon bolt	
1170	0301 2335 00	3	Washer	
1175	1092 2002 89	1	Oil separator	
1180	1092 0099 00	1	Coupling	
1185	1622 0337 00	1	Pipe	
1190	2200 7505 84	1	Nipple	
1195	0663 3119 00	1	O-ring	
1200	2200 7505 72	1	Elbow coupling	
1205	0562 3106 03	1	Bend	
1210	1092 2000 97	1	Hexagon nipple	
	1608 1735 00	1	Minimum Pressure Valve	
1220	0560 0200 61	1	Elbow	
2010	•	1	Housing	
2015	1513 0402 01 •	1	Piston	
2020	0661 1000 60 •	1	Seal	
2025	0663 2105 40 •	1	O-ring	
2030	1513 0064 00 •	1	Spring	
2035	1513 0401 01 •	1	Valve disk	
2040	1513 0063 00 •	1	Spring	
3015	1079 9908 57	1	Label	
3020	1092 2002 88	1	Oil filter	



10

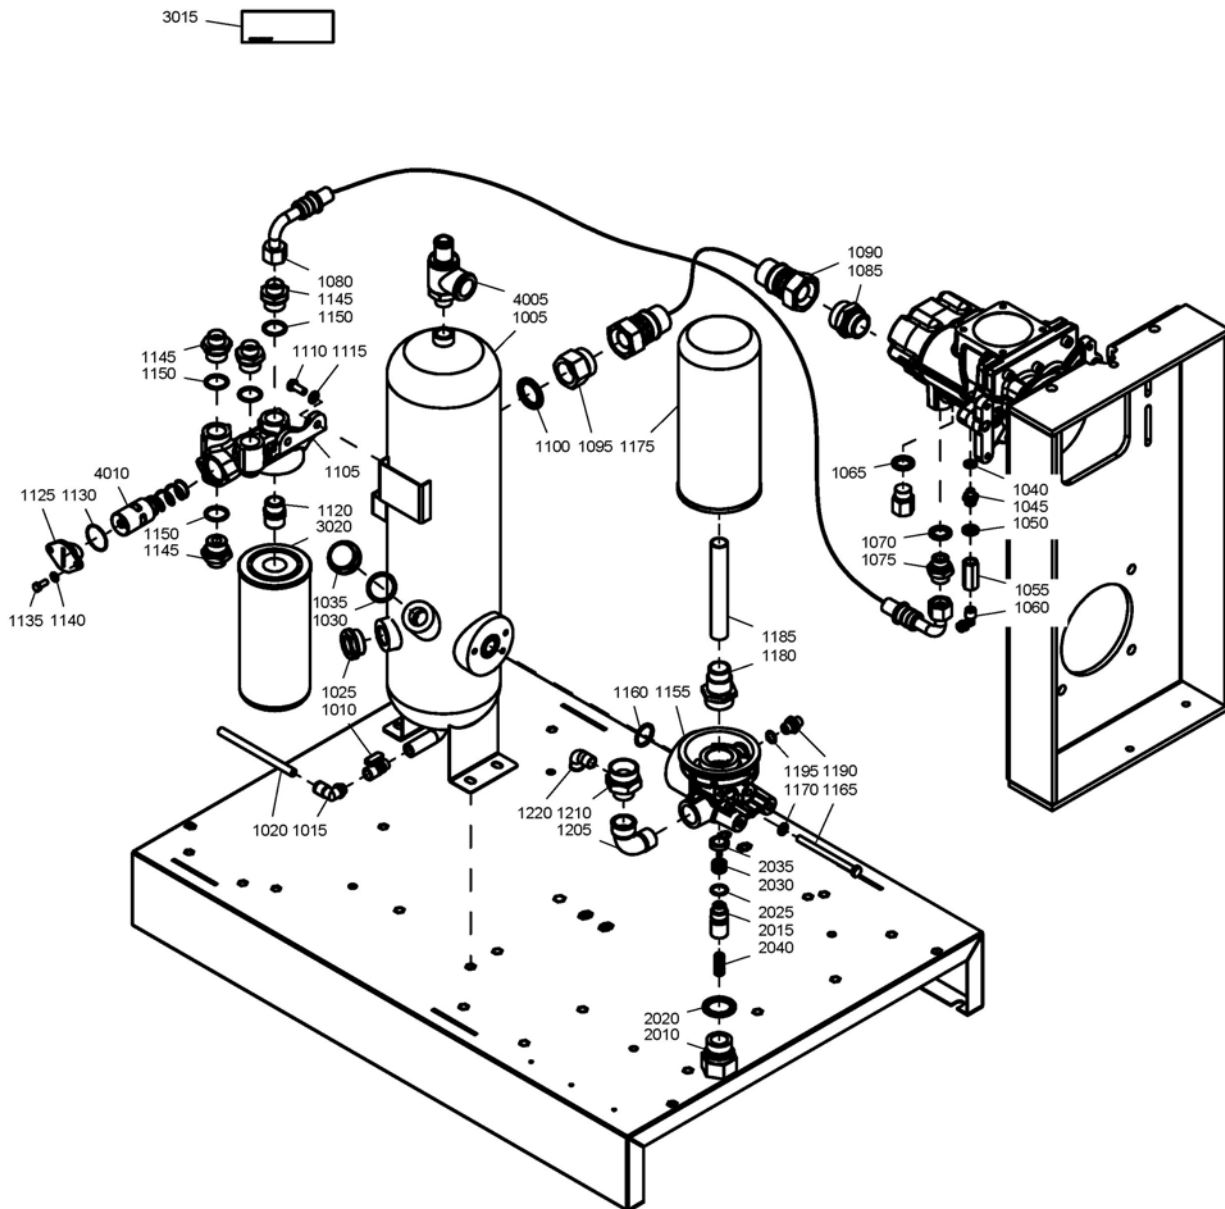


Oil system - Oil separator module

10


Ref.	Part number	Qty	Name	Remarks
4005		1	Safety valve	
	1092 0019 18		7.5bar(e)	
	1092 0019 19		8.5bar(e)	
	1092 0019 19		10bar(e)	
	1092 0019 20		13bar(e)	
4010		1	Thermostatic valve 38°C	
	1622 7064 01		GXe 7 7.5bar(e)	
	1622 7064 01		GXe 7 8.5bar(e)	
	1622 7064 01		GXe 7 10bar(e)	
	1622 7064 04		GXe 7 13bar(e)	
	1622 7064 01		GXe 11 7.5bar(e)	
	1622 7064 01		GXe 11 8.5bar(e)	
	1622 7064 01		GXe 11 10bar(e)	
	1622 7064 04		GXe 11 13bar(e)	
	1622 7064 01		GXe 15S 7.5bar(e)	
	1622 7064 01		GXe 15S 8.5bar(e)	
	1622 7064 01		GXe 15S 10bar(e)	
	1622 7064 04		GXe 15S 13bar(e)	
4015		1	Decal	
	1092 0010 79		38°C	
	1092 0010 80		60°C	

11

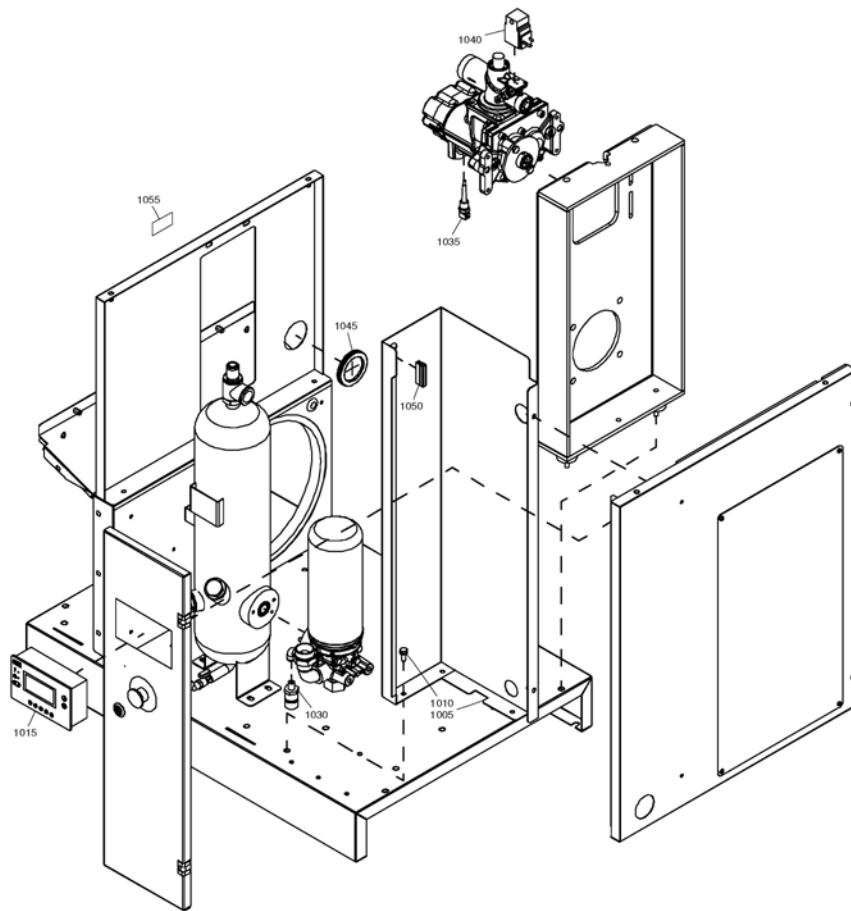

Regulating system**11**


Ref.	Part number	Qty	Name	Remarks
1005	<<< >>>	1	Cubicle	
1010	0147 1963 08	3	Hexagon bolt	
1015	1092 0056 91	1	Pullet controller	
1030	1089 0575 54	1	Pressure transducer	
1035	1089 0574 70	1	Temperature sensor	
1040	1089 0621 20	1	Solenoid valve	
1045	1088 0803 27	1	Grommet	
1050	1202 6584 00	AR	Seal	
1055	2202 2609 41	1	Label	

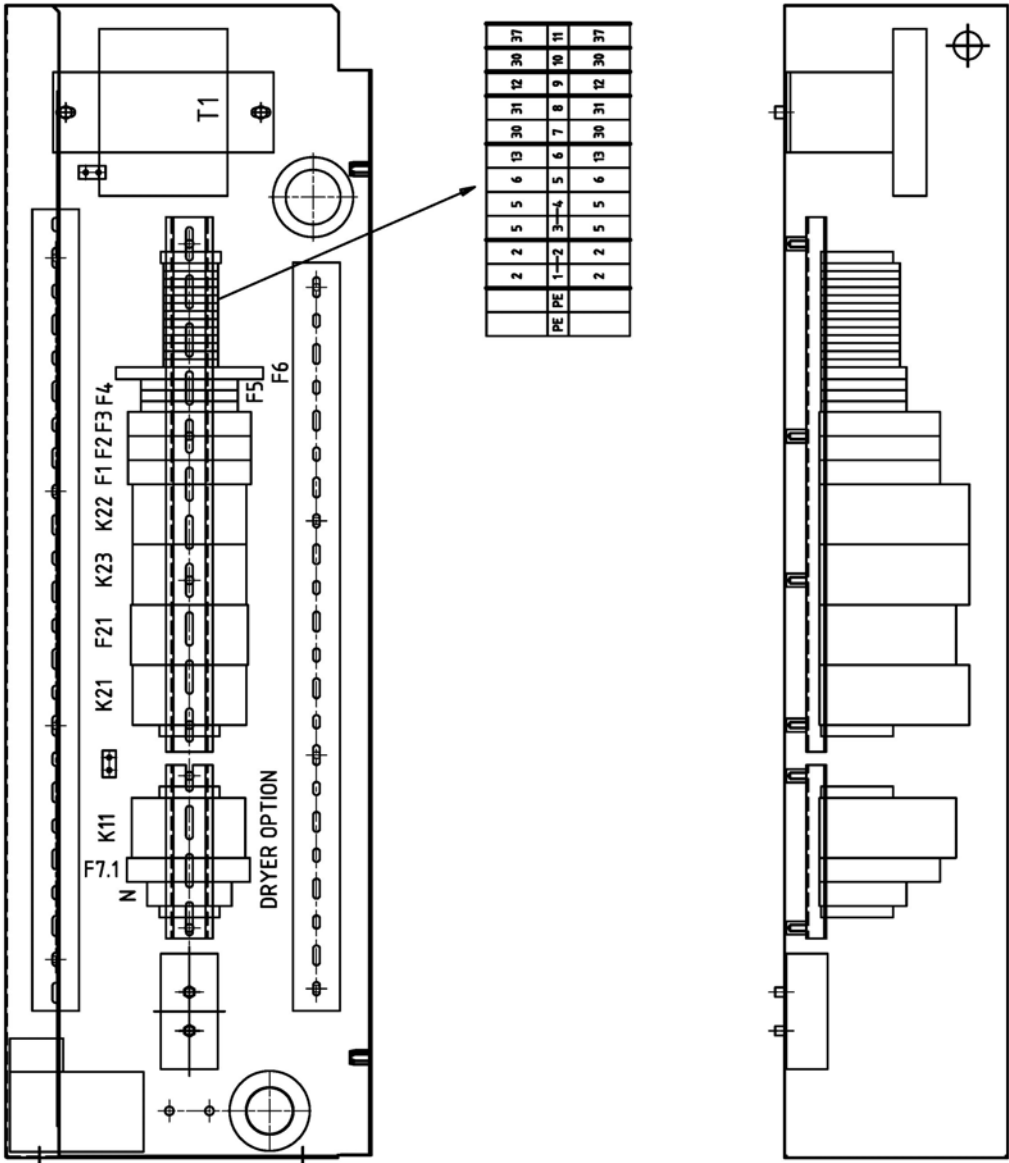

Cubicle - IEC

12

Ref.	Part number	Qty	Name	Remarks
		1	Cubicle	
	1092 0056 86		GX ^e 7	
	1092 0056 87		GX ^e 11	
	1092 0056 88		GX ^e 15S	
1010	1092 2010 00 •	1	Cable	
1020	1092 0039 48 •	AR	Mounting rail	
1030	1092 0009 02 •	2	End retainer	
1040	1092 0039 53 •	1	Data label	
1050	1092 0039 47 •	AR	Raceway	
1060	1092 0039 47 •	AR	Raceway	
1070	1092 2005 33 •	1	Label	
1080	1092 0039 30 •	10	Connector	
1090	1092 0039 31 •	3	Connector	
1100	1092 0039 32 •	2	Connector	
1110	1092 0039 56 •	2	Connector	
1120	1092 0039 49 •	1	Saddle type tie mount	
1140	1079 9901 68 •	1	Label	
1150	1079 9906 09 •	1	Label	
1160	•	1	Overload relay bracket	
	1092 2005 35		1092 0056 86	
	1092 2005 40		1092 0056 87	
	1092 2005 40		1092 0056 88	
1170	1092 0009 02 •	2	End retainer	
1180	1092 2000 60 •	1	Cubicle box	
1X0	1092 2005 34 •	1	Power-in terminal block	
1X1	1092 0009 03 •	1	Connector	
1X1	1092 0005 45 •	1	Connector	
F1 F2 F3				
	1092 0039 33 •	3	Fuse	
F1 F2 F3				
	1092 0039 23 •	3	Fuse holder	
F21	•	1	Overload relay	
	1092 2005 38		1092 0056 86	
	1092 2005 41		1092 0056 87	
	1092 2005 43		1092 0056 88	
F4 F5 F6				
	1092 0039 26 •	3	Fuse	
F4 F5 F6				
	1092 0039 25 •	3	Fuse Terminal	
K21	•	1	Contact	
	1092 2005 37		1092 0056 86	
	1092 0039 34		1092 0056 87	
	1092 0039 35		1092 0056 88	
K22	•	1	Contact	
	1092 2005 36		1092 0056 86	
	1092 2005 36		1092 0056 87	
	1092 2005 37		1092 0056 88	
K23	•	1	Contact	
	1092 2005 37		1092 0056 86	
	1092 0039 34		1092 0056 87	
	1092 0039 35		1092 0056 88	
S3	1092 2005 32 •	1	Emergency stop button	
T1	1092 2005 31 •	1	Transformer	

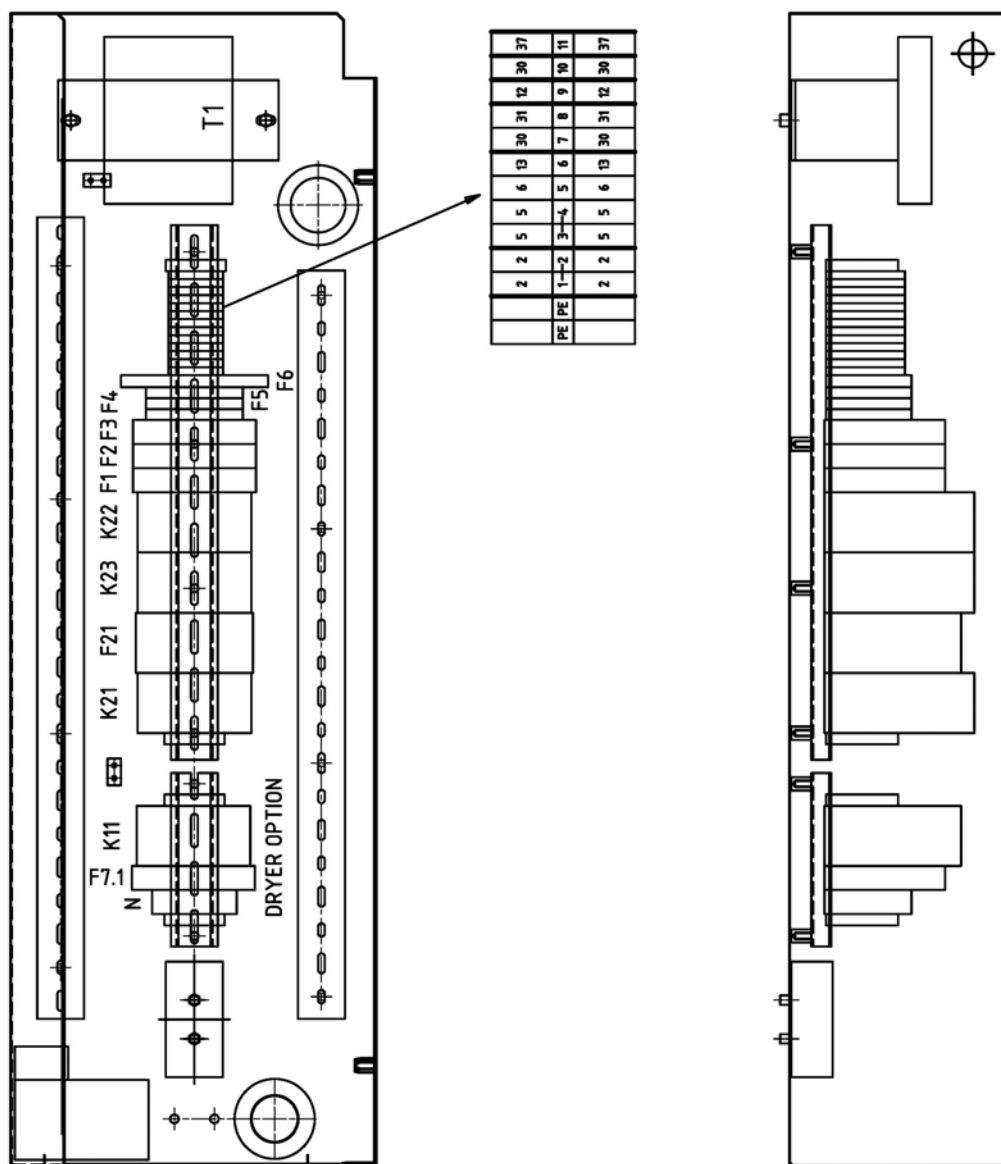


Cubicle - IEC

12

Ref.	Part number	Qty	Name	Remarks
2020	0211 1246 03	2	Bolt	
		1	Dryer module	
	1092 0057 30		GX ^e 7-FX ⁱ 5	
	1092 0057 31		GX ^e 11-FX ⁱ 7	
	1092 0057 31		GX ^e 15-FX ⁱ 7	
3010	•	1	Cable	
	1092 2005 47		1092 0057 30	
	1092 2005 50		1092 0057 31	
3020	1092 0039 48 •	AR	Mounting rail	
3030	1092 0009 02 •	2	End retainer	
1X2	1092 2005 49 •	1	Power-in terminal block	
F7.1	•	1	Fuse holder	
	1092 0039 23		1092 0057 30	
	1092 0039 76		1092 0057 31	
F7.1	•	1	Fuse holder	
	1092 0039 23		1092 0057 30	
	1092 2005 51		1092 0057 31	
K11	•	1	Contactor	
	1092 2005 48		1092 0057 30	
	1092 2005 37		1092 0057 31	

13

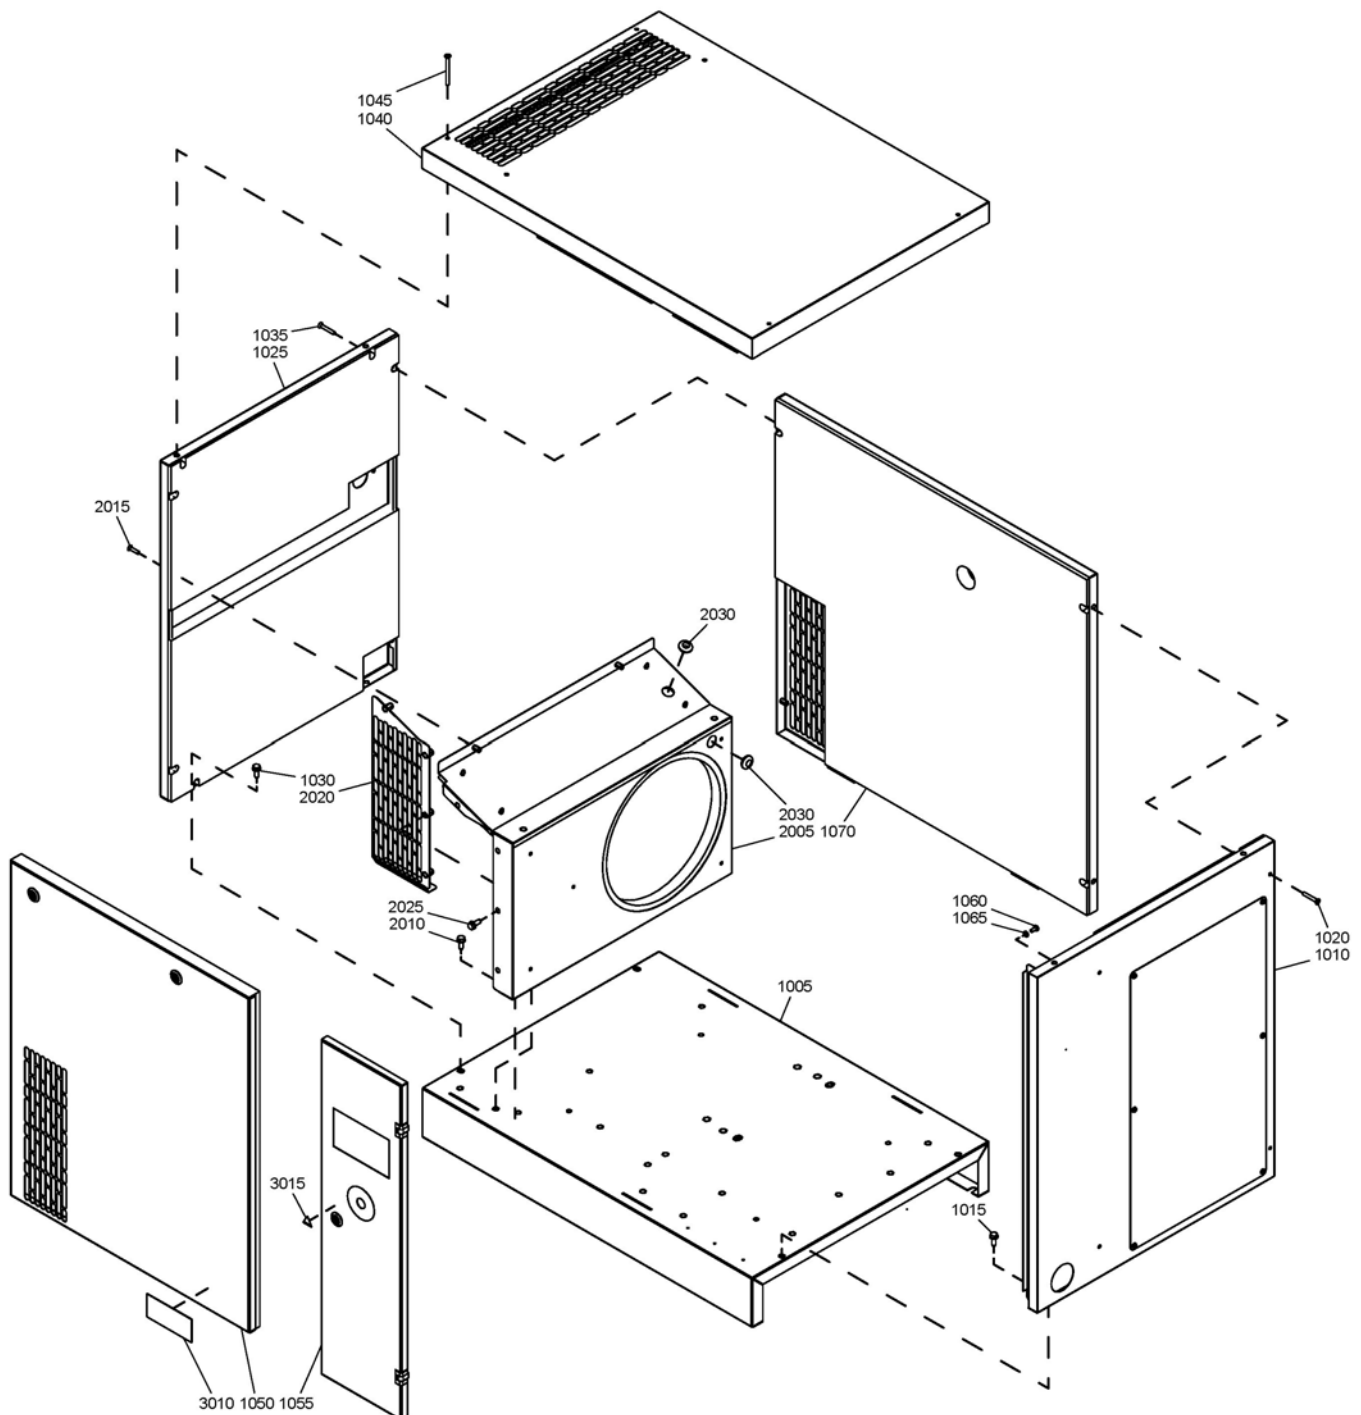


Bodywork - Compressor - Pack - Floor mounted

13

Ref.	Part number	Qty	Name	Remarks
1005	1092 2000 24	1	Frame	
1010	1092 2000 08	1	Side panel	
1015	0147 1963 08	2	Hexagon bolt	
1020	0216 1957 75	2	Hexagon bolt	
1025	1092 2000 11	1	Side panel	
1030	0147 1963 08	2	Hexagon bolt	
1035	0216 1957 75	4	Hexagon bolt	
1040	1092 2000 05	1	Roof	
1045	0216 1957 76	4	Hexagon bolt	
1050	1092 2000 19	1	Front panel	
1055	1092 2000 62	1	Door cubicle	
1060	0147 1244 03	2	Hexagon bolt	
1065	0301 2321 00	2	Washer	
1070	1092 2000 16	1	Back panel	
2005	1092 2000 30	1	Motor support	
2010	0147 1963 08	4	Hexagon bolt	
2015	0216 1249 00	2	Bolt	
2020	1092 2003 60	1	Grid	
2025	0147 1963 08	6	Bolt	
2030	0698 0153 00	2	Grommet	
3010		1	Decal	
	1092 2001 76		GX ^e 7	
	1092 2001 78		GX ^e 11	
	1092 2001 61		GX ^e 15S	
3015	1088 1001 01	2	Warning mark	

14

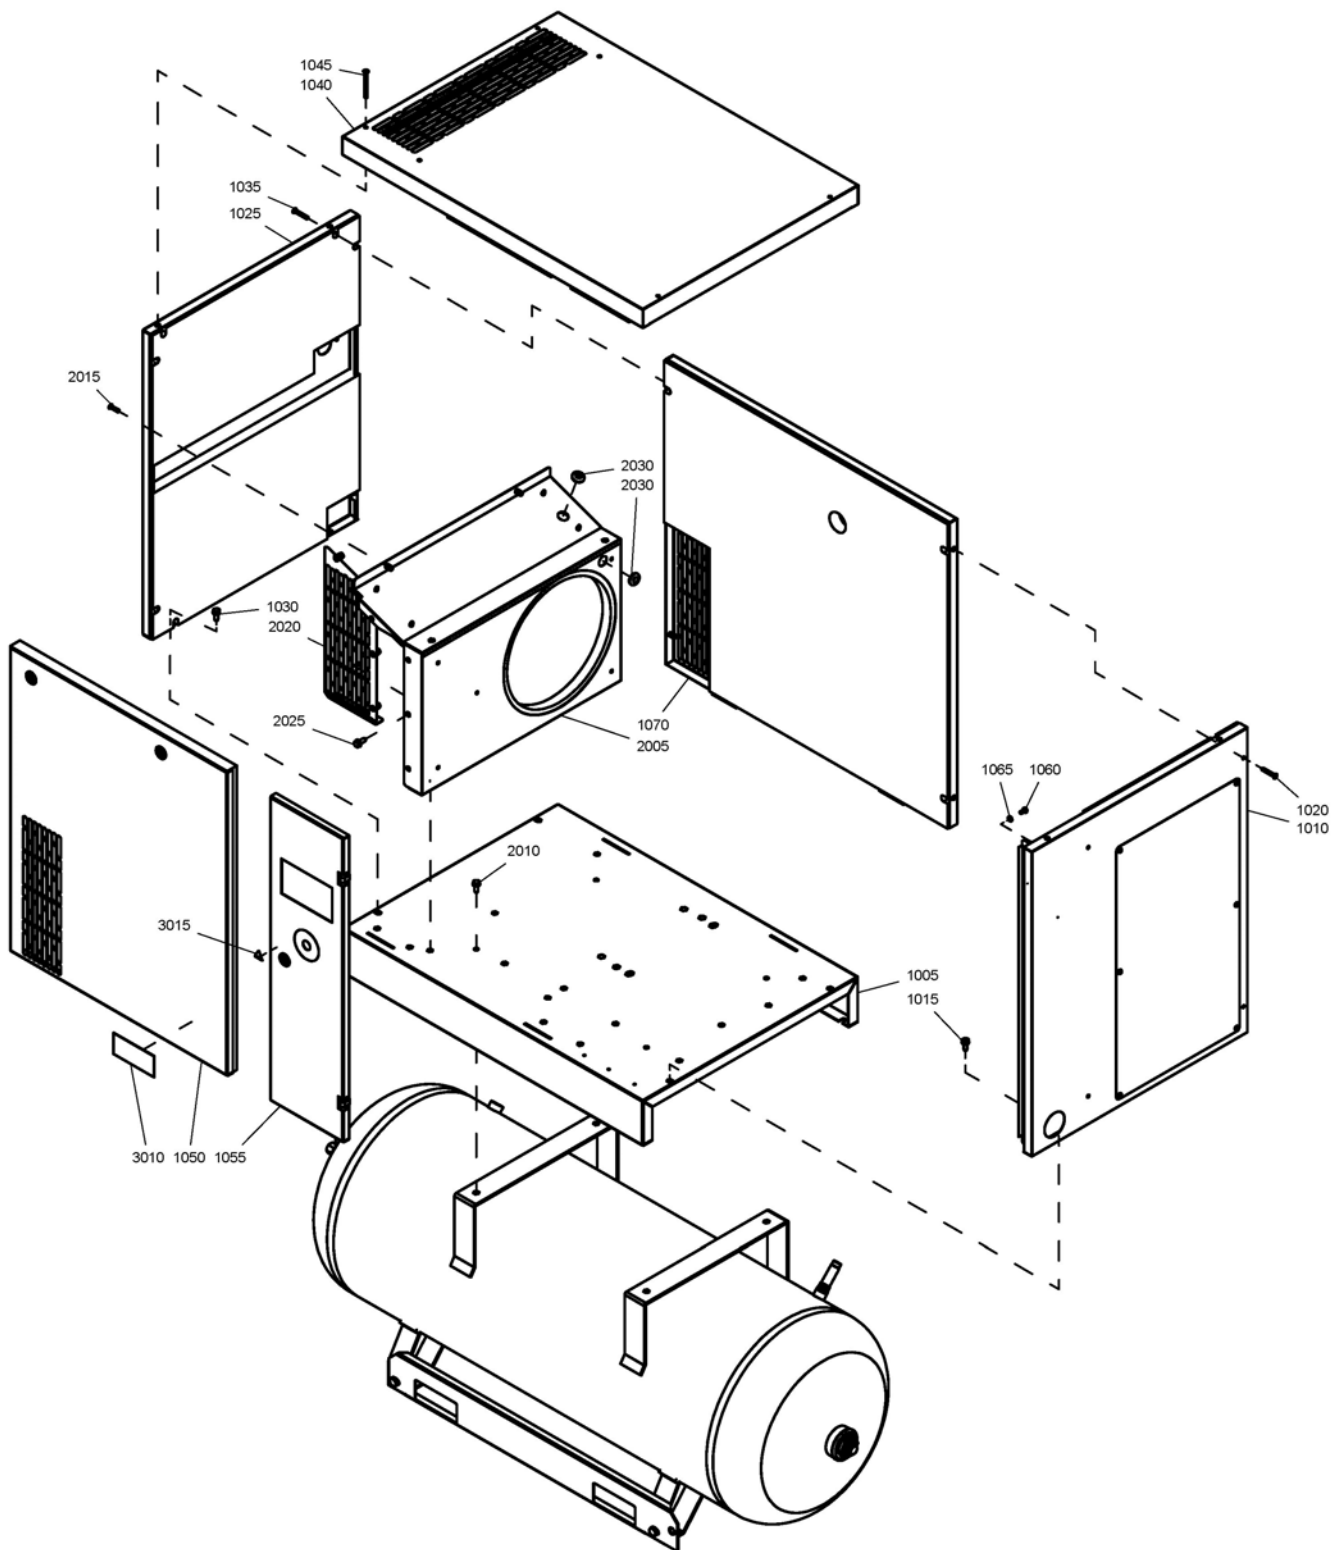


Bodywork - Compressor - Pack - Tank mounted

14

Ref.	Part number	Qty	Name	Remarks
1005	1092 2000 24	1	Frame	
1010	1092 2000 08	1	Side panel	
1015	0147 1963 08	2	Hexagon bolt	
1020	0216 1957 75	2	Hexagon bolt	
1025	1092 2000 11	1	Side panel	
1030	0147 1963 08	2	Hexagon bolt	
1035	0216 1957 75	4	Hexagon bolt	
1040	1092 2000 05	1	Roof	
1045	0216 1957 76	4	Hexagon bolt	
1050	1092 2000 19	1	Front panel	
1055	1092 2000 62	1	Door cubicle	
1060	0147 1244 03	2	Hexagon bolt	
1065	0301 2321 00	2	Washer	
1070	1092 2000 16	1	Back panel	
2005	1092 2000 30	1	Motor support	
2010	0147 1963 08	4	Hexagon bolt	
2015	0216 1249 00	2	Bolt	
2020	1092 2003 60	1	Grid	
2025	0147 1963 08	6	Bolt	
2030	0698 0153 00	2	Grommet	
3010		1	Decal	
	1092 2001 76		GX ^e 7	
	1092 2001 78		GX ^e 11	
	1092 2001 61		GX ^e 15S	
3015	1088 1001 01	2	Warning mark	

15

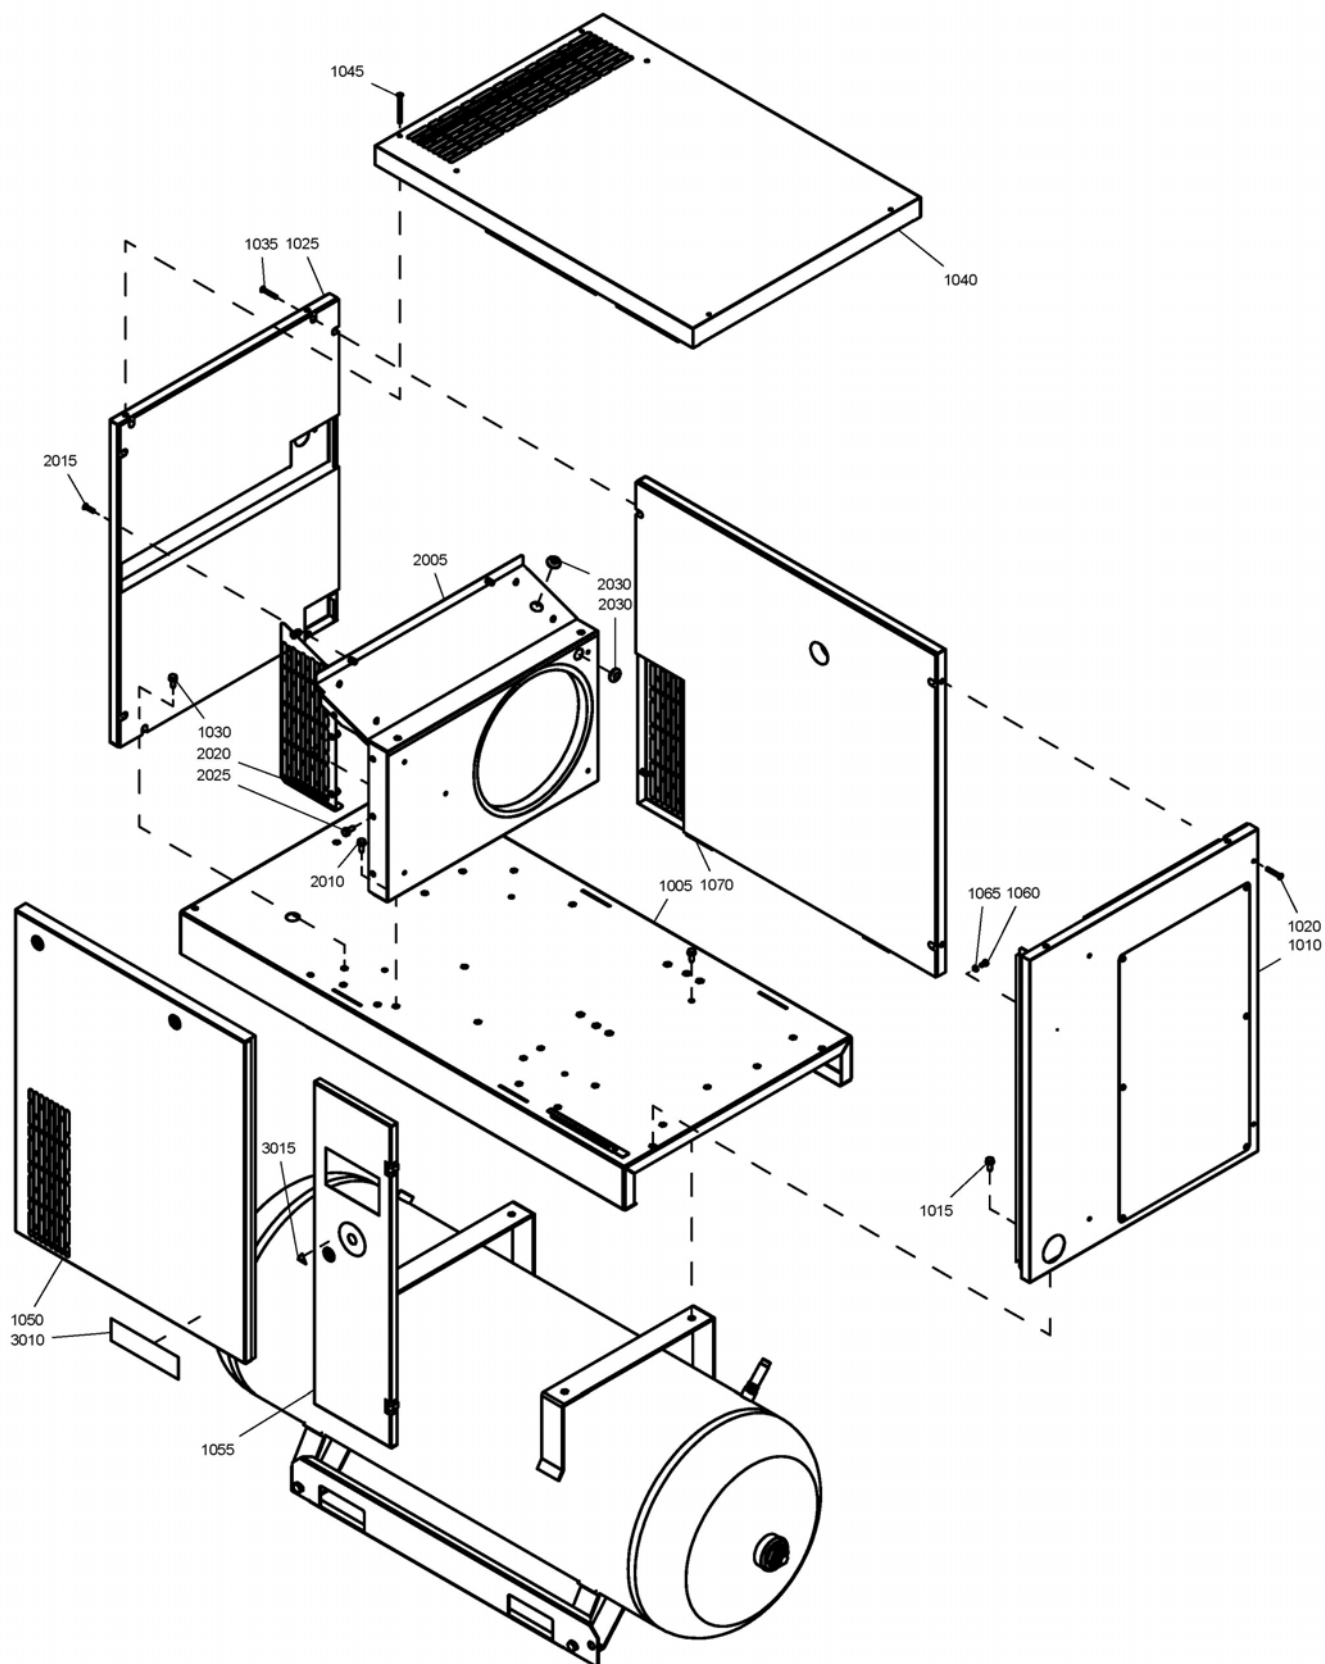

9829 3008 68-01ed00

Bodywork - Compressor - Full Feature - Tank mounted

15

Ref.	Part number	Qty	Name	Remarks
1005	1092 2001 16	1	Frame	
1010	1092 2000 08	1	Side panel	
1015	0147 1963 08	2	Hexagon bolt	
1020	0216 1957 75	2	Hexagon bolt	
1025	1092 2000 11	1	Side panel	
1030	0147 1963 08	2	Hexagon bolt	
1035	0216 1957 75	4	Hexagon bolt	
1040	1092 2003 39	1	Roof	
1045	0216 1957 76	4	Hexagon bolt	
1050	1092 2000 19	1	Front panel	
1055	1092 2000 62	1	Door cubicle	
1060	0147 1244 03	2	Hexagon bolt	
1065	0301 2321 00	2	Washer	
1070	1092 2000 16	1	Back panel	
2005	1092 2000 30	1	Motor support	
2010	0147 1963 08	4	Hexagon bolt	
2015	0216 1249 00	2	Bolt	
2020	1092 2003 60	1	Grid	
2025	0147 1963 08	6	Bolt	
2030	0698 0153 00	2	Grommet	
3010		1	Decal	
	1092 2001 77		GX ^e 7FF	
	1092 2001 79		GX ^e 11FF	
	1092 2001 62		GX ^e 15SFF	
3015	1088 1001 01	2	Warning mark	

16

Bodywork - Air dryer - Full Feature - Tank mounted - FXⁱ 5

16

Ref.	Part number	Qty	Name	Remarks
	8102 4935 77	1	Air dryer	
	<<< >>> •	1	Air dryer parts	
1020	1624 6075 22 •	1	Cover panel	
	1079 9926 55 ••	1	Label	
1030	2202 7550 00 •	1	Stirrup	
1040	2202 7436 01 •	1	Label	
1050	2202 7592 01 •	8	Plastic angle	
1060	0129 3115 00 •	8	Blind rivet	
1070	1624 6707 00 •	1	Dataplate	
	1624 6075 21 •	1	Base panel	
2010	••	1	Base panel	
2020	2202 7499 01 ••	1	Label	
2030	0690 1101 32 ••	1	House mark	
2040	1079 9923 92 ••	1	Label	
2050	1079 9901 09 ••	1	Warning mark	
3030	•	1	Label	
	2202 7000 21		FXi 5 Quality Air Solutions	
4030	1624 2217 00 •	1	On/off switch	
5130	2202 2608 91 •	1	Thermometer	


17

Bodywork - Air dryer - Full Feature - Tank mounted - FXⁱ 7

17

Ref.	Part number	Qty	Name	Remarks
	8102 4935 85	1	Air dryer	
	<<< >>> •	1	Air dryer parts	
1010	1624 6079 04 •	1	Front panel	
	2202 2603 49 ••	1	House mark	
1030	1624 6079 03 •	1	Side panel	
1060	2202 2603 50 •	1	Label	
1070	0226 3343 89 •	10	Tapping screw (frame)	
1090	1624 6707 00 •	1	Dataplate	
	1624 6079 05 •	1	Back panel	
2010	••	1	Back panel	
2020	1079 9901 09 ••	1	Decal	
2030	1079 9926 99 ••	1	Label	
3180	•	1	Label	
	2202 7000 11		FXi 7 Quality Air Solutions	
3190	2202 7436 01 •	1	Display label	
3200	2202 2608 91 •	1	Temperature gauge	
3210	1624 2217 00 •	1	On/Off switch	

18

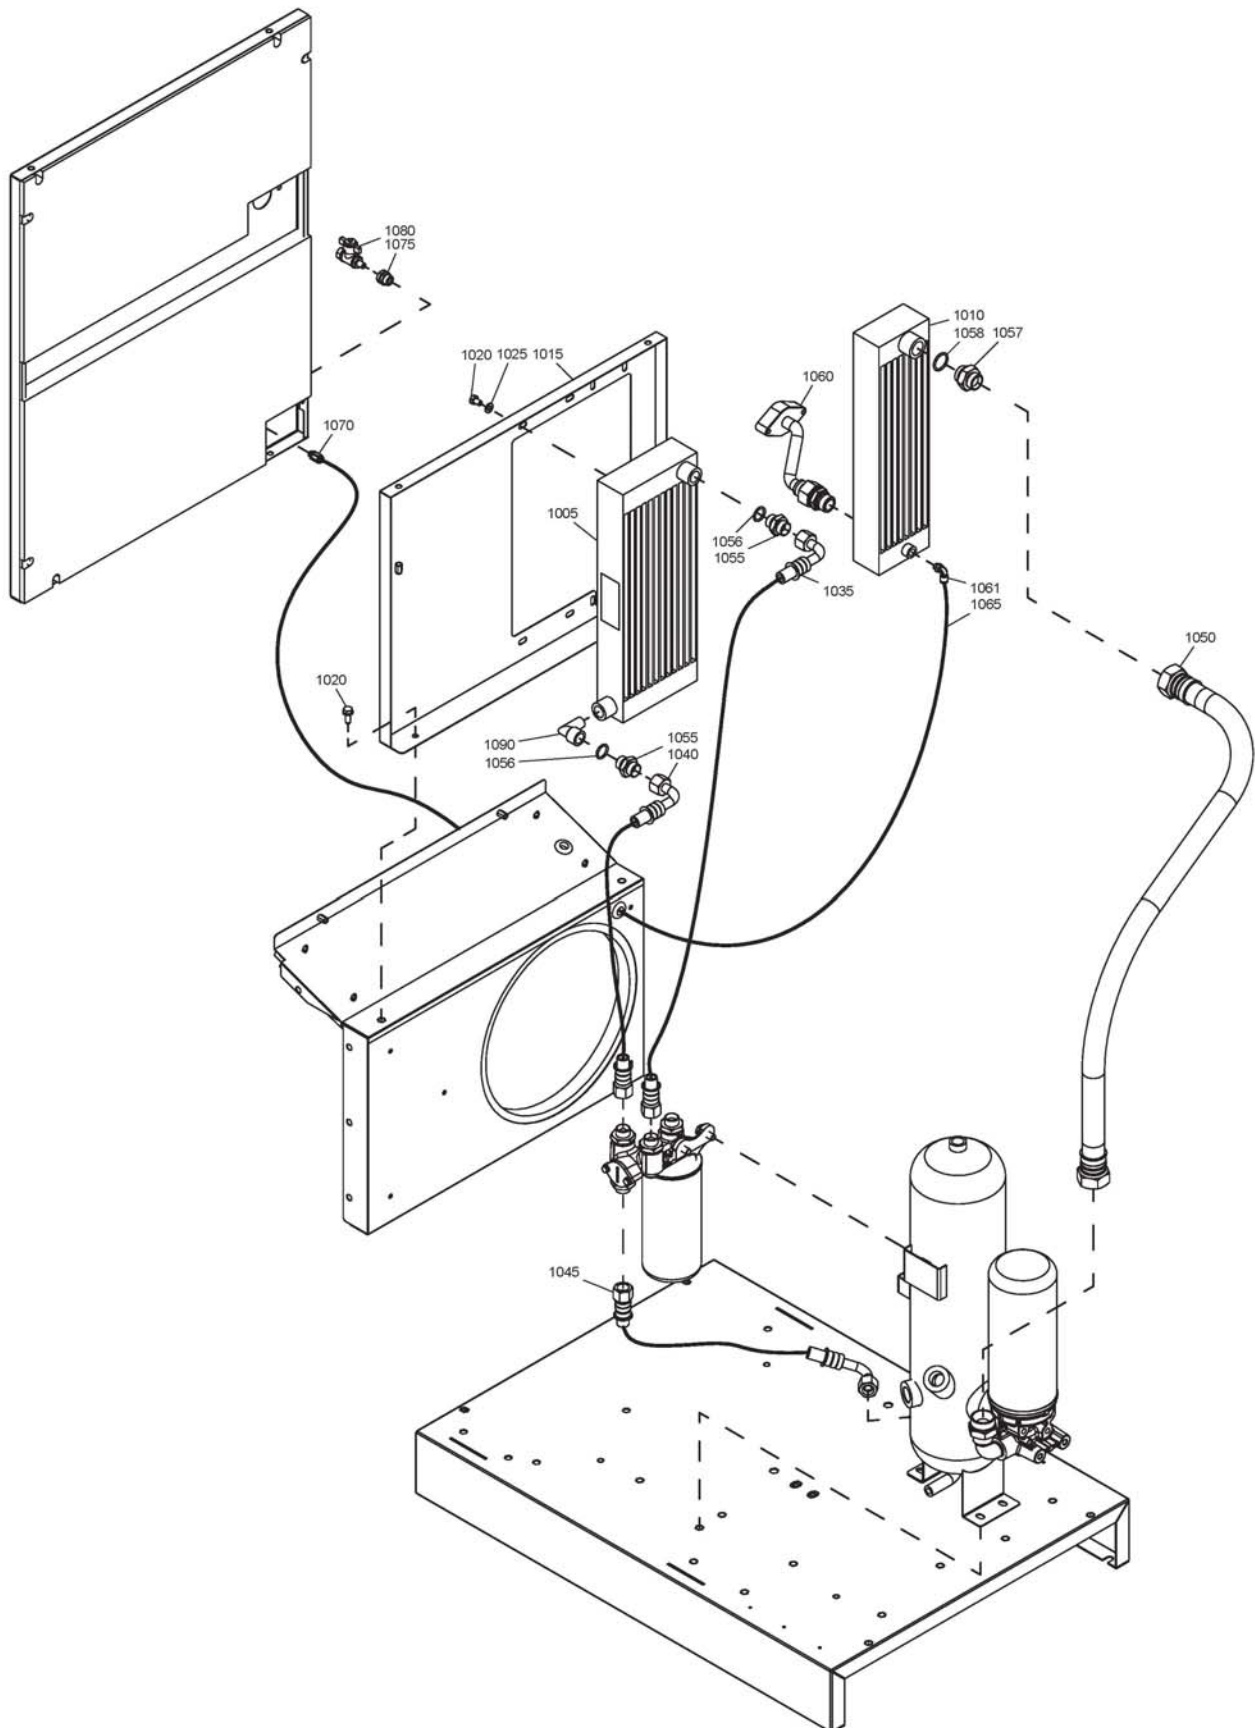

Standard option - Pack - With aftercooler

18

Ref.	Part number	Qty	Name	Remarks
1005		1	Oil cooler	
	1092 0056 73		GX ^e 7	
	1092 0056 75		GX ^e 11	
	1092 0056 77		GX ^e 15S	
1010		1	Aftercooler	
	1092 0056 74		GX ^e 7	
	1092 0056 76		GX ^e 11	
	1092 0056 78		GX ^e 15S	
1015		1	Support	
	1092 2000 66		GX ^e 7	
	1092 2000 78		GX ^e 11	
	1092 2000 55		GX ^e 15S	
1020	0147 1963 08	2	Bolt	
1025	0301 2335 00	4	Washer	
1035	0574 9911 14	1	Hose assembly	
1040		1	Hose assembly	
	0574 9911 50		GX ^e 7	
	0574 9911 17		GX ^e 11	
	0574 9911 17		GX ^e 15S	
1045	0574 9911 17	1	Hose assembly	
1050	0574 9910 30	1	Hose assembly	
1055	0571 0035 96	2	Nipple	
1056	0663 3125 00	2	O-ring	
1057	0571 0035 99	1	Nipple	
1058	0663 2113 37	1	O-ring	
1060		1	Pipe	
	1092 2001 26		GX ^e 7	
	1092 2001 35		GX ^e 11	
	1092 2001 23		GX ^e 15S	
1061	0583 8120 73	1	Elbow	
1065	0070 6002 04	AR	Plastic tube	
1070	0583 8100 66	1	Coupling	
1075	0581 0000 43	1	Coupling	
1080	0852 0010 55	1	Ball valve	
1090		1	Elbow	
	1503 2565 04		GXe 15S	

Notes:

Notes:

Notes:



In order to be First in Mind—First in Choice® for all your quality compressed air needs, Atlas Copco delivers the products and services that help to increase your business' efficiency and profitability.

Atlas Copco's pursuit of innovation never ceases, driven by our need for reliability and efficiency. Always working with you, we are committed to providing you the customized quality air solution that is the driving force behind your business.

